

## How to Remove and Replace the Centre Bearing Assembly




### Before starting ...

Make sure the lid is in the open position and remove the centre rubber hub

### What you'll need:

A pair of pliers

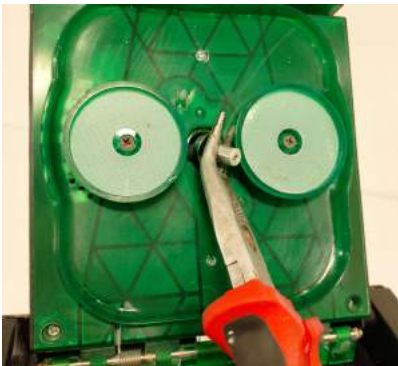

### Instructions:

Grip the shaft of the bearing assembly tightly and twist. You'll find the assembly will come away with ease.



Clean the area where the assembly will go back in to ensure a snug fit.

Push the new Bearing Assembly into the hole as far as it will go.

The benefit to replacing this is to allow the smooth running of the machine and reduce any downtime



[Watch the video](#)



These parts are available through our website [here](#)