


How to remove and replace the Orange Head Fan

Before starting ...

Ensure that the power lead is disconnected and remove the hinge cover, turntable and catch tray

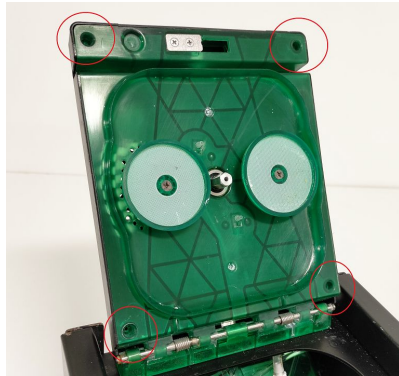

What you'll need

Small and medium phillips screwdrivers

Instruction

With the lid in the open position you need to remove the 4 screws in the recess of the green inner lid which allows you to take off the black top cover. Use the smaller screwdriver for this.



Now you can use the larger screwdriver to remove the screw in the centre of the Head Fan

You'll see there is a tapered side and a stepped side to the inner part. The tapered side the where the screw goes into.

N.B.Do not overtighten, this can crack the replacement.



The benefit of replacing these is so you can use it as an indicator to know the pad is spinning on the disc



[Watch the video](#)



[These parts are available through our website here](#)