
www.fastliftparts.com

Palletmaster HSW Frame

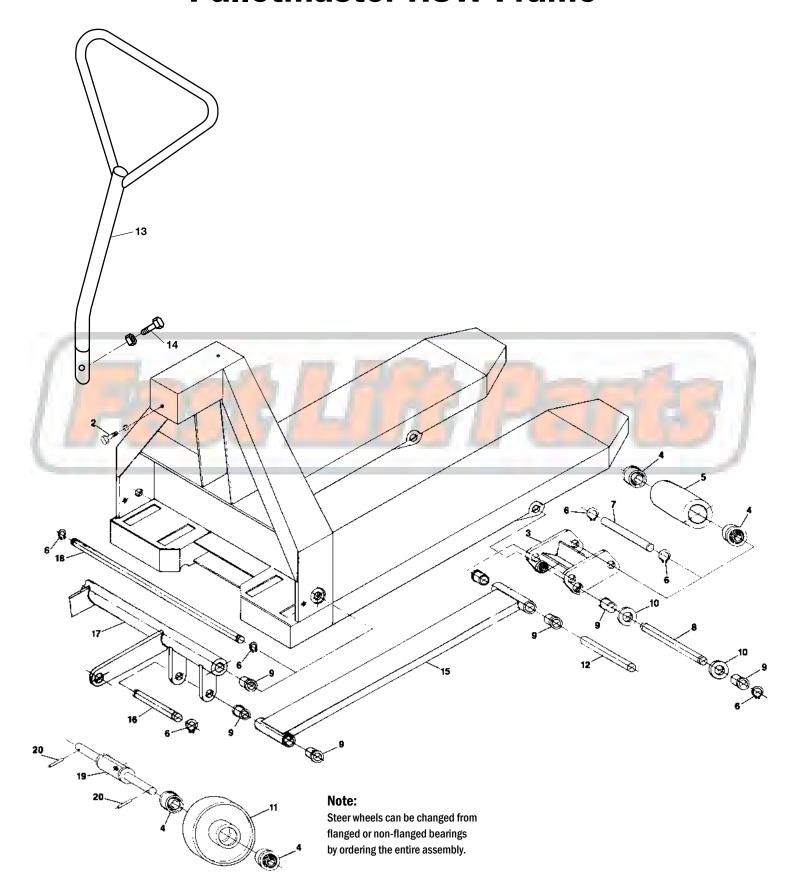

Palletmaster HSW Frame

ltei	n Part No.	Description
2	00.30	Screw and Washer
3	01.01	Load Roller Bracket with Bushings
ļ	01.03	Bearing (Newer Style, No Flange)
	01.04	Bearing (Older Style, Flanged)
	01.05-A-D	Load Roller Assembly, Red Ultra-Poly On
		Aluminum Hub W/ Bearings
	01.05-A	Load Roller Assembly, Black Ultra-Poly On
		Steel Hub W/ Bearings
	01.05-N-A	Load Roller Assembly, Nylon W/ Bearings
	01.05-A-FB	Load Roller Assembly, Red Ultra-Poly On Aluminum
		Hub W/ Bearings (Flanged Bearings)
	01.05-FB	Load Roller Assembly, Black Ultra-Poly On
		Steel Hub W/ Bearings (Flanged Bearings)
	01.07	Snap Ring
	01.08	Load Roller Axle
	01.10	Pivot Axle
	01.11	Bushing
)	01.12	Washer
L	01.13-A-HD	Steer Wheel Assembly, Red Ultra-Poly On
		Aluminum Hub W/ Bearings
	01.13-A-ST	Steer Wheel Assembly, Poly On Nylon Hub
		W/ Bearings
	01.13-N-A	Steer Wheel Assembly, Nylon W/ Bearings
	01.13-A-FB-HD	Steer Wheel Assembly, Red Ultra-Poly On Aluminum

Hub W/ Bearings (Flanged Bearings)

Item Part No.		Description		
12	01.14	Push Rod Axle		
13	01.22	Handle		
14	01.23	Handle Bolt and Nut		
15	03.00	Push Rod, 48" Forks		
16	03.07	Pin		
17	04.00	Lifting Link, 27" Wide Jack		
18	04.04	Lifting Link Shaft, 27" Wide Jack		
19	A1	Steer Wheel Axle		
20	A11	Roll Pin		
BRAKE PARTS (Below)				

Divite i / itito (Bolow)	
LB-1	Bushing
LB-2	Mounting Pin
LB-3	Snap Ring
LB-4	Threaded Eyebolt Assembly
LB-5	Locking Lever Mounting Yoke
LB-6	Locking Lever
LB-7	Spring
LB-8	Shoe Assembly
LB-8-A	Brake Shoe
LB-8-B	Hinge Bracket
LB-8-C	Shoe Spring

