
## Installation Instruction

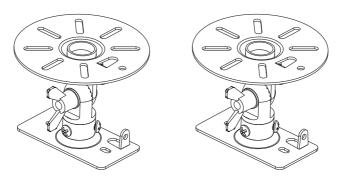

## **UNPACKING INSTRUCTIONS**

- Carefully open the carton, remove contents and lay out on cardboard or other protective surface to avoid damage.
- Check package contents against the Supplied Parts List in the next page to assure that all components were received undamaged. Do not use damaged or defective parts.
- Carefully read all instructions before attempting installation.

## **IMPORTANT SAFETY INFORMATION**

Install and operate this device with care. Please read this instruction before beginning the installation, and carefully follow all instructions contained herein. Use proper safety equipment during installation.

Please call a qualified installation contractor for help if you:

• If you don't understand these directions or have any doubts about the safety of the installation.


• If you are uncertain about the nature of your wall, consult a qualified installation contractor.


Do not use this product for any purpose or in any configuration not explicitly specified in this instruction. We hereby disclaims any and all liability for injury or damage arising from incorrect assembly, incorrect mounting, or incorrect use of this product.

Supplied Parts Lis	50	
		$\bigcirc$
(2)speaker Bracket-a	a (2)Wall plate-b	(4)Washer-c
$\bigcirc$		
(4)Lock Washer-d	(4)Butterfly Bolt-e	(2)M8 Connection Bolt-f
		CR
(2)Nut-g	(2)M8 Washer-h	(2)Butterfly Nut-i
(0) (0) (0) (0) (0) (0) (0) (0) (0) (0)		
(8)Concrete Anchor-j	(8)Lag Bolt-k	(2)Security Loop-I
	CAUTIO	N!
th in	nis Speaker mount must be e vertical wall. If the m stalled it may fall, resulti nd/or damage.	ount is not properly
Tools Required	■3.8mm Drill Bit ■Phillips Screwdriver	■8mm Masonry Bit ■Carpenter's Level
not designed for inst	g components and hardware su allations to walls with steel stud need for your installation is no	ds or to cinder block walls

Step 1

## Mounting the Wall Plate to the Wall

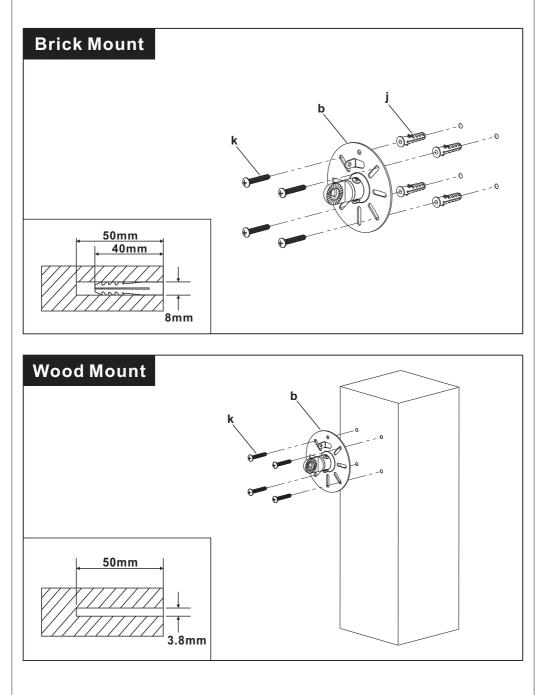

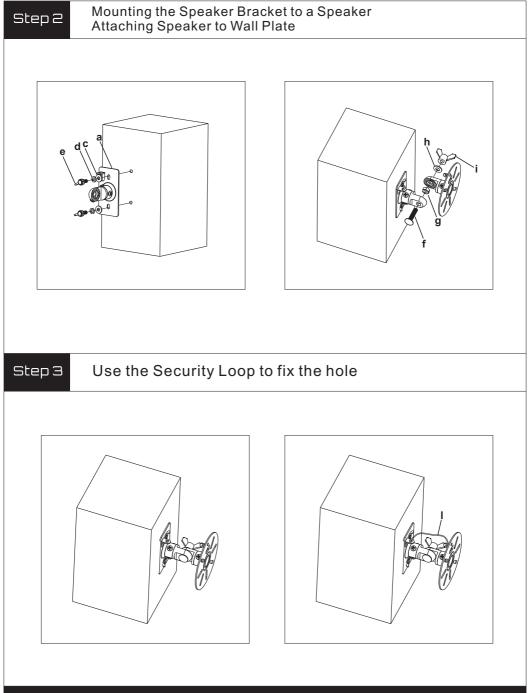

Thanks for choosing our products, enjoy the using.