



<b>FAUXWOOD - Minimum depth required for mounting in inches -</b>	
1" Signature Faux Wood	3/4"
2" Premier or Signature Faux Wood	3/4"
2" Premier or Signature Cordless Faux Wood	3/4"
2.5" Premier or Signature Faux Wood	3/4"

<b>MINI BLINDS - Minimum depth required for mounting in inches -</b>	
1" Economy Cordless	1 1/2"
1" One-Touch Cordless	1 1/4"
1" Classic	7/8"
2" Aluminum	3/4"

<b>VERTICAL BLINDS - Minimum depth required for mounting in inches -</b>	
3.5" Fabric, Faux Wood or PVC with Valance	1 3/8"

<b>WOOD BLINDS - Minimum depth required for mounting in inches -</b>	
2" Hardwood Blinds	3/4"

<b>BAMBOO &amp; WOVEN WOODS - Minimum depth required for mounting in inches -</b>	
Woven Wood Cordless	1 1/2"
Woven Wood Cordless Top-Down/Bottom-Up	2"
Wick Woven Wood Cordless	1 1/2"

<b>CELLULAR SHADES - Minimum depth required for mounting in inches -</b>	
1/2" Budget Single Cell Blackout Cordless	1 3/8"
1/2" Budget Single Cell Blackout Cordless Top-Down/Bottom-Up	1 3/8"
3/8" Budget Double Cell Light Filtering Cordless	1 3/8"
3/8" Budget Single Cell Light Filtering Cordless	1 3/16"
3/8" Budget Single Cell Light Filtering Cordless Top-Down/Bottom-Up	1 3/8"
5/8" Day/Night Single Cell Cordless	1 3/8"
7/16" Double Cell Light Filtering	1 7/8"
9/16" Classic Single Cell Blackout Cordless	1 7/8"
9/16" Classic Single Cell Day/Night Cordless	1 7/8"
9/16" Classic Single Cell Light Filtering Cordless	1 7/8"
9/16" Classic Single Cell Light Filtering Cordless Top-Down/Bottom-Up	1 7/8"
9/16" Single Cell Light Filtering	1 7/8"

<b>PLEATED SHADES - Minimum depth required for mounting in inches -</b>	
Classic Cordless	1 1/16"
Classic Cordless Top-Down/Bottom-Up	1 1/2"
Simplistic Cordless	1 1/16"
Simplistic Cordless Top-Down/Bottom-Up	1 1/2"

<b>ROLLER &amp; SOLAR SHADES - Minimum depth required for mounting in inches -</b>	
Cordless	2 1/4"
Cordless with Cassette	2 5/8"
Continuous Loop Chain	2 1/4"
Continuous Loop Chain with Cassette	2 5/8"

<b>ROMAN SHADES - Minimum depth required for mounting in inches -</b>	
Plain Fold Standard Pull-Cord	1 1/4"
Plain Fold Continuous Cord Loop	2"
Plain Fold Top-Down/Bottom-Up	2 1/2"
Soft Fold/Hobbled Standard Pull-Cord	2"
Soft Fold/Hobbled Continuous Cord Loop	2"
Soft Fold/Hobbled Top-Down/Bottom-Up	2"
European/Relaxed Standard Pull-Cord	2"
European/Relaxed Continuous Cord Loop	2"
European/Relaxed Top-Down/Bottom-Up	2"

<b>ZEBRA SHADES - Minimum depth required for mounting in inches -</b>	
Zebra Shades with Cassette	3"