 


AUSPURE KITCHEN

User Manual Electric Milk Frother

Model: MilkPure-100



CUSTOMER SUPPORT

Please contact our helpful customer support for any question.

- ⊕ www.auspure.com.au
- ✉ Support@auspure.cm.au
- 📷 [@auspure](#)

Thank You For Choosing Auspure Milk Frother!



join

Our Facebook Community

<https://www.facebook.com/auspure>



get

**Get access to our recipes for easy
and simple meals!**

www.auspures.com.au/recipes



Contact Customer Support Service

Feel free to contact us for any inquiries and
questions regarding Auspure products!

We are here and ready to assist you.

support@auspures.com.au

This user manual is protected by copyright. It is not permitted to photocopy these instructions for use or translate them into another language without the prior written consent of Auspure Australia.


Safety Instruction

Basic safety: Precaution should always be observed when using Milkpure-100.

- Do not immerse plastic part of Milkpure-100 in water or any other liquid.
- Do not allow children play with or use the Milkpure-100.
- Do not contact with moving parts, Keep hands, hair and clothes away from frothing whisk during operation.
- Do not use or place Milkpure-100 and its battery near fire or other heat sources.
- Do not operate with a damaged battery.
- Do not froth solid foods with Milkpure-100.
- Do not attempt to disassemble this device for any reason.
- Always use caution when replacing the batteries or cleaning the Milkpure-100.
- Always inspect not to use cracked, bent, or damaged device.
- Keep fingers away from the whisk while operating.

KEEP THESE IMPORTANT SAFETY INSTRUCTIONS IN
A SAFE PLACE FOR FUTURE REFERENCE

Components

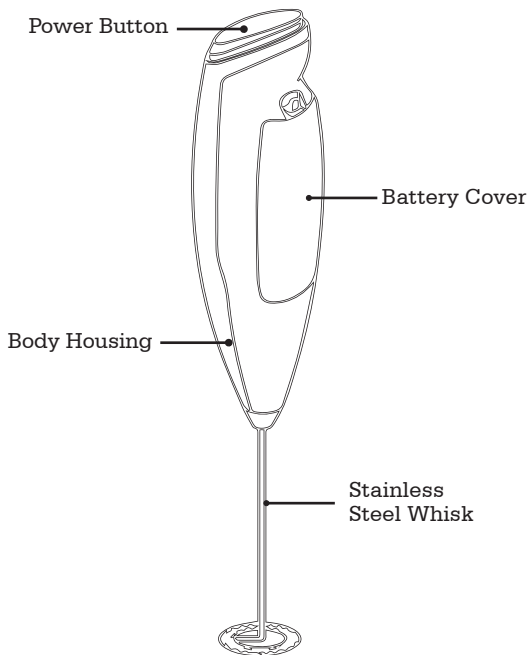

Battery Instalation

Milkpure-100 requires two AA batteries (not including in package).


- Remove battery cover by pushing down the tab and pulling it out.
- Ensure that the ribbon stays underneath for future battery removal.
- Insert the batteries appropriately and replace the battery cover back.

Note: Replace the batteries when the frother does not produce sufficient foam.

Avoid using expanded or leaked batteries.

Steps for Battery Installation


1 Battery 1

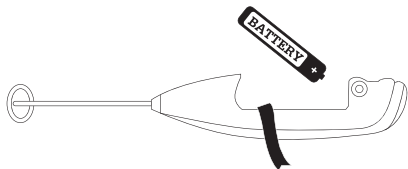

2 Battery 1 Fully inserted



3 Battery 2

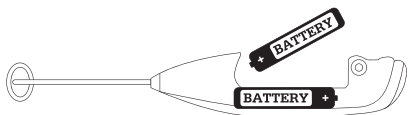

4 Battery 2 Fully inserted




How To Use

For best results It is recommended to froth the milk before adding coffee.

- Simply fill 1/3 of cup or frothing pitcher with cold or hot milk.
- Place whisk into the bottom of milk.
- Press and hold the button of Milkpure-100.
- Rotate the whisk to the bottom along the cup sides for a period of 20 second while frothing.
- Slowly raise frother up and down several times for 15-45 seconds, depending on the temperature and type of milk, until foam reach as desired.

How To Clean

- Dip whisk into hot water or place under running water and turn it on.
- Remove from water and spin again to dry.
- Do not immerse plastic part of the Milkpure-100 in water.

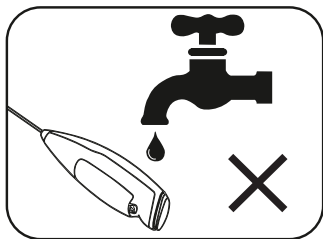

Warranty Information

Auspure Milk frother are designed and manufactured to the highest quality standards. Your milk frother covered for 2-year warranty in total, which includes 1-year standard warranty and 1-additional year from the date of original purchase.

WARRANTY INFORMATION TABLE

Product Name	Milk Frother
Model	Milkpure-100
Default Warranty	1-Year Standard Warranty
Additional Warranty	1-Year extendable warranty by simply registering to auspures.com.au/warranty within 14-day of original purchase
Purchasing Date/...../.....
Order Number	

Terms And Condition

In addition to your rights under the Auspure warranty, you are also covered by guarantees under Australian Customer Law.

The Auspure warranty is only available in Australia.

In Australia our goods come with guarantees that cannot be excluded under the Australian Customer Law. You are entitled to replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and failure does not amount to a major failure.

What Can Be Covered Under Auspure Warranty

- This warranty is valid for using your milk frother within Australia.
- The repair or replacement of your Auspure milk frother if the product defects in manufacturing. Auspure reserves the right to determine if the fault requires a replacement or repair.
- Warranties are limited to the 2 years (1-year standard and 1-additional year) from the date of original purchase.
- Packing and instructions of a defected milk frother may also be replaced if damaged.
- This warranty is valid for personal use only.

What Cannot Be Applied Under Auspure Warranty

- Using your milk frother for commercial purposes or anything other than normal domestic use.
- Using your milk frother outside of Australia.
- Accidental damage or faults caused by neglect, misuse, vandalism and abuse.
- Damage or faults caused by not following the instructions in this user manual.
- Unsupervised use by children under the age of 18.
- Repairs or alterations carried out by parties other than Auspure or an authorised agent.
- All other conditions that are not covered by Auspure warranty as listed in the “What Can Be Covered Under Auspure Warranty” section.

Additional Information on Auspure Warranty

This warranty is not transferable. Auspure is not responsible or liable for any damages, losses or inconveniences caused by product failure or accidental damage.

In addition, faults caused by not following the instructions or safety warnings contained in this user manual will not meet the Auspure compensation criterions.

Please email at: Support@auspures.com.au

With any further inquiries about Auspure warranty or to ask about making a warranty claim. You must contact us within your warranty period for your claim to be eligible.

CUSTOMER SUPPORT

Please contact our helpful customer support for any question.

 www.auspure.com.au

 Support@auspure.cm.au

 [@auspure](https://www.instagram.com/auspure)

AUSPURE
KITCHEN

Contact or Inquiries?
support@auspures.com.au
V2.0921