 


# AUSPURE KITCHEN

## User Manual

### Advanced Cafe Milk Frother

Model: AusFroth-06

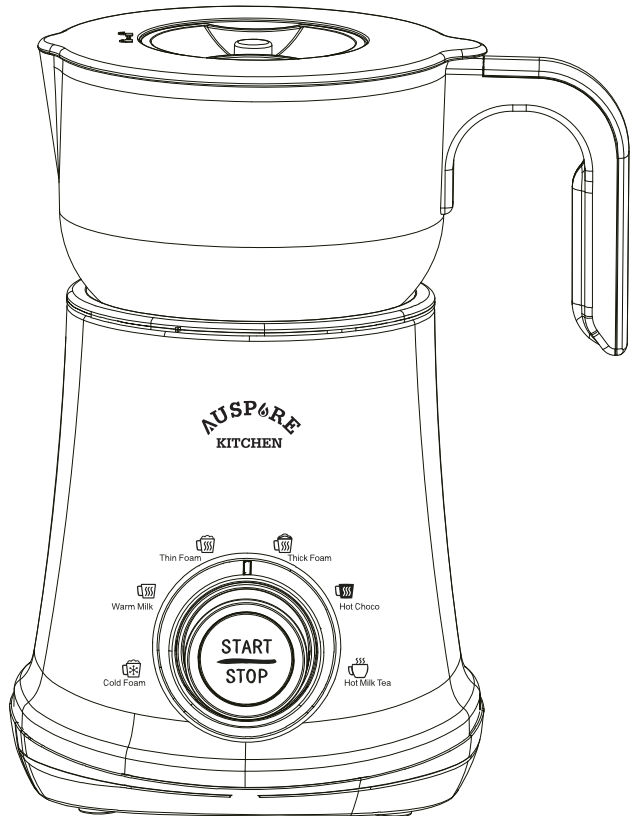

AUSPURE - SUPPORT

[www.auspure.com/au](http://www.auspure.com/au) | [support.au@auspure.com](mailto:support.au@auspure.com)

# Thank you

**Thank you for purchasing the Advance Cafe Milk Frother by Auspure Kitchen. We are committed to providing our customers with high quality products for having a reliable facilitated kitchen in their house.**

**Should you have any questions or concerns about using your Auspure products, feel free to contact our helpful customer support team at [support.au@auspure.com](mailto:support.au@auspure.com) We hope you enjoy using this product and we will be more than happy to assist our valued customers for any inquiry related to Auspure products.**

## TABLE OF CONTENTS

---

SAFETY INSTRUCTIONS	4
PARTS NAME	5
GETTING TO KNOW YOUR MILK FROTHER	6
BEFORE THE FIRST-TIME USE	7
GETTING STARTED	8
CLEANING AND CARE	14
STORAGE	14
DISPOSAL	14
TROUBLESHOOTING	15
WARRANTY INFORMATION	16
DEFECTIVE PRODUCT AND RETURN	20
AUSPURE CUSTOMER SUPPORT	20

## PACKAGE CONTENTS

---

- 1 × Auspure Milk Frother
- 1 × Stainless Steel Milk Jug
- 1 × Chocolate Cover Whisk
- 1 × Mesh Tea Infuser
- 1 × Whisk Holder
- 1 × Frothing Whisk
- 1 × User Manual
- 1 × Warranty Card

## TABLE OF SPECIFICATIONS

---

<b>Product Model</b>	AusFroth-06
<b>Product Brand</b>	Auspure Kitchen
<b>Power Supply</b>	220-240 V ~, 50/60 Hz
<b>Rated Power</b>	500 W
<b>Max Capacity</b>	0.6 L
<b>Product Weight</b>	1.5 kg
<b>Dimensions</b>	20 × 16.7 × 24.6 cm

# SAFETY INSTRUCTIONS

 
---

Please read carefully and make sure following all instructions provided in this user manual before using the product. Failure to comply with the instructions given in this user manual may result in serious injury and/or damage to you or the product.

- Before using the Milk Frother for the first time, REMOVE and DISPOSE OF all packaging material and promotional labels carefully.
- Before discarding the packaging, double-check that you have received all indicated parts.
- **MAKE SURE** power supply matches with voltage indicated on this product before use.
- **DO NOT** touch any live part of the device when it is powered on.
- Frothing which is a choking hazard, close supervision is necessary when any appliance is used by or near children. Children should be supervised to ensure that they do not play with the appliance.
- **DO NOT** place any part of product on or near gas, electric burner and in a heated oven.
- **DO NOT** let cord hang over edge of table or counter or touch the hot surface.
- **DO NOT** place the Milk Frother in a cabinet when in use.
- **DO NOT** operate the product with a damaged cord or plug, if its main cord is damaged, it must be replaced by the manufacturer, the nearest service agent or a qualified person.
- Using an accessory NOT recommended by the manufacturer for use with this appliance may result in fire, electric shock, or injury to persons.
- **DO NOT** immerse appliance, cord, or plug in water or other liquid.
- **DO NOT** place the base in dishwasher.
- **ALWAYS** unplug from outlet when not in use and before cleaning.
- To disconnect the machine from power outlet, gently grasp the plug and remove, **DO NOT** pull the cord.
- **DO NOT** use the product for other unintended purpose and place it in a dry storage.
- **DO NOT** use the Milk Frother unattended while it is operating.
- The appliance should **NOT** be operated by children **NOR** shall play with the appliance.
- **DO NOT** let children or people with reduced physical or mental capabilities to use or clean the Milk Frother.
- While operating the appliance, care should be taken to **NOT** get burned by the steam.
- **DO NOT** touch hot surface of the Milk Frother, use handles or knobs only.
- **MAKE SURE** to stand the appliance on a table or flat surface.
- **DO NOT** use cleansers, steel wool pads, or other abrasive material for cleaning the unit. When cleaning, only use a soft cloth and mild detergent.
- For reducing the risk of fire, **DO NOT** store anything directly on top of the Milk Frother when the appliance is in operation mode.
- **DO NOT** operate the appliance without full assembling of all parts.
- **DO NOT** overfill the water/milk for making tea, hot milk and chocolate from Max indication line. Also, **DO NOT** overfill the milk from max indication line for hot and cold milk foam.
- When assembling, using, or storing the milk frother, **DO NOT** put anything on top of it.
- **PLACE** the device at least 20 cm away from walls, drapes, and other heat or steam sensitive materials, with enough space above and on all sides to allow for air circulation.
- **MAKE SURE** to keep your milk frother clean at all times. Follow the cleaning instructions in this user manual.
- **DO NOT** attempt to disassemble this appliance for any reason. If your milk frother is broken or no longer functions properly, immediately discontinue use and contact customer support.
- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments
  - farm houses
  - by clients in hotels, motels, and other residential type environments
  - bed and breakfast type environments
- Misuse may cause injury.

**KEEP THESE IMPORTANT SAFETY INSTRUCTIONS IN  
A SAFE PLACE FOR FUTURE REFERENCE**

# PARTS NAME

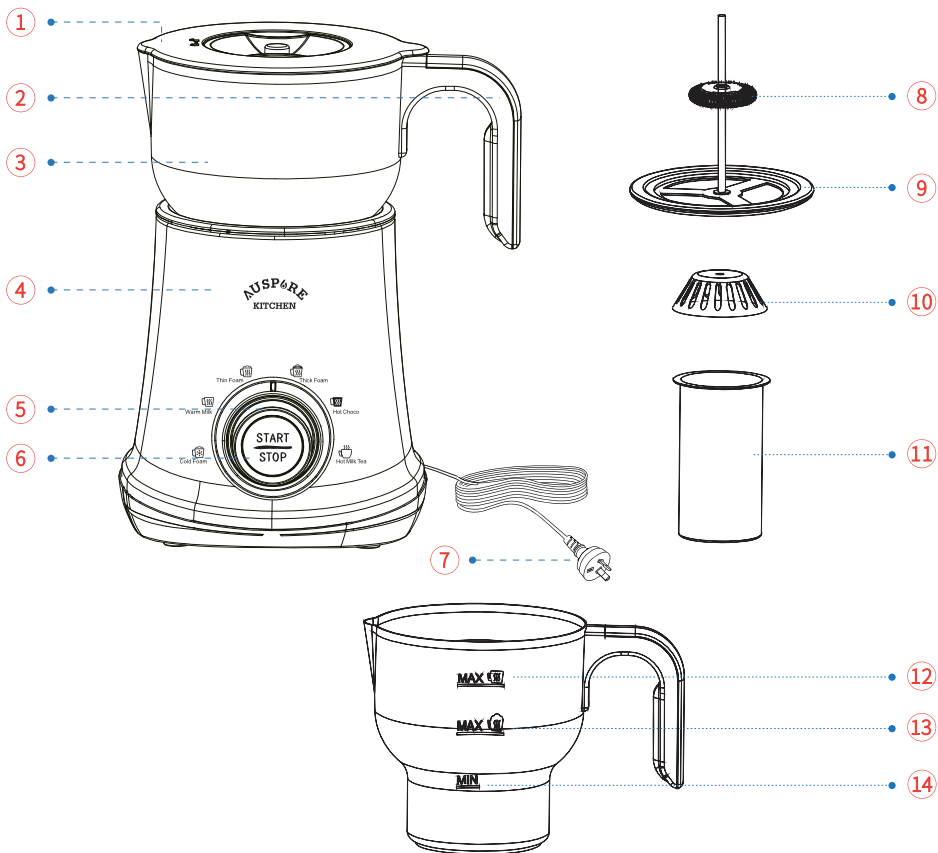

 
- |   |                          |   |  |
|---|--------------------------|---|--|
| ① | Transparent Lid          | ⑧ | Frothing Whisk                             |
| ② | Handle                   | ⑨ | Whisk Holder                               |
| ③ | Stainless Steel Milk Jug | ⑩ | Chocolate Cover                            |
| ④ | Milk Frother Base        | ⑪ | Mesh Tea Infuser                           |
| ⑤ | Function Chromed Knob    | ⑫ | MAX Level for Heating (600 ml)             |
| ⑥ | Start/Stop Button        | ⑬ | MAX Level for Frothing (300 ml)            |
| ⑦ | Power Cord               | ⑭ | MIN Level for Frothing or Heating (125 ml) |







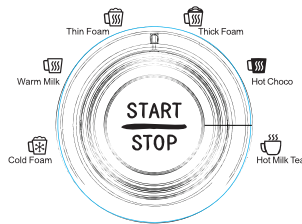


# GETTING TO KNOW YOUR MILK FROTHER

## Introduction

AusFroth-06 is an advanced and robust electric Milk Frother designed by Auspure kitchen. It is featured with six automatic settings which allows you to make warm and hot milk, hot or cold foam for frothy coffees including cappuccino and cafe latte as well as making hot tea and chocolate milk.

## Control and Settings



Whisk	Symbol	Function	Max Capacity	Temperature
		Hot thick milk foam	300 ml	55-70 °C
		Hot thin milk foam	300 ml	55-70 °C
		Cold milk foam	300 ml	No heat
		Warm milk	600 ml	45-55 °C
		Hot chocolate	600 ml	70-85 °C
		Hot milk tea	600 ml	80-95 °C

**NOTE:** The difference between hot thin and hot thick milk is the rotation speed to make different foam level.

## BEFORE THE FIRST-TIME USE

---

Make sure to remove any advertising labels and packing materials from your Auspure Milk Frother before using it for the first time.

In warm soapy water, thoroughly clean the frother jug and its lid. Wipe the outside of the appliance with a soft damp cloth and let it dry completely. Your Milk Frother is now ready for real use.

**IMPORTANT NOTE:** Do NOT put the milk frother base, power cable, or plug in the dishwasher, and Do NOT submerge them in water or other liquids.

# OPERATING YOUR AUSPURE MILK FORTHER

---

AusFroth-06 Milk Frother has six operating functions to assist providing different types of cafe style milk, chocolate, and coffee. By simply turning the position of the knob to desired option/mode, the milk will froth according to its preset setting.

## General Instructions on Operating Your Milk Frother:

1. Make sure the product is assembled well.
2. Once connected to the power source, the buzzer will beep once, and white LED will turn on. After 30-sec, if there is no setting operation, the LED light will flash for 3 seconds and 3 beeps, then the light will turn OFF.
3. It is normal to have slight smoke when using this product for the first time.
4. If you unplug or disconnect the machine from power source during operation and connect the machine again later, there will be a beep with turning on the LED light. This indicates STAND BY mode.
5. When you switch the mode during operation, it beeps once, the blue LED light turns to white, and machine stops working. For operation again, you need to press the START button after selecting a new mode.

## General Note on Milk Frothing Functions:


1. The operating time varies with the environment, milk type and initial temperature of the milk.
2. Low-fat milk and skimmed milk with too low-fat content are not suitable for milk frothing. Both pure milk and whole milk can make milk froth. Whole milk has better milk froth and lasts longer.
3. After each use, it is recommended to wait for the Milk Frother to cool fully before use.



For producing different types of milk, each of the preset option and its operation is described below:

## Hot Thick Milk Foam / Hot Thin Milk Foam

For making Hot Thick Milk Foam or Hot Thin Milk Foam, follow the steps below:

1. Make sure the frothing whisk “



The diagram illustrates the process in five stages: 1. Attaching the frothing disk to the whisk holder. 2. Inserting the whisk holder into the milk jug. 3. Selecting the desired foam type (Thick Foam or Thin Foam) on the control knob. 4. Pressing the START/STOP button to begin the process. 5. The final stage shows the finished milk foam at 65 °C, ready for use.

**NOTE-1:** The heating and stirring option will be both functioning during this operation mode to produce proper Hot Thick or Thin Milk Foam.

**NOTE-2:** The preparation time of Hot Thick or Thin Milk Foam is about 5 min and depends on temperature reaching 65 °C. Once the built-in temperature sensor detects the preset temperature, it stops frothing.

## Cold Milk Foam

For making Cold Milk Foam, follow the steps below:

1. Make sure the frothing whisk “” is properly attached to whisk holder inside the milk jug before operation.
2. Fill the jug with fresh milk up to Max level indicated for frothing (300 ml).
3. Connect the plug of milk frother to the power source according to its required standard rating power supply.
4. Turn the knob to “” Cold Milk Foam mode.
5. Press the START/STOP button, the buzzer beeps once with the blue indicator light, the motor will start to rotate.
6. The machine will end up its operation after 2 minutes and the LED light will turn into white from blue. It beeps once and the blue indicator light turns to white (STAND BY MODE).
7. After 30-sec of not using the machine, the indicator light keeps flashing for 3 seconds with beeping 3 times and then stops and light turns OFF.





**NOTE-1:** The only stirring option will be functioning during this operation mode to produce proper Cold Milk Foam. The built-in heater will not be active for this mode.

**NOTE-2:** The preparation time of Cold Milk Foam is 2 minutes. Once the preset built-in timer reads 2 minutes of operation, the frothing will end.

## Warm Milk

For making Warm Milk, follow the steps below:

1. Make sure the frothing whisk and chocolate cover “  ” are properly attached to whisk holder inside the milk jug before operation.
2. Fill the jug with fresh milk up to Max level indicated for heating (600 ml).
3. Connect the plug of milk frother to the power source according to its required standard rating power supply.
4. Turn the knob to the “  ” Warm Milk mode.
5. Press the START/STOP button, the buzzer beeps once with the blue indicator light, the motor and heater will start to work.
6. Once the temperature reaches 50 °C the machine ends operation. It beeps once and the blue indicator light turns to white (STAND BY MODE).
7. After 30-sec of not using the machine, the indicator light keeps flashing for 3 seconds with beeping 3 times and then stops and light turns OFF.






**NOTE-1:** The heating and stirring option will be both functioning during this operation mode to produce proper Warm Milk.

**NOTE-2:** The chocolate cover whisk should be used for this function along with frothing whisk to prevent the milk producing foam.

## Hot Chocolate

For making Hot Chocolate, follow the steps below:

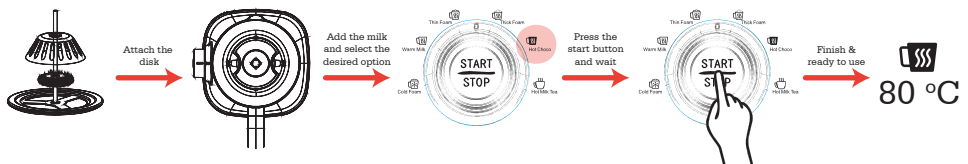

1. Make sure the frothing whisk and chocolate cover “” are properly attached to whisk holder inside the milk jug before operation.
2. Fill the jug with fresh milk up to Max level indicated for heating (600 ml).
3. Connect the plug of milk frother to the power source according to its required standard rating power supply.
4. Turn the knob to the “” Hot Chocolate mode.
5. Press the START/STOP button, the buzzer beeps once with the blue indicator light, the motor and heater will start to work.
6. During operation, add the desired amount of coca powder, then put in the lid and let the liquid immersed the coca powder or chocolate pieces and to melt and produce fresh Hot Chocolate.
7. Once the temperature reaches 80 °C the machine ends operation. It beeps once and the blue indicator light turns to white (STAND BY MODE).
8. After 30-sec of not using the machine, the indicator light keeps flashing for 3 seconds with beeping 3 times and then stops and light turns OFF.




**NOTE:** The heating and stirring option will be both functioning during this operation mode to produce proper Hot Chocolate drink.

## Hot Milk Tea

For making Hot Milk Tea, follow the steps below:

1. Make sure the frothing whisk, chocolate cover, and mesh tea infuser “” are properly attached to whisk holder inside the milk jug before operation.
2. Fill the jug with fresh milk up to Max level indicated for heating (600 ml).
3. Connect the plug of milk frother to the power source according to its required standard rating power supply.
4. Turn the knob to “” Hot Milk Tea mode.
5. Press the START/STOP button, the buzzer beeps once with the blue indicator light, the motor and heater will start to work.
6. During operation, add the tea leaves in the tea making accessory. And then put in the lid and let the liquid immersed the tea leaves producing fresh Hot Milk Tea.
7. Once the temperature reaches 90 °C the machine ends operation. It beeps once and the blue indicator light turns to white (STAND BY MODE).
8. After 30-sec of not using the machine, the indicator light keeps flashing for 3 seconds with beeping 3 times and then stops and light turns OFF.

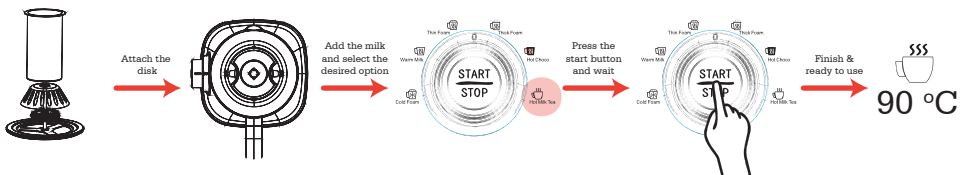

**NOTE:** The heating and stirring option will be both functioning during this operation mode to produce proper Hot Milk Tea.

## CLEANING AND CARE

---



Care should be taken for last longing and perfect operation of your Auspure Milk Frother.

Both the milk jug and frothing whisk should be cleaned immediately after each use to prevent build-up of milk residue. For safe cleaning follow the instructions below:

1. Unplug the power cord from the power outlet before cleaning.
2. To avoid the risk of electric shock, do not clean the base or the power cord with water and do not immerse them.
3. The milk jug and frothing whisk will be hot immediately after use, so carefully remove the milk jug from the power base and fill with tap water. Once the milk jug and frothing whisk have cooled completely, remove the frothing whisk and rinse OFF any milk in warm water.
4. Wash the milk jug, jug lid, and frothing whisk in warm soapy water.
5. Rinse and dry them thoroughly.
6. Store the cleaned milk jug, jug lid, and frothing whisk in safe place away from children.
7. The milk jug, lid and frothing whisk are dishwasher safe.

## STORAGE

---



If not using your Milk Frother for an extended period of time, the following points must be considered for safe storage.

- Turn OFF the machine and then unplug from the power outlet.
- Follow the instructions on “CLEANING AND CARE” section to clean the unit and ready for storage.
- Store in a dry and safe place in upright position.
- Do not store anything on the top of the Milk Frother.

## DISPOSAL

---



- To prevent possible harm to the environment or human health from uncontrol waste disposal, separate the unneeded Milk Frother and its related accessories from other types of wastes.
- Ask your local council where to dispose of your Milk Frother and its related accessories.
- You should not throw your Milk Frother and its related accessories away with the daily normal household waste.

# TROUBLESHOOTING

	<b>PROBLEM !</b>	<b>POSSIBLE CAUSE &amp; SOLUTION ✓</b>
1	<b>Milk Frother cannot be turned on!</b>	Ensure that the appliance is plugged properly into a functioning outlet.
2	<b>Milk is not foaming!</b>	<p>Milk might be too hot to foam.</p> <ol style="list-style-type: none"> <li>1. Use the milk at refrigerator temperature.</li> <li>2. Do not use low-fat milk and skimmed milk. Whole milk has better milk froth and its foam last longer.</li> <li>3. Do not re-foam already heated milk.</li> <li>4. Try to reduce the quantity of milk in the milk jug.</li> </ol>
2	<b>Milk is not heating!</b>	<ol style="list-style-type: none"> <li>1. Ensure the milk jug is correctly positioned onto the power base.</li> <li>2. Ensure that the Milk Frother has been properly turned on.</li> </ol>
2	<b>Frothing whisk is not moving or is dislodged!</b>	<ol style="list-style-type: none"> <li>1. Frothing whisk might not placed correctly.</li> <li>2. The frothing whisk might have been taken out while working.</li> <li>3. Ingredients might have been added too quickly. <ul style="list-style-type: none"> <li>• Stop operation</li> <li>• Remove liquid from milk jug.</li> <li>• Place the frothing whisk inside the milk jug before turning on the milk frother.</li> <li>• Refill the milk jug with liquid.</li> <li>• Start frothing.</li> <li>• Add ingredients (if desired) slowly and in small quantities after milk has already started frothing.</li> </ul> </li> </ol>

# WARRANTY AND DISCLAIMER FOR PRODUCTS

---

Auspure Kitchen products are designed and manufactured to the highest quality standards. Your milk frother is covered for parts and labour for 2 years, which includes 1 year standard warranty and 1-additional year upon registration (free of charge within 14 days) from the date of purchasing.

Product Name	Auspure Kitchen Advanced Cafe Milk Frother
Model	AusFroth-06
Default Warranty	1-Year Standard Warranty
Additional Warranty	1-Year extendable warranty by simply registering to <a href="http://www.auspure.com/au">www.auspure.com/au</a> within 14-day of original purchase
Purchasing Date	...../...../.....
Order Number	
Purchasing Store	

This warranty and disclaimer applies to all products purchased via the website [www.auspure.com/au](http://www.auspure.com/au) (hereinafter "Products") or a third party seller authorised by Auspure.

**Note:** When the product is purchased from an authorised third party seller, for warranty claim, return and replacement of a defective product, the inquiry should be lodged via the related third party seller.

## (1) Warranty Against Defects

### 1.1 For Brand-new Products:

We provide a 12-month standard warranty against defects with the Products, from the date of purchase.

We provide an optional additional free 12-month extended warranty against defects with the Products (resulting in a 24-month warranty against defects with the Products, from the date of purchase).

In order to claim the additional 12-month extended warranty, you must register your Product (free of charge) online at [www.auspure.com/au](http://www.auspure.com/au), within 14 days of the date of purchase. While registration, make sure that the related data entry including the date of purchasing are accurate.



In the event of a defect with the Product, you may be entitled to have the Product replaced. In order to be entitled to a replacement Product, you must:

- immediately stop using the Product; and
- notify us of the defect during the warranty period.

In order to claim a replacement Product, you must contact us using the details at the CUSTOMER SUPPORT section, to notify us of the defect, providing your proof of purchase and warranty registration confirmation as well as your contact details.

You may either:

- return the product for our further investigation; or
- send us a video of the defective Product, which demonstrates to our reasonable satisfaction that the Product is defective and undertake to safely dispose the defective Product. For safety reasons you must not continue to use the defective Product.

Upon receipt of the defective Product, or a video of the defective Product, we will inspect it. If the defect is the result of a manufacturer fault, we will determine if the fault requires a replacement or repair and either send you a replacement Product or effect a repair.

This warranty against defects is in addition to any other rights and remedies to which you may be entitled under Australian law.

To Clarify:

**What is covered by the warranty:**

- The repair or replacement of your Auspure product (at Auspure's discretion) if the product is found to be defective due to faulty manufacture. Auspure reserves the right to determine if the fault requires a replacement or repair.
- Packaging and instructions of a faulty product may also be replaced if damaged.
- This warranty is valid for using your personal use of your device within Australia only.

**What is not covered by the warranty:**

- Using the products for commercial purposes, or anything other than normal domestic personal use.
- Use of the product outside Australia.
- Accidental damage or faults caused by negligence, misuse, vandalism or neglect.
- Damage or faults caused by not following the instructions in the user manual.
- Unsupervised use by children under the age of 18.
- Repairs or alterations carried out by parties other than Auspure or an authorised agent.
- Any other conditions not listed above, are not covered by Auspure warranty.

## **1.2 For Renew Products:**

A renew Product, which is purchased from a seller that is authorised by Auspure, is only covered under six months warranty and is not eligible for the free warranty extension.

## **1.3 For Replacements:**

Replacement of a brand-new Product is only covered by the one-year standard warranty from the date of replacement arrangement and is not eligible for the one-additional year free warranty extension.

Replacement of a renew Product that is purchased from a seller and is authorised by Auspure is only covered by six months warranty from the date of replacement arrangement and is not eligible for the free warranty extension.

## **(2) Australian Consumer Law**

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

## **(3) Disclaimer**

You are solely responsible for evaluating the Product and determining whether it is fit for your purpose.

You acknowledge and agree that Product is not safe for use by children.

You acknowledge and agree that working with the Product is dangerous and carries the risk of electric shock, burns, lacerations, other injuries and death.

You acknowledge that you use the Product at your own risk and that you are responsible at all times for evaluating whether or not it is safe to use the Product.

## **(4) Limitation of Liability**

In addition to the requirements set out in clause 1 of this warranty and disclaimer document, the warranty provided under that clause will not apply:

- if a defect with the Product results in any way from some act or omission by you in relation to the appropriate care, maintenance and/or use of the Product; or
- if a defect with the Product results from ordinary wear and tear; or
- if you fail to follow our or the manufacturer's instructions for care, maintenance and/or use of the Product; or
- if you are unable to provide proof of purchase.

Except as otherwise provided by law, we accept no liability for any loss, damage or injury which may arise in any way from the use of the Product by you or by any other person.

Except as otherwise provided in this warranty and disclaimer, to the maximum extent permitted by law, we exclude all conditions and warranties implied by custom, law or statute, and we expressly disclaim all warranties of any kind including but not limited to implied warranties that the Product is fit for a particular purpose.

You hereby agree that we are not liable for any direct, indirect, consequential or incidental loss or damage which may result from your use of the Product.

Except as otherwise provided by law or as otherwise set out in this warranty and disclaimer, our liability to you shall be limited to the cost of replacement of the Product, together with your reasonable costs of postage and/or delivery in connection with your returning of the Product.

## **(5) Indemnity**

You agree to defend, indemnify and hold us and our officers, directors, employees, contractors, members, agents and licensees harmless from and against any and all claims, charges, actions, liabilities, investigations, demands and similar including but not limited to any costs, losses, damages whether direct, indirect, consequential or special and all legal fees resulting from your use of the Product, including but not limited to any third party claims.

## DEFECTIVE PRODUCTS AND RETURNS

---

Proved defective product meeting the specified warranty period, should be contacted Customer Support via [support.au@auspure.com](mailto:support.au@auspure.com) addressing your order number. Make sure to NOT dispose of your product before contacting us. Once our Customer Support Team has reached to your request approval, please return the unit with its order number.

## AUSPURE CUSTOMER SUPPORT

---

Feel free to contact our helpful customer support team with any questions regarding your product!

Your satisfaction is our priority.

Ausbrilliant. PO Box 2, Ermington NSW 1700, Australia

[www.auspure.com/au](http://www.auspure.com/au)

[support.au@auspure.com](mailto:support.au@auspure.com)

Please provide your order number when you contact our customer support services.



**AUSPURE**  
**KITCHEN**

Questions or Inquiries?  
[support.au@auspure.com](mailto:support.au@auspure.com)  
V1.0222