

lighting series

by EasyPro Pond Products

Cabrio Color Changing Remote Control

Instructions for Operation · Warranty

Thank you for purchasing EasyPro's Cabrio color changing remote control. With this remote you can sync multiple Cabrio fixtures together, change modes, brightness and speed. Control your Cabrio LED lights to illuminate a pond or waterfall, highlight a deck or patio and extend the enjoyment of your entire landscape in the evening hours.

Remote Operation

- A single remote can operate multiple Cabrio fixtures in any combination within its range.
- Depress mode, brightness and speed buttons slowly and deliberately to ensure all light fixtures remain in sync on the same cycle.
- Desired setting must be achieved by clicking remote functions, holding a button down will not change settings.
- The LED light will default to mode 1 on initial startup.
- CLEDRC remote requires an A23 battery (included).



Brightness Settings (Works on solid color modes only)

Dim	Dimmest											Brightest					
	1	1	ı	-1	- 1	- 1	-1	- 1	- 1	- 1	- 1	-1	- 1	- 1	- 1	- 1	I ()
	1								9								18
	off																default

Speed Settings

Slo	wes	t											F	astest
	1	ı	- 1	- 1	- 1	- 1	- 1	- 1	- 1	1 () I	- 1	- 1	- 1
	1							8	default					15

Color Modes

- Fade Red, Green, Blue, Yellow, Purple, Light Blue, White Fades into listed colors (default mode)
- Change Red, Green, Blue, Green
- 3. Change - Red, Green, Blue
- Change Blue, Green, Red
- Change Red, Green, Blue, Green · Four color cycle accelerates to strobe
- Change Red, off, Green, off, Blue, off, Yellow, off, Purple, off, Light Blue, off, White, off
- Change Yellow, Pink/Purple, Light Blue
- Change Red, Yellow, White, off
- Change White, Yellow, Red, off
- 10. Change Red, Green, Blue, Yellow, Purple, Light Blue, White
- 11. Solid Pink
- 12. Solid Yellow
- 13. Solid Green/Yellow
- 14. Solid Aqua
- 15. Solid Sky Blue
- 16. Solid Electric Blue
- 17. Solid Blue/Purple
- 18. Solid Purple
- 19. Solid Hot Pink
- 20. Demo Mode
 - Scrolls through modes 1-10, beginning with mode 10, 1, 2, 3...
- 21. Solid Red
- 22. Solid Green
- 23. Solid Blue
- 24. Solid Yellow/Green
- 25. Solid Purple/Pink
- 26. Solid Light Blue
- 27. Solid White



EasyPro Pond Products Limited Warranty

EasyPro Pond Products ("EasyPro") warrants to the purchaser that this product ("Product") will be free from any mechanical or material defects for a period of **one year** from the date of purchase. Batteries are considered wearable items and are not covered under this warranty. This warranty only covers properly installed and maintained Products sold by authorized EasyPro Sellers who are subject to and follow EasyPro's quality control standards. Please note that because EasyPro is unable to control the quality of Products sold by unauthorized sellers, unless otherwise prohibited by law, this warranty does not cover Products purchased from unauthorized sellers.

This warranty does not cover normal wear and tear, nor any deterioration suffered through overloading, improper use, negligence, improper installation, acts of God or accident. Similarly, any modification made by the purchaser to the Product will cause the warranty to be null and void. This warranty does not cover any cost associated with the installation or removal of the Product subject to a warranty claim.

All returned items will be inspected to determine cause of failure before a warranty claim is approved. The exclusive remedies provided hereunder shall, upon EasyPro's inspection and option, be either repair or replacement of the Product or parts covered under this warranty.

Making a Claim: A Return Authorization ("RA") number must first be obtained by calling EasyPro at 800-448-3873 or via email at warranty@easypro.com. It is the purchaser's responsibility to pay the return shipping charges. Be sure to include the RA number, original receipt (in the form of an invoice or sales receipt), your name, your return address and your phone number inside of the package. No warranty claims will be honored without the original receipt that shows that your purchase was made from an Authorized EasyPro Seller. Ensure the product is properly packaged and insured for the replacement value. Damage due to improper packaging is the responsibility of the sender.

ALL OTHER EXPRESS OR IMPLIED WARRANTIES INCLUDING MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY LIMITED IN DURATION TO THE DURATION OF THE WARRANTY AS DESCRIBED ABOVE. Some States do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

EasyPro shall not be held liable for any damages caused by defective components or materials of this Product; or for loss incurred because of the interruption of service; or any consequential/incidental damages and expenses arising from the production, sale, use or misuse of this Product. Some States do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

EasyPro shall not be held liable for any loss of fish, plants or any other livestock as a result of any failure or defect of this Product. This warranty gives you specific legal rights, and you may also have other rights that vary from State to State.

