


Quick Start Guide

CONGRATULATIONS AND THANK YOU FOR BECOMING THE PROUD OWNER OF A UNIQUE WII DSYDE® VINTAGE FLECTRIC CRUISER BICYCLE!

PLEASE READ 'UNPACKING & ASSEMBLY INSTRUCTIONS' IF E-BIKE REQUIRES ASSEMBLY.

Whilst your battery is charging, now is a good opportunity to read this Quick Start Guide carefully and familiarize yourself with the controls and functions. Use accompanied manual to help you.

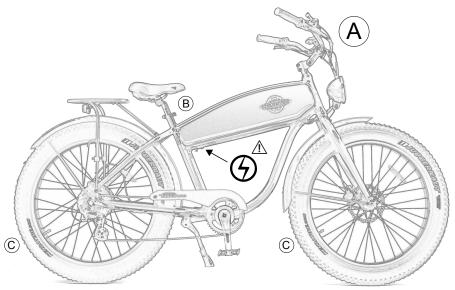

Applies to all Wildsyde E-Cruisers: The Beast, Hunni Bunni & Shadow.

<u>^</u>

FULLY CHARGE BATTERY BEFORE USE




Before your first ride, charge battery for 6-8 hours until charging indicator light has turned green. Plug charging cable into charging point underneath battery tank (as shown) and connect to AC. Or, remove battery and charge indoors (see page 4). Then, prepare to ride until the battery discharges to 20% (1 bar) on your first ride then repeat charge/ discharge process for the next 3 rides to optimize battery life and performance.





COCKPIT CONTROLS & FUNCTIONS

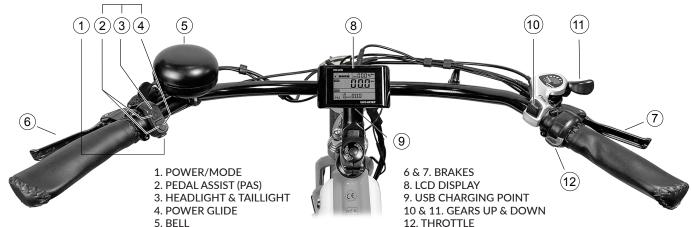

1. POWER ON/OFF & TOGGLE MODE BUTTON

Your electric bike is started and switched off using the rubber embossed MODE button 'M', located on the left side of the handlebars, just underneath the PAS/Lights/Power Glide arrow buttons. Push this and hold. The display will light up, indicating the ebike is now ON.

2. PEDAL ASSIST (PAS) UP/DOWN ARROW BUTTONS

Pedal Assist will automatically begin to work as soon as you start pedaling. Push the UP arrow for more power and easier riding, the DOWN arrow for less power and harder riding. PAS levels go from 1-5 and are displayed on the bottom left of the LCD display.

3. HEADLIGHT & TAILLIGHT

Lights share the UP arrow button with PAS. Push and HOLD the UP arrow button to switch on both headlight and taillight. The LCD display will also illuminate. Push and hold the UP arrow again to switch both lights off.

4. POWER GLIDE

Power Glide shares the DOWN arrow button with PAS. Push and HOLD the DOWN button to engage the 'Power Glide System.' The bike will move forward at up to 3mph for a few seconds to assist walking the bike, when required.

5. BELL

A traditional vintage bell to warn pedestrians & traffic of your approach.


6 & 7. BRAKES

All Wildsyde® E-Cruisers are equipped with hydraulic disc brakes and motor inhibitors. When either front, rear or both brakes are applied, the inhibitors automatically disable power to motor until brakes release.



POWER RUN-ON

It is normal for the bike to 'run-on' as power momentarily dissipates from the electric motor after pedaling. Be sure to anticipate this, applying the brakes as necessary.

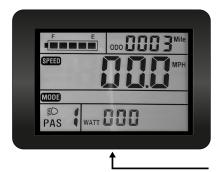

8. LCD DISPLAY

Includes Battery Capacity Level, Pedal Assist (PAS), Speed, Trip/Total Distance and Wattage. See manual.

9. USB CHARGING PORT

Charge your phone or other device whilst you ride with a cable into the USB port located at the base of the LCD.

10 & 11. GEARS UP & DOWN

Change between 1-7 gears using the (+) button and (-) lever on right side of handlebars. Use lower gears at slower speeds and vice versa.

12. THROTTLE (CLASS 2)

Carefully press throttle with thumb for instant acceleration without pedaling, making sure to release when you reach desired speed.

B. SEAT ADJUSTMENT

To adjust seat post to required height, undo seat post clamp lever, slide the saddle up or down to the desired height and then close the lever on the seat clamp securely.



C. TIRE PRESSURES

Ensure tires are inflated to recommended 25-45psi depending on rider weight, type of tires and terrain. *Please refer to manual for more advice*.



REMOVING THE BATTERY

Remove battery from its storage tank to charge separately, and/or to avoid exposure to unnecessary excessive heat or cold. To remove, simply unlock the battery tank with key(s) supplied, unplug the two cables on battery, undo the velcro straps and carefully remove. See manual for important information on battery care.



PLAN YOUR RIDE

Ensure to plan your rides that leaves enough battery power for your return journey or to a destination where the bike can be recharged. As a guide, a fully charged battery can provide a range of 40-50 miles of smooth riding with PAS. *Please refer to the manual for more information*.



ALWAYS WEAR A HELMET

Always wear an approved helmet when riding your bike, and follow the helmet manufacturer's instructions for fit, use and care.

FOR DETAILED INFORMATION REFER TO MANUAL.

For questions, please email info@wildsyde.com, or for urgent assistance please call (970) 949 3261.