

Answer/Hang up calls Press the multi-function button to answer the call. Press the button again to hang up.



Declining a call Press and hold the multi-function button for 1s.



Switch Audio Output Under the calling status, press the multi-function button for 1s to switch audio output between cellphone and Earbuds. Voice Assistant Under the standby status, press and hold the button for 2s to activate voice assistant.

Note: There are 4 LED lights

to show the charging case battery status. They stand

for 25%,50%,75% & 100% charge in sequence.

ETT Press 2s

Volume -Press the left earphone button 3 times to decrease the volume.





Mute-on/off

Under the calling status, press the multi-function button twice to turn on or off the mute function.



Play/Pause music

Press the multi-function button to play or pause your music.



K Skip to last song

Press the left earphone button 2 times to play last song.



Skip to next song

Press the right earphone button 2 times to play next song.





Volume +

USB Charging Port

Press the right earphone button 3 times to increase the volume.



Tips

- 1. Please read the user manual before using your earbuds and keep it for future reference.
- 2. Your earbuds should be fully charged before first use.
- 3. If you don't use your earbuds for over 1 month, charge them before using them again.
- 4. Please use the qualified adapter.
- 5. If you can't find your earbuds in your mobile device's bluetooth list, please check if they are in pairing mode; if they don't get paired after a while, they'll exit pairing mode. If a procedure error occurs on your mobile device, please reset it; otherwise, reset your Earbuds.

Warning

- 1. Never disassemble or modify your earbuds .
- 2. Do not store them in extreme temperatures (under 0 °C or over 45 °C)
- 3. Keep out of reach of children.
- 4. Do not use your earbuds during thunderstorms.
- 5. Do not use harsh chemicals or strong detergents to clean your earbuds.
- 6. Keep them dry.

