

CORDLESS



ONEPWR  
BATTERY SYSTEM

# ONEPWR<sup>®</sup> CLEANSLATE<sup>™</sup> CORDLESS

CARPET & UPHOLSTERY  
SPOT CLEANER



## QUICK START GUIDE

### GETTING STARTED




Fully charged



- 1**  
Charge battery until indicator is full. Insert into side of unit.  
Audible click will be heard.


- 2**  
Remove Solution Tank from the unit.

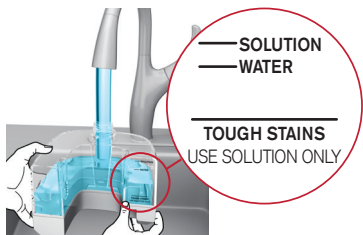

- 3**  
Add water and portable formula to solution tank. Reference fill lines on the solution tank, and instructions on user manual. Reinsert onto unit.




- 4**  
Turn power on. Unit starts in normal mode to provide optimal runtime and performance.

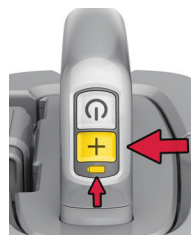

- 5**  
For tough stains, press "+" to activate boost mode and increase suction. \*Battery indicator will flash red when battery is low.


## HOW TO USE

### FIRST

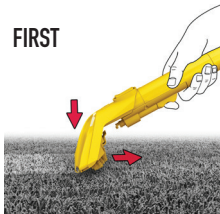


Remove any chunks or large debris before using machine. Use preferred tool to suction any excess liquid from the stain.

### SPRAY

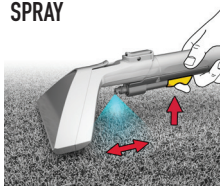


Spray a generous amount of cleaning formula over stain by pressing the trigger behind the tool.

### SCRUB

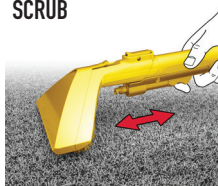

Place the tool on the stain and scrub.

### SUCTION

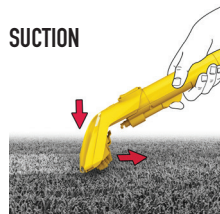

Apply downward pressure on the front of the cleaning tool and pull towards you to lift the stain. Repeat as needed.

## TOOLS FOR EVERY MESS



### 7in WidePath Tool

Tackle stairs and larger messes in fewer passes.



### Tight Spot Tool

Clean crevices, corners, baseboards and other tough to reach areas.



### Hose Rinse Tool

Flush the hose with water to remove any left behind dirt & debris after use.



**BUY SOLUTIONS TODAY**  
FOR BEST PERFORMANCE, CHOOSE HOOVER®

961003576-RO