

STREAMLINE™ CORDLESS

HARD FLOOR CLEANER




QUICK START GUIDE

GETTING STARTED



Insert handle into main unit. You will hear a click when inserted properly.

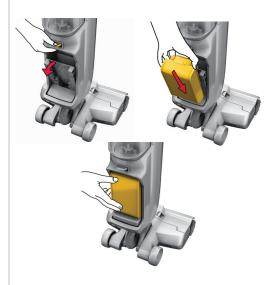

2

Press button to release the dock on the back of the unit. Insert the battery until it clicks. Then push the battery forward.

0

SELF-CLEAN / CHARGING TRAY SET UP



Plug in your Self-Cleaning/ Charging tray at the location you would like to store your unit.



Place your unit on the tray and wait for battery to reach full charge before your first use.

LET'S CLEAN!



ENSURE BATTERY IS FULLY CHARGED BEFORE STARTING. Locate and push the power button on the handle to start your machine.



Follow instructions on LCD display screen to properly start the cleaning process.



BUY SOLUTIONS TODAY FOR BEST PERFORMANCE, CHOOSE HOOVER®