

QUICK START GUIDE

GETTING STARTED

Fully assemble product prior to use.



Insert the handle into the wand. You will hear a click when inserted properly.



Insert the wand firmly into the unit.



Insert the lower end of the hose into the hose port. Then insert the upper end into the handle port.

USING YOUR PRODUCT



Plug in, then push the Power Button on the shoulder to power ON/OFF.



Press "+" to activate
Max Suction Power.



For above floor cleaning, release handle for up close cleaning.



For above floor cleaning, release wand for hard-to-reach cleaning.

CLEANING THE FILTER



Remove the dirt cup, then remove the filter from the dirt cup lid using the tab.



Rinse the filter with water until the water runs through clear.



IMPORTANT: Allow the filter to air dry for 24-48 hours.

TOOLS FOR EVERY MESS*



Turbo Tool

Remove pet hair and dirt from upholstery, stairs, and more.



LED Crevice Tool OR Crevice Tool

Clean crevices and hard to reach areas. Attach at the end of the wand or handle to clean up high or down low.



2-in-1 Dusting Brush & Upholstery Tool OR Dusting Brush

Remove pet hair, dust, and dirt on upholstery, stairs, baseboards, and more.