

POWER SCRUB™ **XL CARPET & UPHOLSTERY CLEANER**

QUICK START GUIDE

GETTING STARTED




Fill Clean Water Tank with Water up to MAX line located on side of the tank.



Fill Solution Bottle with HOOVER Solution and slide into back of the unit.

HOW TO USE: MAIN UNIT

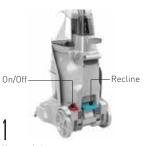

Use pedals to operate.



Slowly Push forward and squeeze trigger to wash. Release Trigger and slowly pull unit back to Dry carpet. Repeat and move to new section.

HOW TO USE: ABOVE FLOOR



Lift hose cover on nozzle.



Attach hose to hose port.



Saturate stain and scrub.

HOW TO USE: CLEANING AND MAINTAINING



Remove Dirty Water Tank.



Pull to Remove Nozzle Cover.

 


To Remove Brushes, press both tabs on side of foot.



Reinsert Brushes and Press Firmly until Latches Lock.

HOW TO USE: QUICK CLEAN MODE*



To Engage Quick Clean Mode, Turn Knob Counter-Clockwise until engaged. Return to Deep Clean Mode by Turning knob Clockwise to Starting Position.