


DINOSAUR DISCOVERY

TEEPEE TENT


Congratulations! You must be the proud owner of this DINOmite teepee tent! You're just moments away from having your very own prehistoric play area. So let's get started!

CONTENT


-  4x top poles
-  4x bottom poles
-  8x middle poles
-  12x screw-in connectors

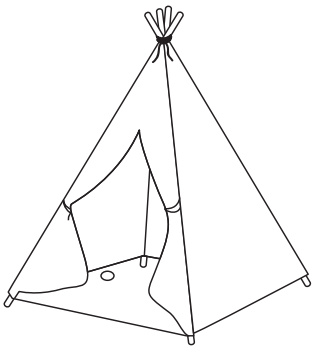


Teepee tent

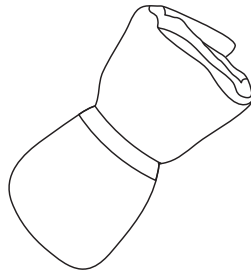

Teepee mat with roar button attached to floor

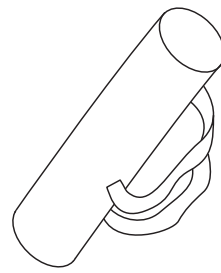

Tent & pole bag

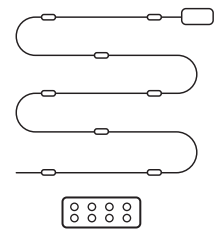


LED lights with remote control

ASSEMBLY

Step 1: Connect the Poles

Add 1 top, 2 middle and 1 bottom pole using 3 plastic connectors. Repeat until all 4 poles are completed. If one rod doesn't quite fit into a connector, no stress, just try another rod. Please contact us if you need replacements - www.winstonolive.com.

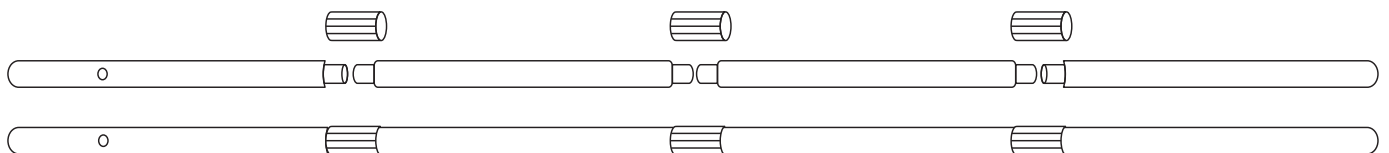


Step 2: Insert Poles into Canvas




Take one completed pole and insert into the bottom of the teepee sleeve, pushing it up to the top. Repeat with all 4 poles.

Step 3: Tie Poles Together

Thread the string through the pole and then teepee, alternating as you go. Pull on the ropes.

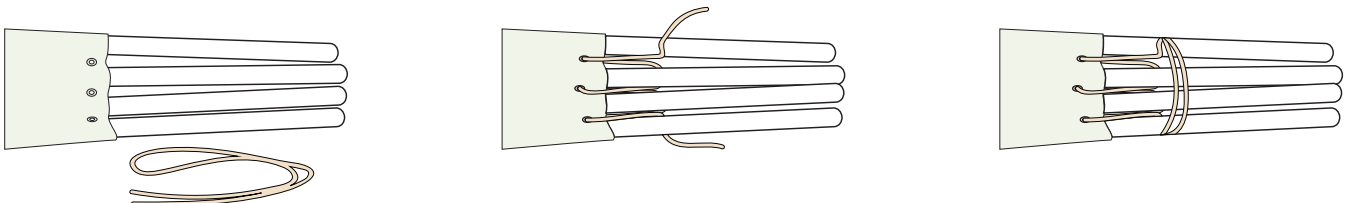


 Spread out Teepee legs ensuring the poles fall in one similar direction (eg clockwise so it is concentric). Pull on the ropes. Tie up tight.

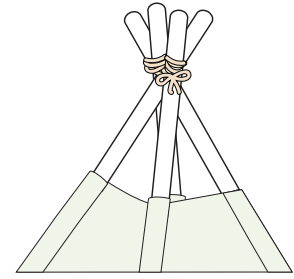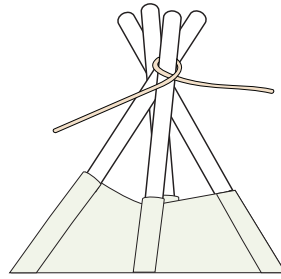


ACTIVATE DINOSAUR ROAR BUTTON

pull tab

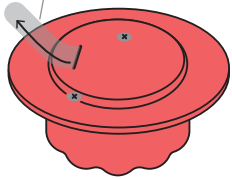

- Slide button out of pocket on tent floor and remove the plastic battery tab at the back of the button;
- For battery replacement use 3x LR44 batteries;
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or re-chargeable batteries.

ACTIVATE LED LIGHTS & REMOTE CONTROL

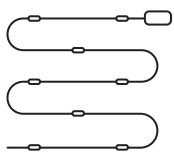

- Lights require 3 x AA Batteries (not included);
- Remote Control requires 1 x CR2025 Batteries (not included);
- Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or re-chargeable batteries.



Activate lights by pressing the 'ON' button while pointing at the battery pack. Select the light mode by pressing either 1-8, see battery pack for description of these light modes. Use timer option by selecting 4, 6 or 8H. To turn timer off press 'TIME OFF'. Change the brightness of the lights by pressing - or + 'DIM' buttons.

CARE INSTRUCTIONS



Please do not hand wash or machine wash your teepee or mat as the colours will fade.

Gently wipe with a damp cloth.

Steam before use to remove wrinkles.

NEED MORE HELP?



Scan this QR code or use the link: www.winstonolive.com

- To watch how to easily set up your teepee;
- To download & print your **Discovery Dino E-Booklet** - use code **DINO**;
- Register your teepee for a 6 month warranty;

⚠ WARNING: This product contains a button or coin cell battery. A swallowed button or coin cell battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

WINSTON & OLIVE CUSTOMER SERVICE PROMISE: Should you have any questions or concerns about your dino tent, please don't hesitate to contact us at support@winstonolive.com so we can resolve any issues straight away. We look forward to serving you.