

SERIES WDS

SEPARATORS INSTALLATION INSTRUCTIONS

INSTRUCTION PART NO. 2259800

REVISION 1

How It Works

Moisture separators are used to improve the quality of steam either within the distribution system or on the supply inlet to equipment.

Removal of moisture is by a series of baffles on which the suspended water droplets impinge and fall out by gravity to the drain, which must be piped to a liquid drain trap.

INSTALLATION

Install the separator in a horizontal pipeline so the flow corresponds to the flow arrow on the vessel.

Proper drainage of the separator is essential for proper operation. Connect the drain to a liquid drainer as shown in the diagram.

Build up pressure in system and check all field connections and flanges for leaks.

Depressurize system and repair leaks if necessary.

MAINTENANCE INSTRUCTIONS

Once the WDS separator is installed, no other maintenance is required.

The separator is complete in itself, and will function whenever there is flow through the separator.

MAXIMUM OPERATING CONDITIONS

Cast Iron

NPT 250 psig @ 450°F 125# Flg. 150 psig @ 450°F

Carbon Steel

NPT or Socket Weld 300 psig @ 650°F 150# Flg. 150 psig @ 450°F

FLOW

WDS

SEPARATOR
REMOVING
WATER FROM
COMPRESSED
AIR SYSTEM

DIRT
POCKET

TYPICAL INSTALLATION

Each Watson McDaniel Company Product is warranted against defects in material and workmanship for one year from date of shipment. This warranty extends to the first retail purchaser only. All defective material must be returned to the person from whom you purchased the Product, transportation prepaid, free of any liens or encumbrances, and if found to be defective will be repaired free of charge or replaced, at the warrantor's or seller's option. If the material is replaced, any replacement will be invoiced in the usual manner and after inspection of alleged defective material an adjustment will be made for depreciation caused by purchaser's use. In no event will Watson McDaniel Company be liable to do more than refund the original contract price. Incidental and consequential damages are excluded, whether under this warranty or otherwise, All implied warranties, including warranties of merchantability and fitness for a particular purpose, are disclaimed and excluded.