

# New Digital Features 2010

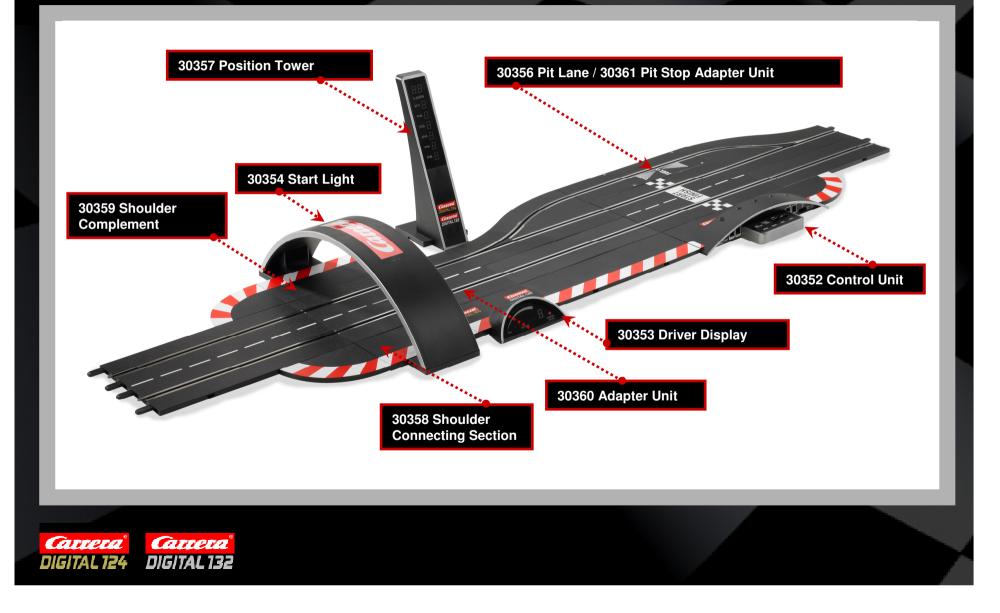

Carrera



## 30352 Control Unit

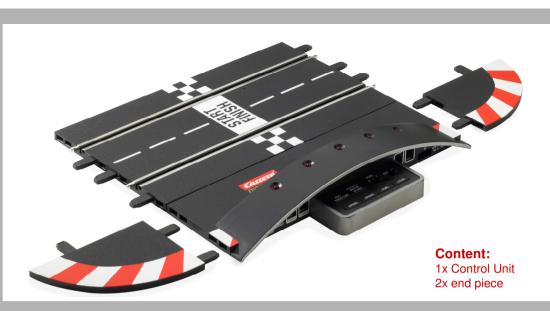

### Required basic element for the operation of Driver Display, Start Light and Position Tower

Available in 2010 as accessory only

#### Programming possibility for:

- $\rightarrow$  Braking performance, tank capacity and max. speed
- $\rightarrow$  Pit Stop function
- $\rightarrow$  Pace Car function
- $\rightarrow$  Autonomous Car function

**Garrera Garrera** DIGITAL124 DIGITAL132



### **30353** Driver Display



Functions only in combination with Control Unit (30352)

as well as

Pit Lane (30356) or Pit Stop Lane (30346) in combination with Pit Stop Adapter Unit (30361)


### Display:

- → Tank capacity
- → Car's allocation
- $\rightarrow$  Current race position
- $\rightarrow$  Control display for up to 10 Pit Stops

### "Rev Counter":

→ In case the Pit Stop function is <u>not</u> activated via the Control Unit (30352), the actual fuel tank gauge acts as "Rev Counter"

**Carrera** Carrera DIGITAL124 DIGITAL132

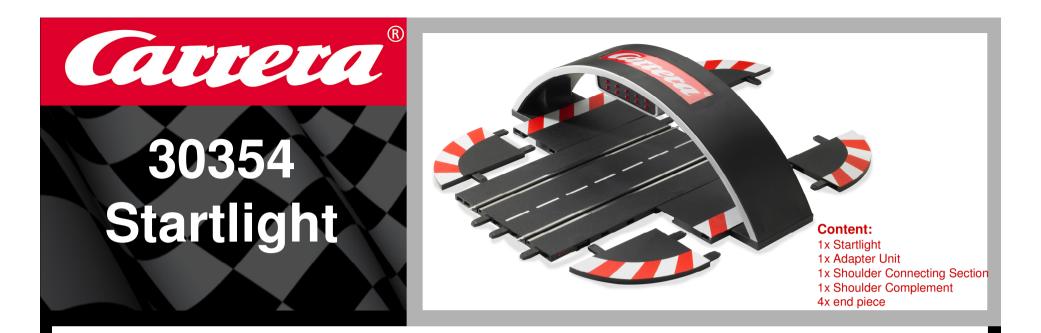


Functions only in combination with Control Unit (30352) or Black Box (30344) of 2009 production (identifiable by the absence of PRO-X mode)

#### **Display:**

- $\rightarrow$  Start sequence, the Startlight indicates the starting-light-phase at a race's start
- → Jump start (will be indicated with all LEDs permanently flashing / new start required)
- $\rightarrow$  The Carrera lettering at the top of the Startlight will start to light as soon as the racetrack is being operated

**Carrera**®

# 30356 Pit Lane

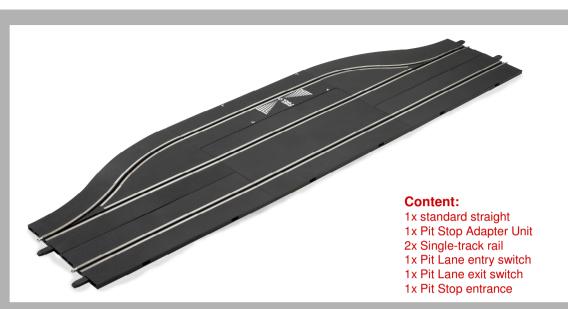

Functions only available in combination with Control Unit (30352)

#### **Functiones:**

- $\rightarrow$  "Refuelling" of the cars
- $\rightarrow$  Lap counting (can be deactivated optionally)
- $\rightarrow$  Displaying of the tank fuel capacity is only possible in combination with the Driver Display (30353)
- $\rightarrow$  Fuelling function: please refer to the manual of the Control Unit (30352)





### **30357** Position Tower



**Content:** 1x Position Tower 1x Adapter Unit

Functions only available in combination with Control Unit (30352)

#### **Display:**

 $\rightarrow$  Current race position of up to 6 cars (optionally also autonomous car and pace car)

 $\rightarrow$  Laps driven of the leading car



→ Possibility to connect Position Tower (30357) or Driver Display (30353) when consistently using the Power Slide Shoulders



### **30359** Shoulder Complement



→ Possibility to complement Adapter Unit (30360) when consistently using the Power Slide Shoulders





**30360** Adapter Unit




### **Connecting section for:**

- → Driver Display (30353)
- → Startlight (30354)
- $\rightarrow$  Position Tower (30357)
- $\rightarrow$  Can also be used for track expansion purposes





### **30361** Pit Stop Adapter Unit

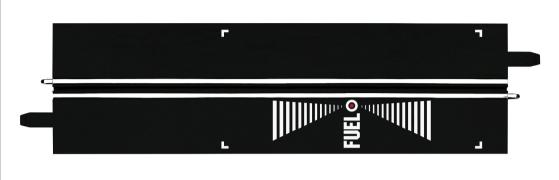

Works only available in combination with Control Unit (30352)

 $\rightarrow$  To retrofit the Pit Stop Lane (30346) when using the Driver Display (30353)

