 
 



Bellezza

Francesca
Spare Parts

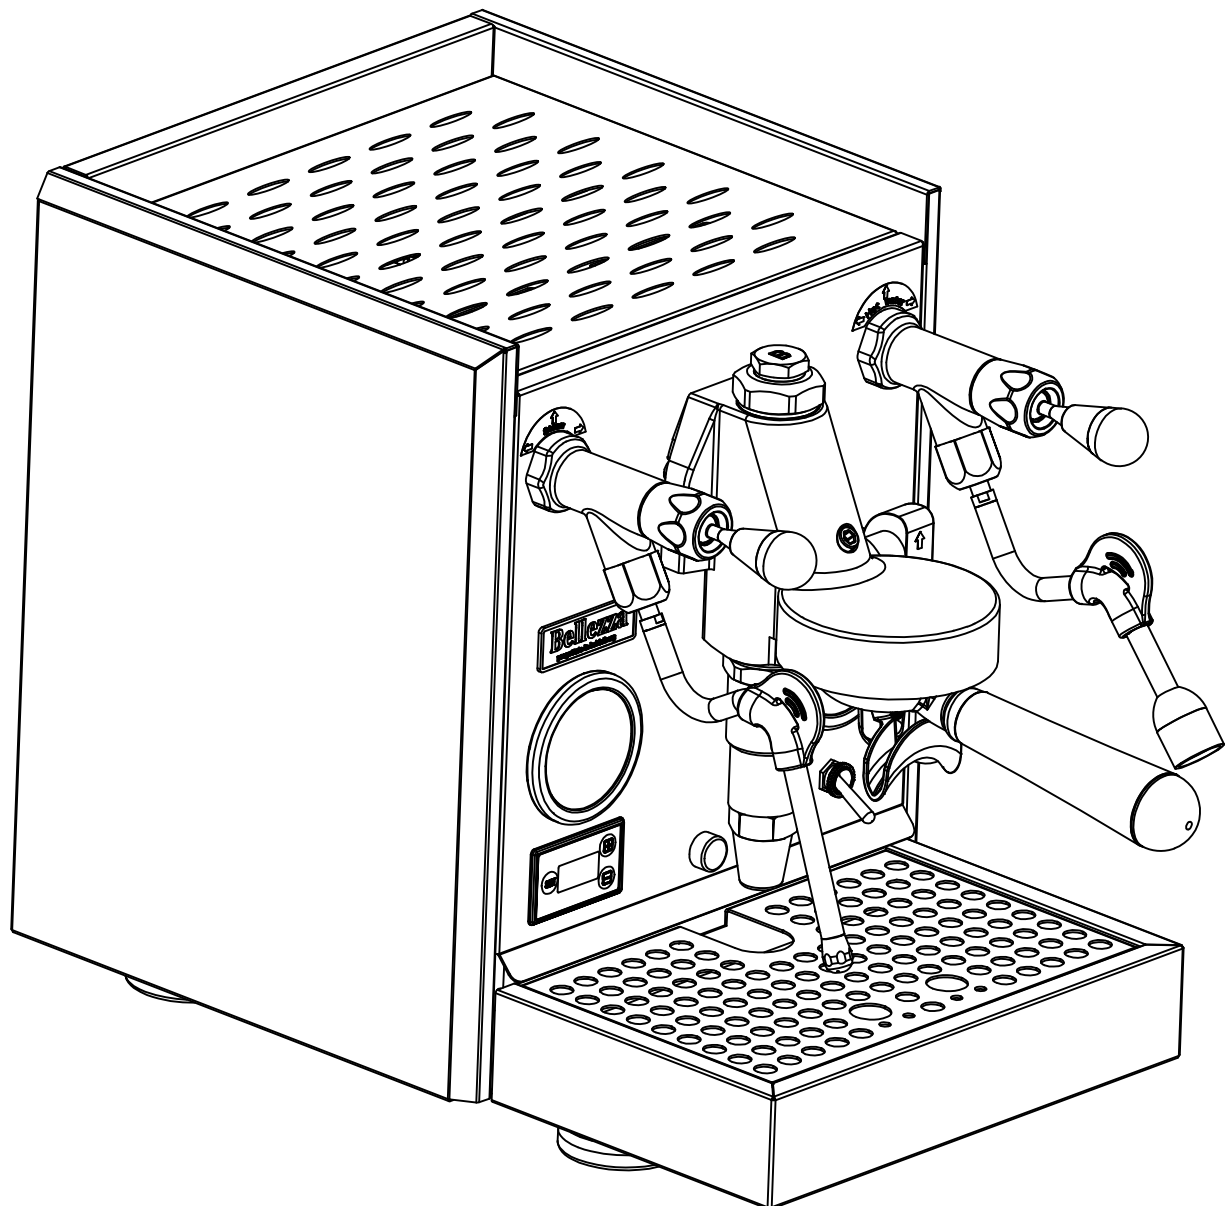

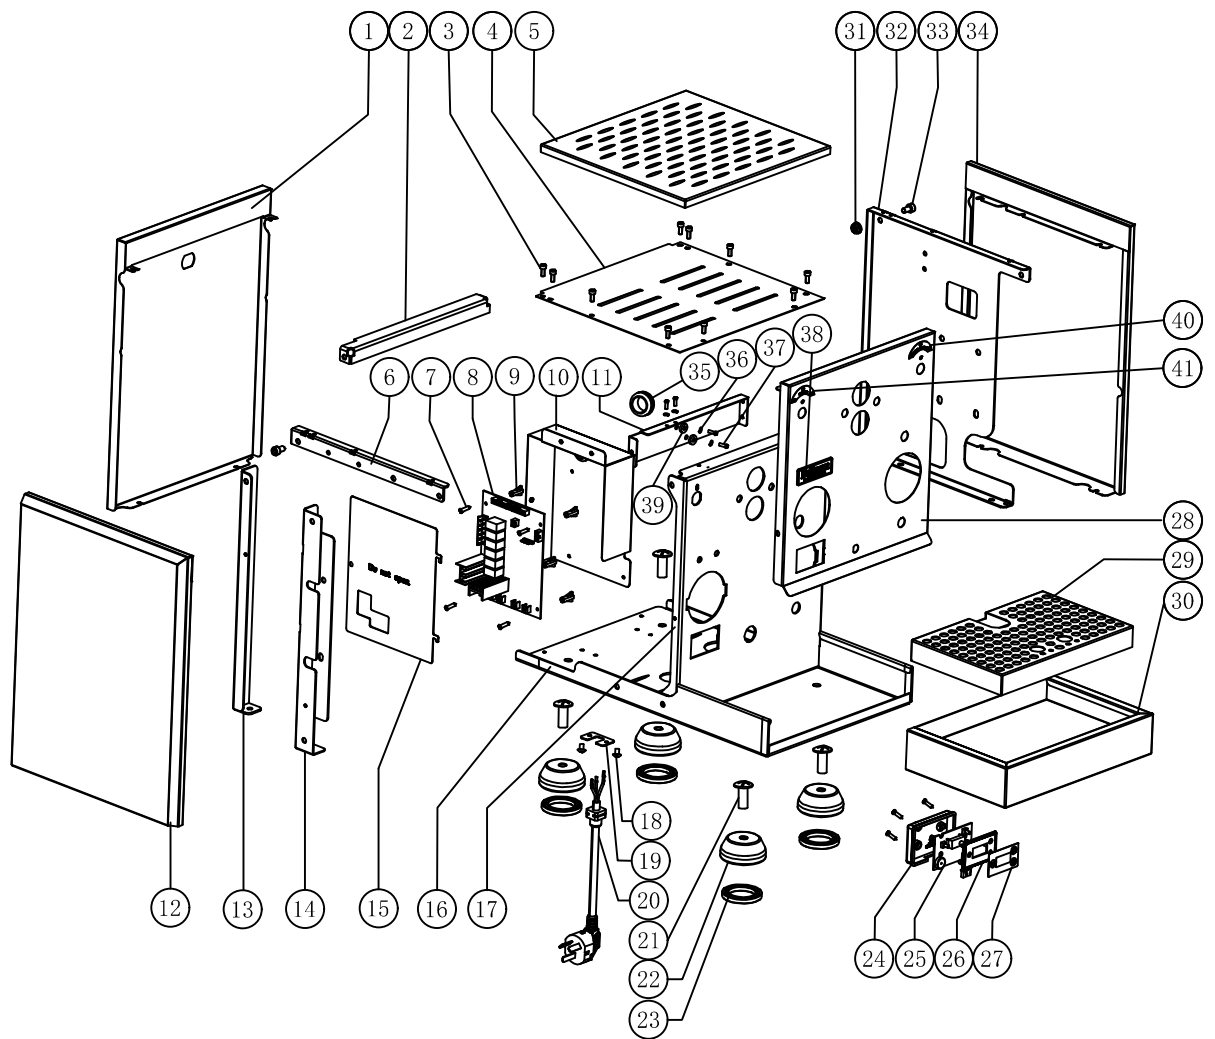


Item Nr.	Name	Bellezza Codes
1	Back cover	CH.005.008
2	Bracket 4	CH.005.006
3	Screw	IN.005.030
4	Top cover	FR.001.001
5	Top cover coaster	FR.001.002
6	Left bracket	CH.005.005
7	Selftapping Screw A	FR.001.015
8	Power board	FR.001.003
9	PCB fixing column	FR.001.004
10	PCB box	FR.001.005
11	Solenoid valve bracket	FR.001.006
12	Left cover	CH.005.009
13	Tank left bracket	FR.001.007
14	Middle bracket	FR.001.008
15	PCB cover	IN.063.702
16	Bottom cover	CH.005.001
17	Bracket 2	FR.001.009
18	Screw B	FR.001.010
19	Power cord bracket	IN.005.019
20	Power cord ASM	IN.005.025
21	Screw B	FR.001.011
22	Foot	IN.005.012
23	Foot pad	IN.005.013
24	Display bracket	IN.005.014
25	Display PCB	Fr.001.012
26	Display cover	IN.005.023
27	Display film	IN.005.024
28	Front cover	Fr.001.013
29	Coaster	CH.005.020
30	Drip tray	CH.005.021
31	Nut	IN.005.027
32	Bracket 1	Fr.001.014
33	Screw B	IN.005.028
34	Right cover	CH.005.010

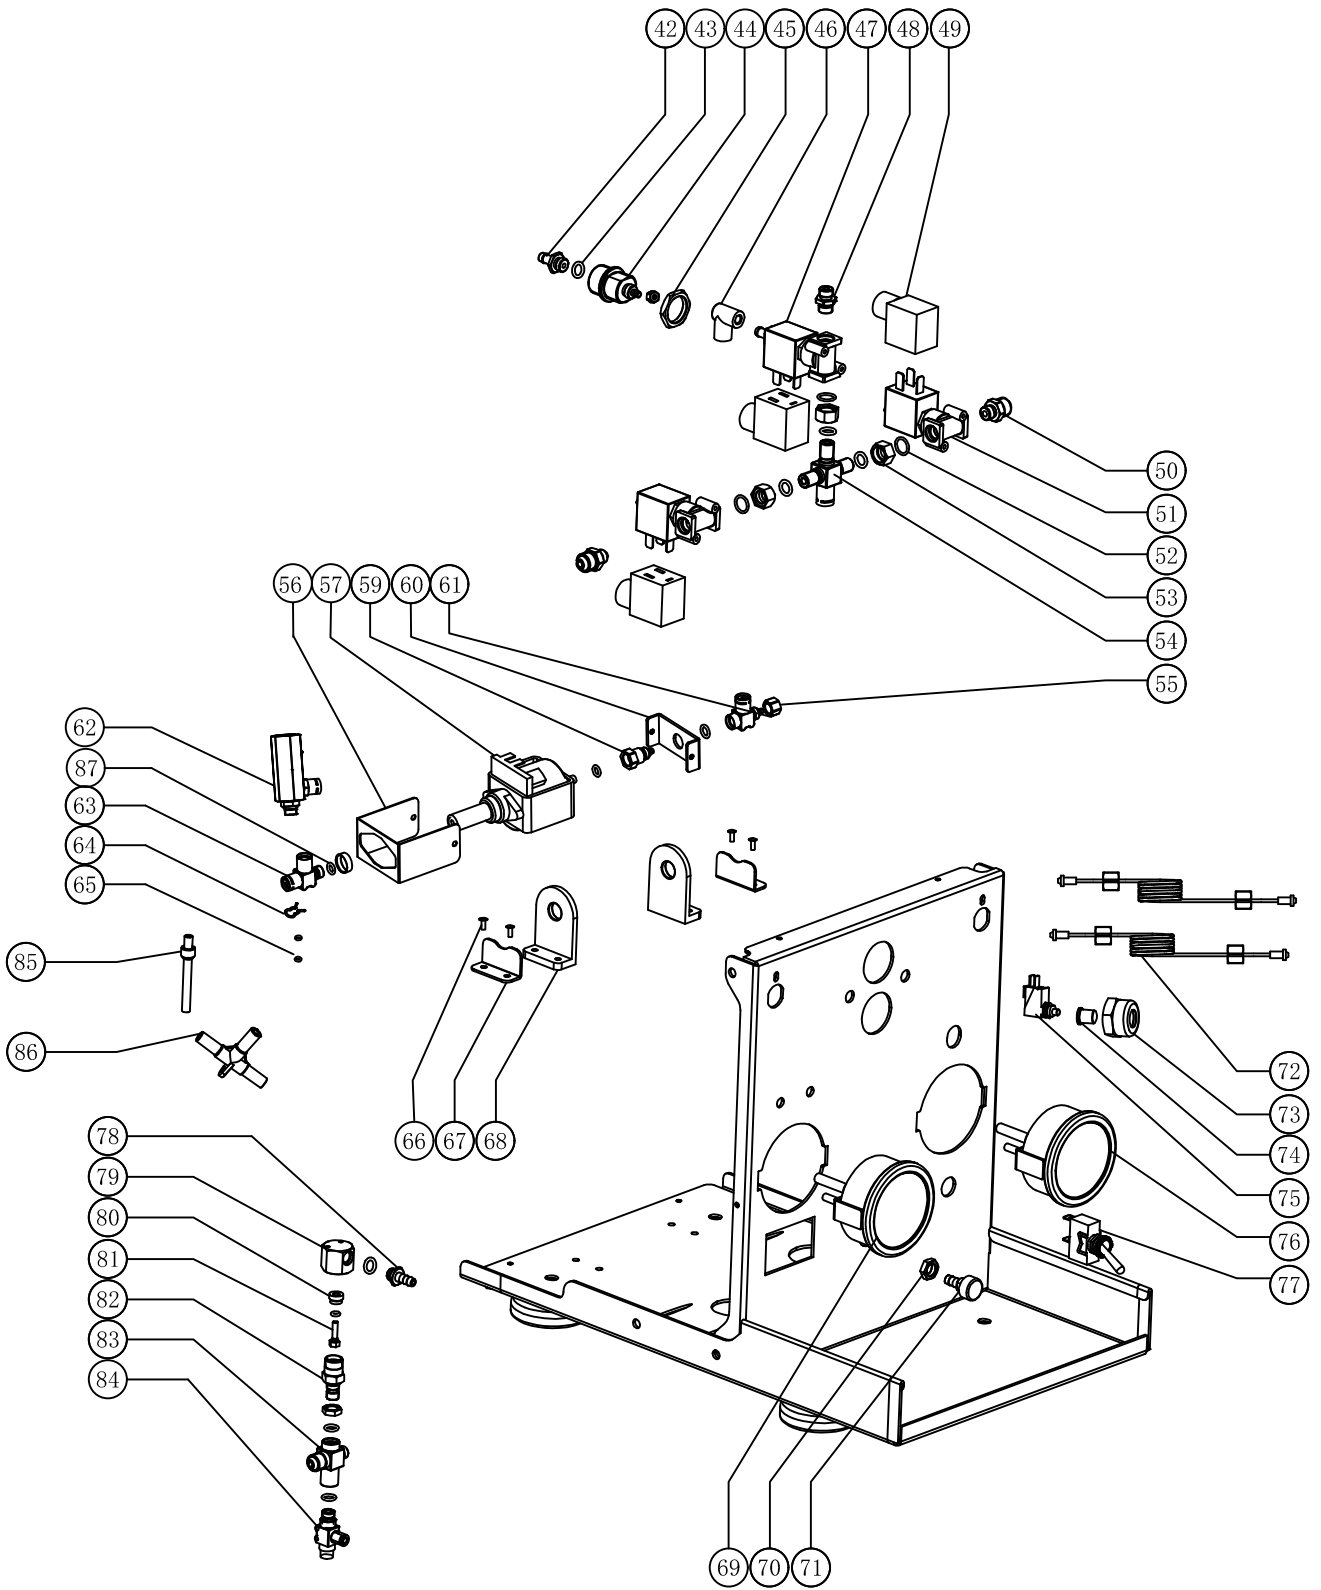 


Item Nr.	Name	Bellezza Codes
42	Connector	FR.021.001
43	Seal ring	FR.021.002
44	Connector 1	FR.021.003
45	Nut 1	FR.021.004
46	Pump connector	FR.021.005
47	Solenoid valve 2	IN.080.006
48	Connector	IN.076.032
49	Lead wire box	IN.080.017
50	Connector	FR.021.006
51	Solenoid valve 2	IN.080.006
52	Seal ring	FR.021.007
53	Nut 1	FR.021.008
54	Water inlet joint	FR.021.009
55	Nut 1	FR.021.010
56	Pump plate 2	FR.021.011
57	Pump	FR.021.012
58	Seal ring	FR.021.013
59	Pump connector	FR.021.014
60	Pump plate 1	FR.021.015
61	Three connector 1	IN.076.012
62	Protective valve Asm	IN.080.002
63	Three connector 2	IN.076.012
64	Clamp	FR.021.016
65	Seal ring	FR.021.017
66	Rivet	FR.021.018
67	Pump block	FR.021.019
68	Pump buffer block	IN.063.221
69	Coffee pressure gauge	IN.064.038
70	Nut	FR.021.020
71	Drainage joint	FR.021.021
72	Copper tube assembly	IN.005.139
73	Fix nut 2	IN.005.035.01
74	Push pole 4	IN.005.035.02
75	Micro switch	IN.005.041



Item Nr.	Name	Bellezza Codes
76	Steam pressure gauge	IN.005.035
77	Toggle switch	IN.005.039
78	Water inlet joint	FR.022.001
79	Valve cap	FR.022.002
80	Washer	FR.022.003
81	Exhaust valve rod	FR.022.004
82	Exhaust valve body	FR.022.005
83	Four way connector	FR.022.006
84	Protective valve ASM 2	FR.022.007
85	Pressure tube assy	FR.022.008
86	Three connector	IN.063.006
87	Seal ring	FR.022.009

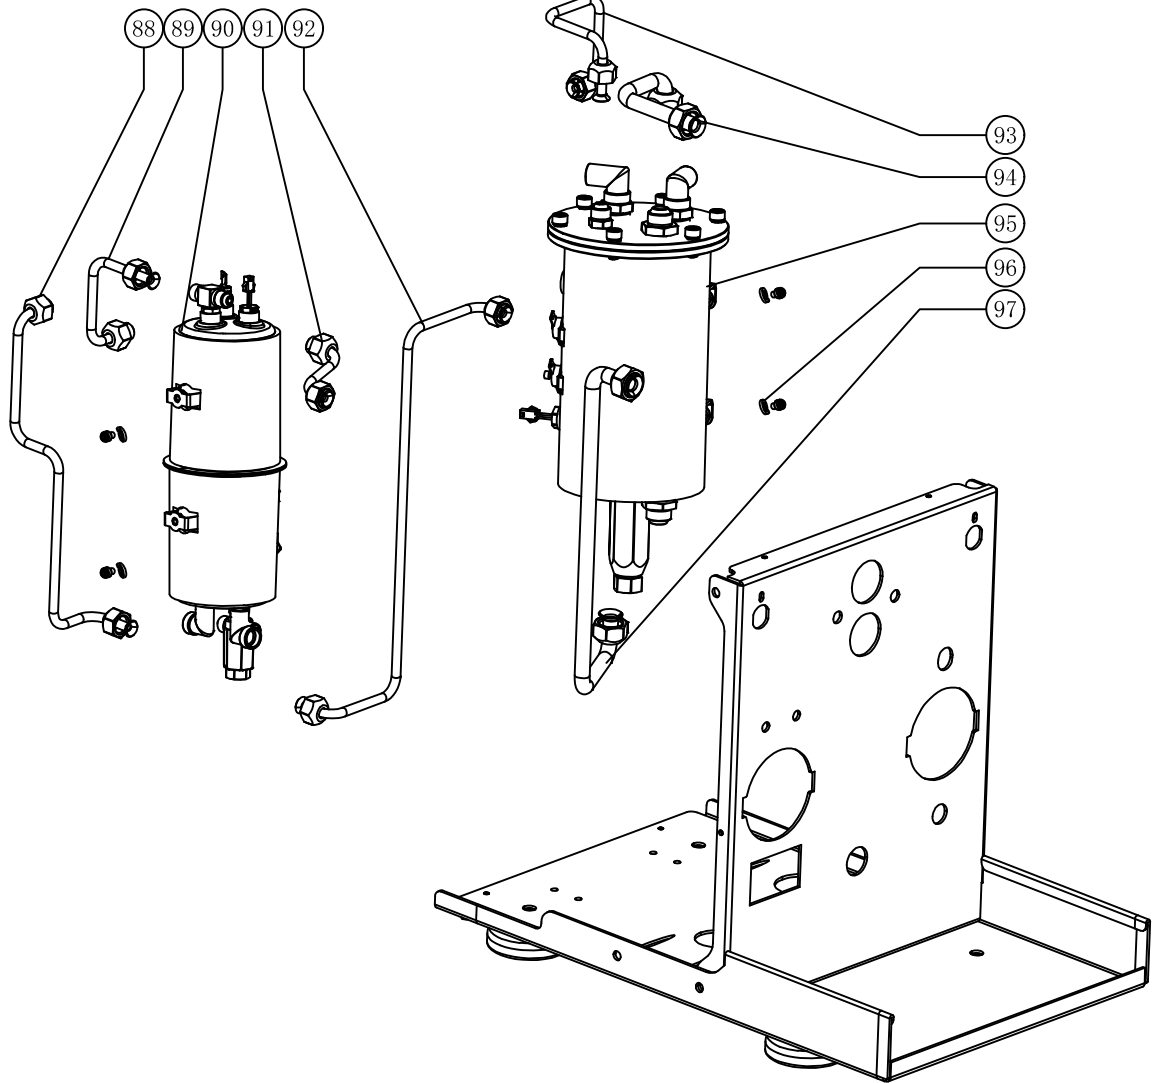 


Item Nr.	Name	Bellezza Codes
88	Copper tube assembly 6	FR.003.001
89	Copper tube assembly 7	FR.003.002
90	Steam boiler ASM	FR.003.003
91	Copper tube assembly 3	FR.003.004
92	Copper tube assembly 2	FR.003.005
93	Copper tube assembly 5	FR.003.006
94	Copper tube assembly 1	FR.003.007
95	Coffee boiler ASM	FR.003.008
96	Spring washer	FR.003.009
97	Copper tube assembly 4	FR.003.010

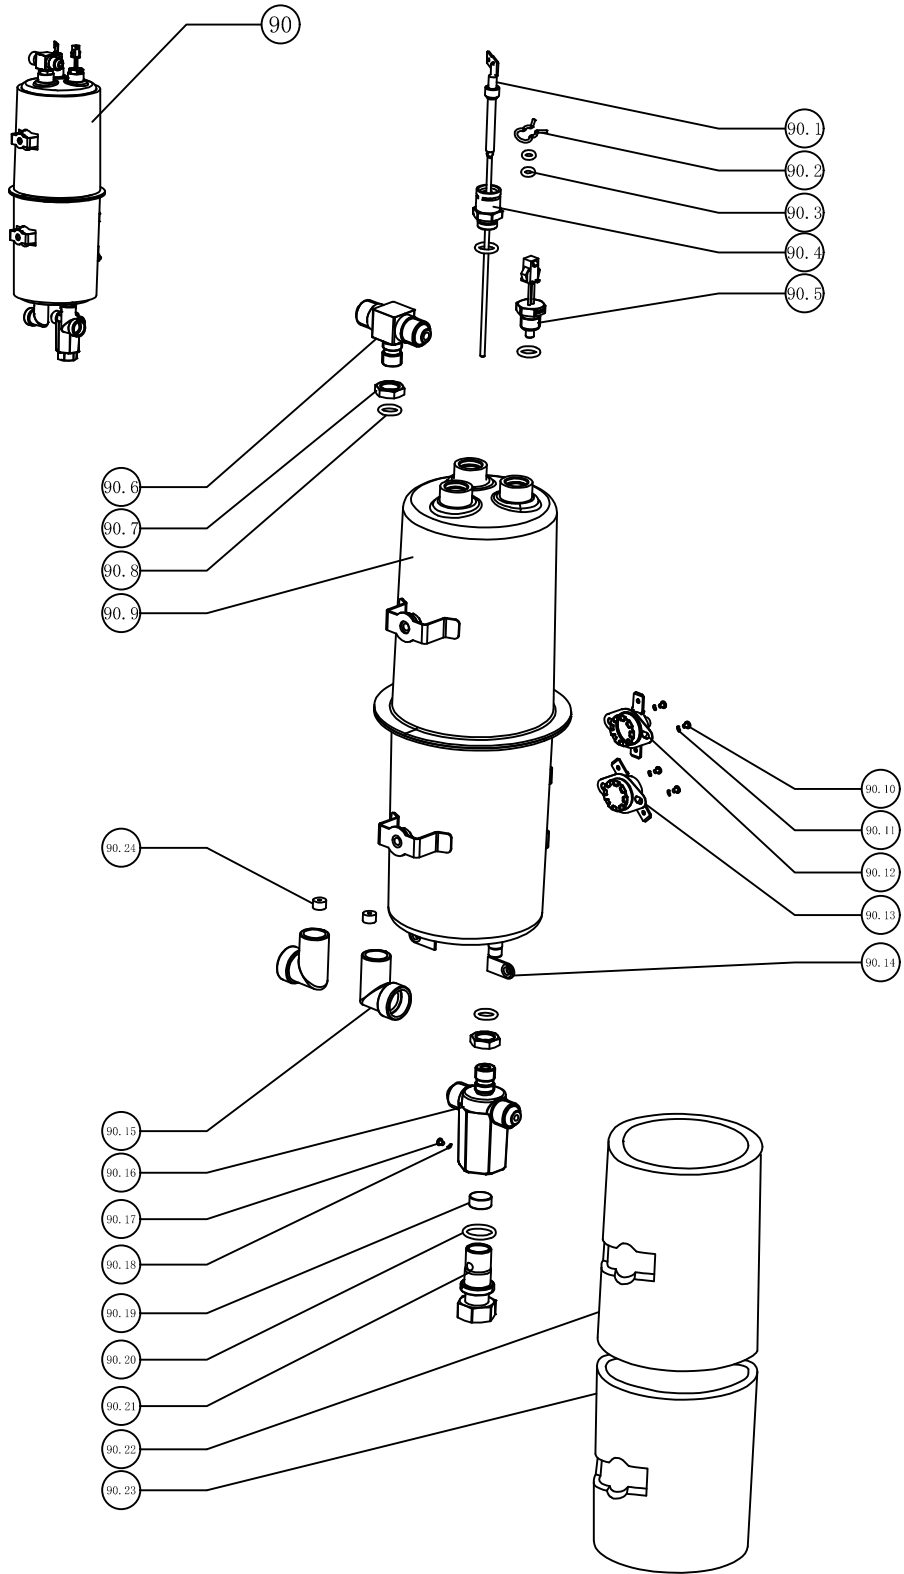 


Item Nr.	Name	Bellezza Codes
90	Steam boiler ASM	BE.074.074
90,1	LOW LEVEL PROBE ASM	IN.076.013
90,2	Clamp	BE.074.008
90,3	Seal ring	IN.076.204
90,4	CONNECTOR	IN.076.032
90,5	NTC	IN.076.035
90,6	3 way connector	IN.080.001
90,7	Nut	BE.074.006
90,8	Seal ring	BE.074.008
90,9	Heating boiler ASSY	BE.074.001
90,10	Screw B	IN.076.201
90,11	Spring washer	BE.074.007
90,12	Thermostat 2	IN.076.025
90,13	Thermostat 1	IN.076.026
90,14	Touch-weld terminal	FR.390.001
90,15	Silicon sleeve	FR.390.002
90,16	Drainage valve body	FR.390.003
90,17	Screw B	FR.390.004
90,18	Spring washer	FR.390.005
90,19	Safety valve	FR.390.006
90,20	Drain valve seal ring	FR.390.007
90,21	Drainage valve rod	FR.390.008
90,22	Insulation cotton 2	BE.074.010
90,23	Insulation cotton 3	BE.074.011
90,24	Silicone cap	FR.390.009

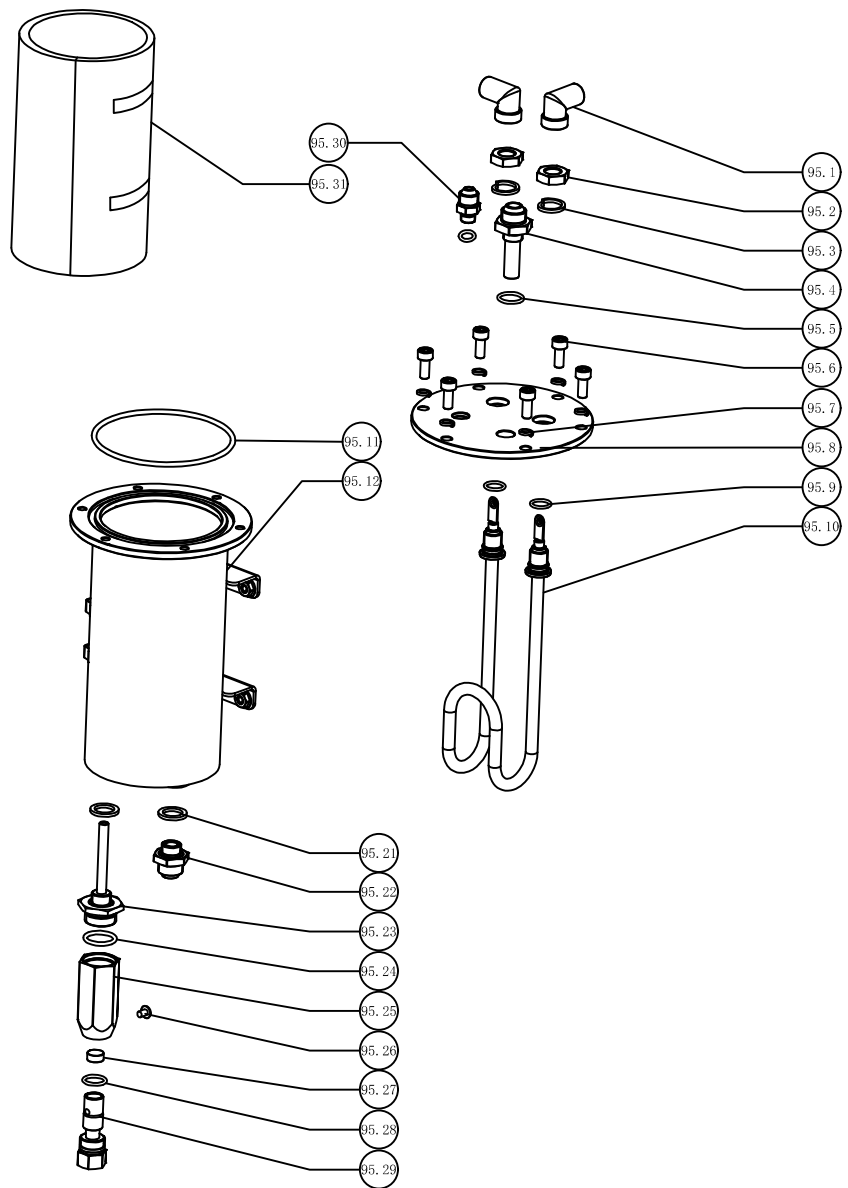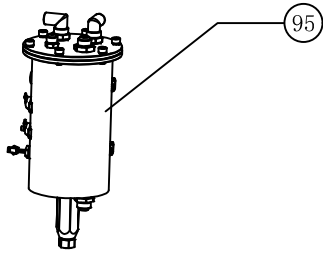  




Item Nr.	Name	Bellezza Codes
95	Heating boiler ASM	FR.090.090
95,1	Protection sleeve	FR.090.001
95,2	Nut	FR.090.002
95,3	Spring washer	FR.090.003
95,4	Water outlet joint	FR.090.004
95,5	Seal ring	FR.090.005
95,6	Screw B	FR.090.006
95,7	Spring washer	FR.090.007
95,8	Boiler cover	FR.090.008
95,9	Piston seal ring	FR.090.009
95,10	Heating element	FR.090.010
95,11	Boiler seal ring	FR.090.011
95,12	Coffee boiler	FR.090.012
95,13	Screw B	FR.090.013
95,14	Protective valve ASM	IN.080.002
95,15	Screw B	FR.090.014
95,16	Spring washer	FR.090.015
95,17	Thermostat 1	IN.076.026
95,18	Thermostat 2	IN.076.025
95,19	NTC	IN.076.035
95,20	Seal ring	FR.090.016
95,21	Connector washer	FR.090.017
95,22	Steam connector	FR.090.018
95,23	Drainage valve joint	FR.090.019
95,24	Valve_cover_seal_ring	FR.090.020
95,25	Coffee pressure gauge	IN.076.036.01
95,26	Screw B	IN.076.036.02
95,27	safety valve	IN.076.036.03
95,28	Drain valve seal ring	IN.076.036.04
95,29	Out valve rod	IN.076.036.05
95,30	Water connector	FR.090.021
95,31	Insulation cotton 1	FR.090.022

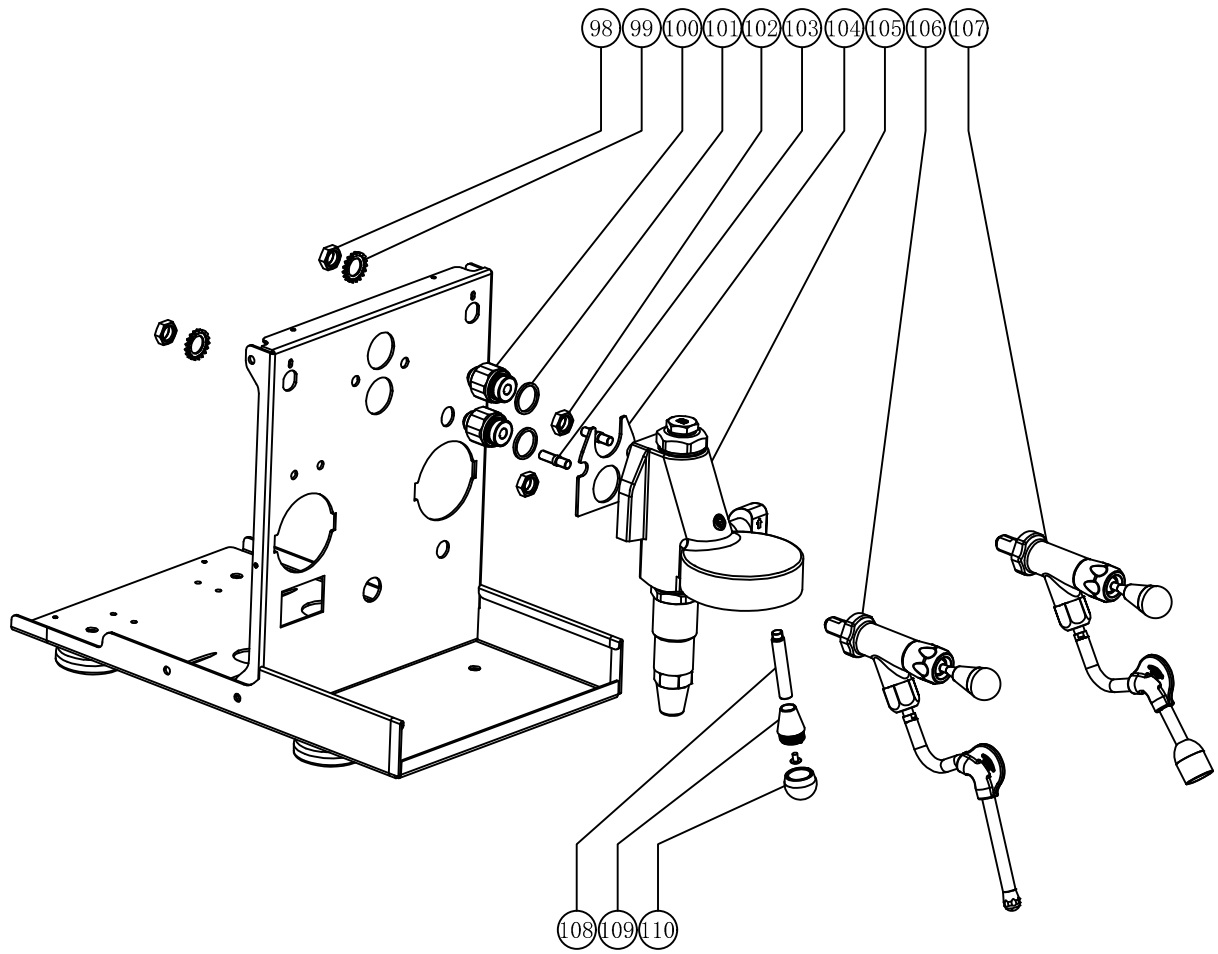 


Item Nr.	Name	Bellezza Codes
98	Nut	IN.091.040
99	Washer	IN.091.040.01
100	Joint	IN.091.038
101	Washer	IN.091.039
102	Nut	IN.091.040
103	Screw	IN.091.041
104	Insulation Board	IN.091.036
105	Blanking head ASM 1	IN.091.000
106	Steam pipe ASM	IN.196.000
107	Hot water pipe ASM	IN.197.000
108	Connector pole	IN.091.032
109	Handle	IN.091.033
110	Handle cover	IN.091.035

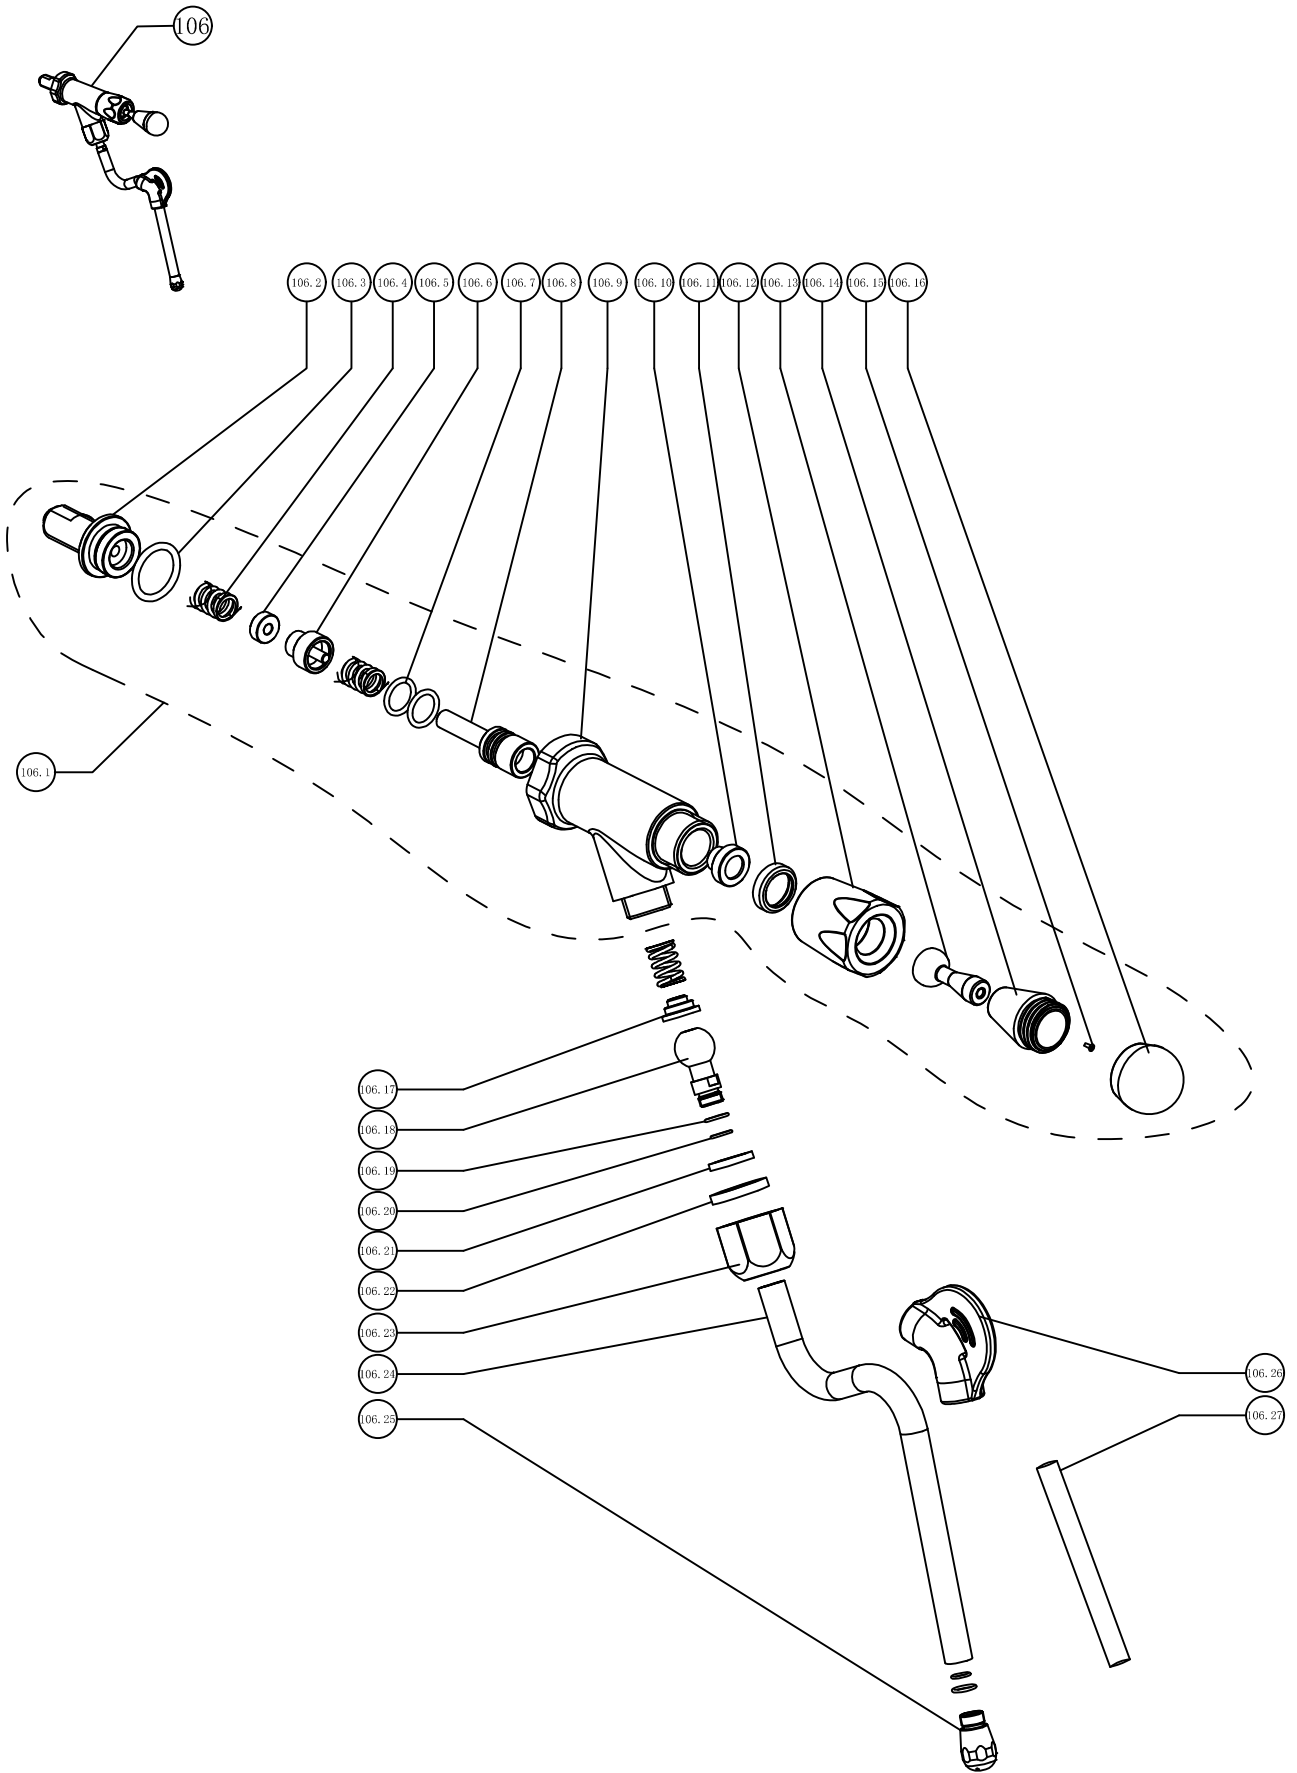 



Item Nr.	Name	Bellezza Codes
106	Steam pipe asm	IN.196.000
106,1	Steam valve asm	IN.196.196
106,2	Connector	IN.196.103
106,3	Valve cover seal	IN.196.104
106,4	Steam pipe spring	IN.196.105
106,5	Valve plug	IN.196.106
106,6	Push rod1	IN.196.107
106,7	Seal ring	IN.196.108
106,8	Push rod2	IN.196.109
106,9	Valve body	IN.196.110
106,10	Press block1	IN.196.111
106,11	Press block2	IN.196.112
106,12	Valve cap	IN.196.113
106,13	Handle	IN.196.114
106,14	Handle	IN.196.115
106,15	SCREW B	IN.196.101
106,16	Handle cover	IN.196.116
106,17	Steam press block	IN.096.017
106,18	Rotary head	IN.096.018
106,19	Seal ring	IN.096.030
106,20	Seal ring	IN.096.031
106,21	Steam tube washer	IN.096.020
106,22	Valve body washer	IN.096.021
106,23	Steam pipe connector	IN.096.019
106,24	Steam tube	IN.096.028
106,25	Steam nozzle	IN.096.029
106,26	Steam tube handle	IN.096.023
106,27	Teflon hose	IN.096.027

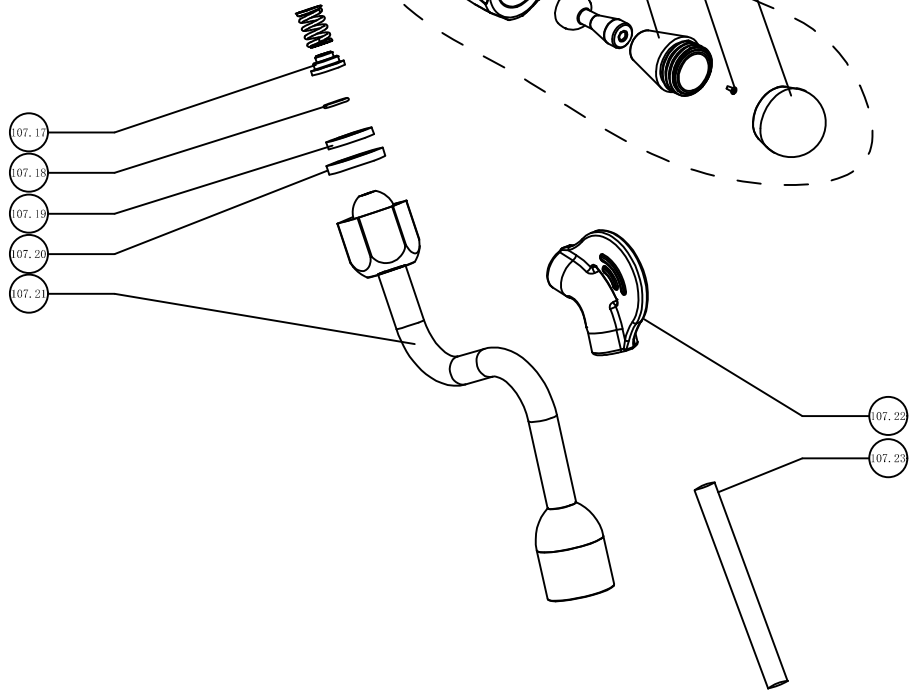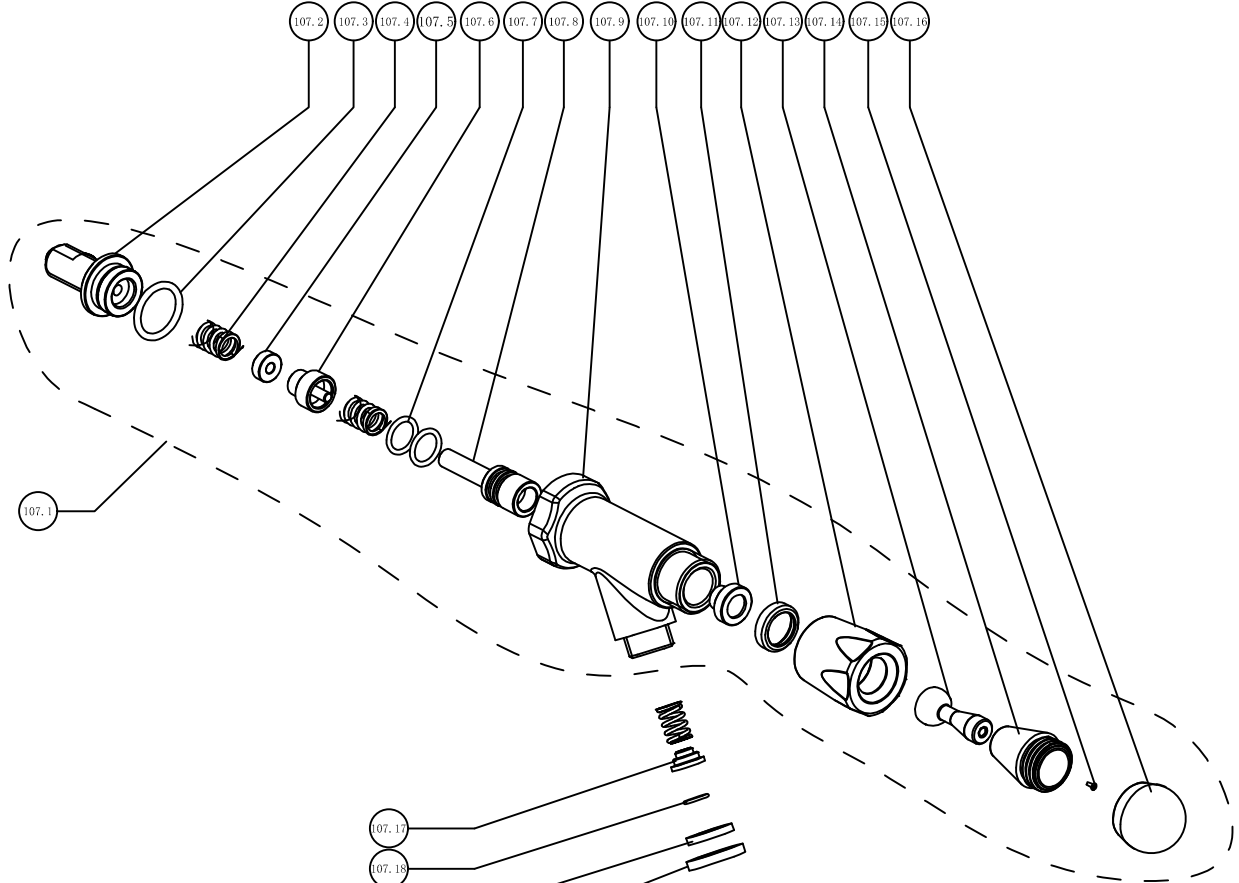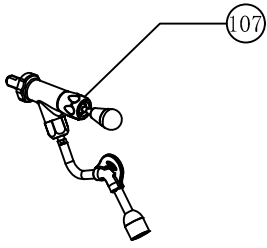   

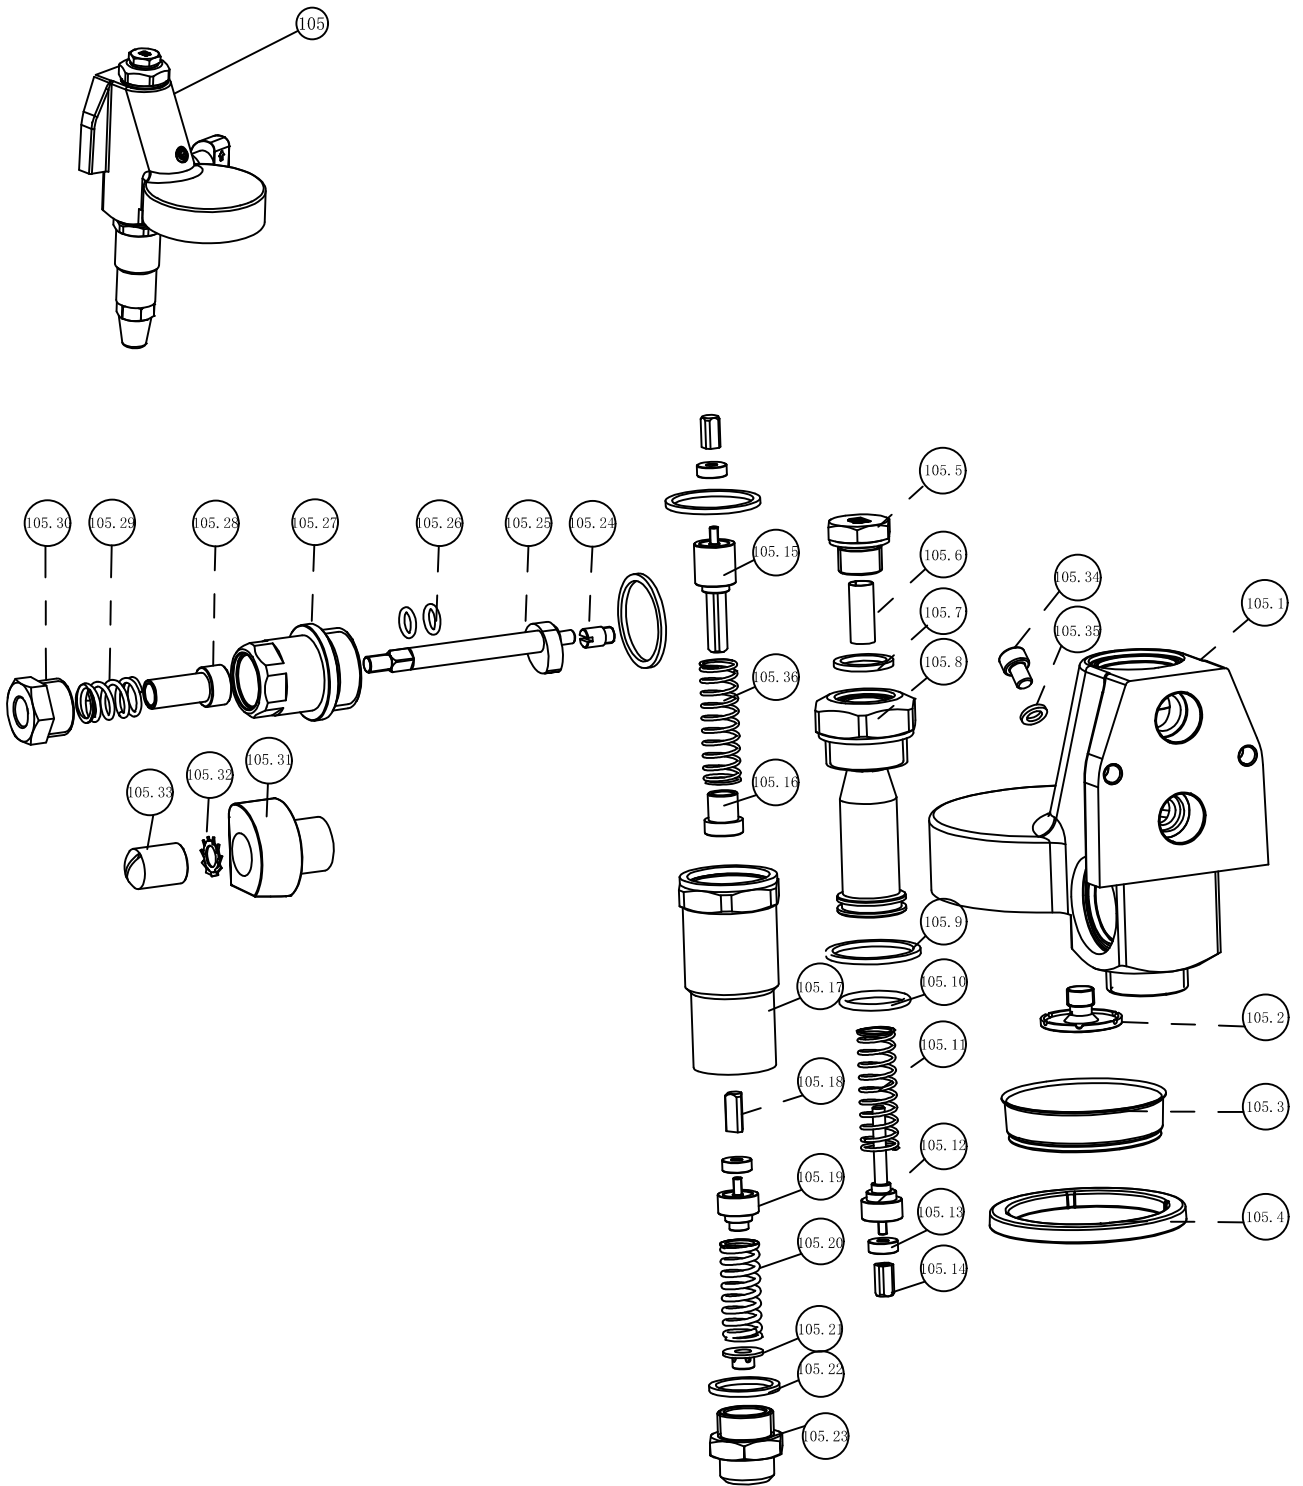 

Item Nr.	Name	Bellezza Codes
105,1	Brewing head	IN.091.000
105,2	Nozzle joint	IN.091.029
105,3	Filter mesh	IN.091.030
105,4	Funnel seal ring	IN.091.031
105,5	Filter holder	IN.091.001
105,6	Filter	IN.091.002
105,7	Seal pad 2	IN.091.003
105,8	Sealing rod	IN.091.004
105,9	Seal pad 1	IN.091.005
105,10	Head seal ring	IN.091.006
105,11	Eject rod spring 4	IN.091.007
105,12	Push rod 3	IN.091.008
105,13	Valve plug	IN.091.009
105,14	Sealing rod 1	IN.091.009.01
105,15	Push rod 1	IN.091.020
105,16	Shaft tube 2	IN.091.022
105,17	Drainage valve body 2	IN.091.024
105,18	Sealing rod 2	IN.091.025.01
105,19	Push rod 2	IN.091.025
105,20	Eject rod spring 3	IN.091.026
105,21	Water nozzle	IN.091.027
105,22	Seal pad 3	IN.091.028.01
105,23	Drainage valve joint	IN.091.028
105,24	Baffle block	IN.091.010.01
105,25	CAM	IN.091.010
105,26	Seal Ring	IN.091.011
105,27	Handle fixing piece 2	IN.091.012
105,28	Shaft tube 1	IN.091.014
105,29	Eject rod spring 1	IN.091.015
105,30	Handle fixing piece 1	IN.091.016
105,31	Handle fixing piece 3	IN.091.017
105,32	Lock Washer	IN.091.018
105,33	Fixing nut	IN.091.019
105,34	Screw B	IN.091.043

Item Nr.	Name	Bellezza codes
105,35	Sealpad 4	IN.091.042
105,36	Eject rod spring 2	IN.091.007

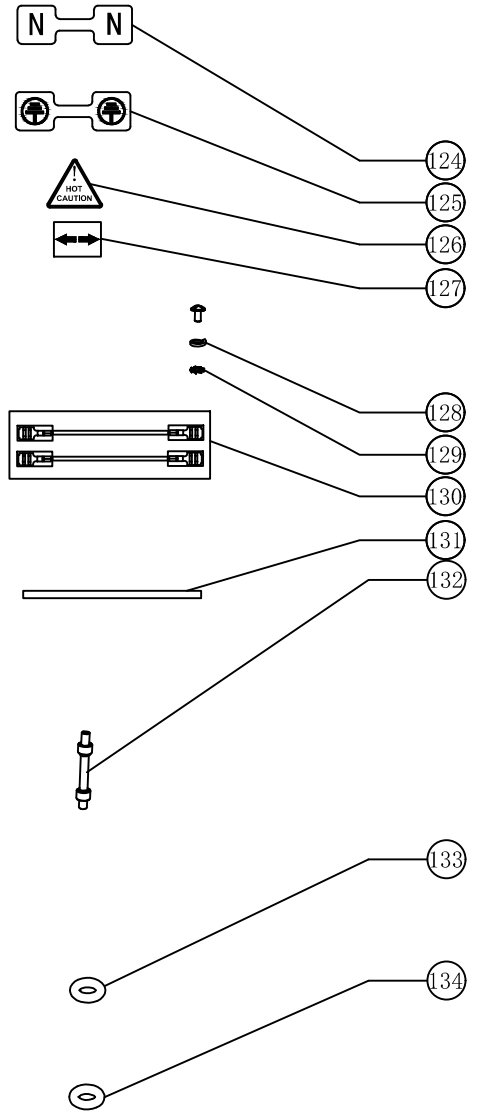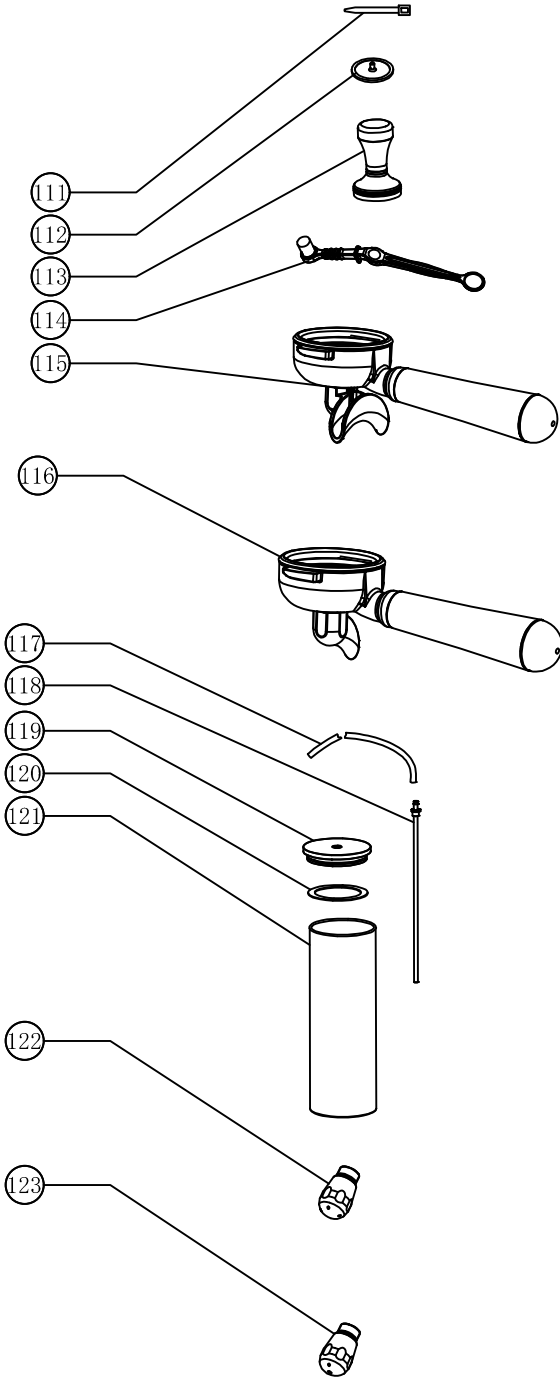  

Item Nr.	Name	Bellezza Codes	Selling Price
112	Cleaning pad	ZB.200.012	0,45 €
113	tamper	ZB.200.005	17,00 €
114	Brush	ZB.200.020	1,13 €
115	Double spout portafilter	ZB.200.002	55,00 €
116	Single spout portafilter	ZB.200.001	55,00 €
117	Tube	BE.005.001	0,75 €
118	Inlet pipe	BE.005.006	5,00 €
119	Tank cover	BE.005.007	16,25 €
120	Seal pad	BE.005.008	0,38 €
121	Water tank	BE.005.009	9,50 €
122	Steam nozzle 4 holes	IN.200.011	4,00 €
123	Steam nozzle 2 holes	ZB.200.010	3,75 €
131	Silicone tube	BE.005.005	1,45 €