CAFELLO


TUTTO Jnr.

QUICK START GUIDE

The Tutto is designed for ease of use making it ideal for busy locations where staff may not have the time to focus on preparing coffee. The Tutto grinds, tamps and brews!



CAFELLO **TUTTO** Jnr.

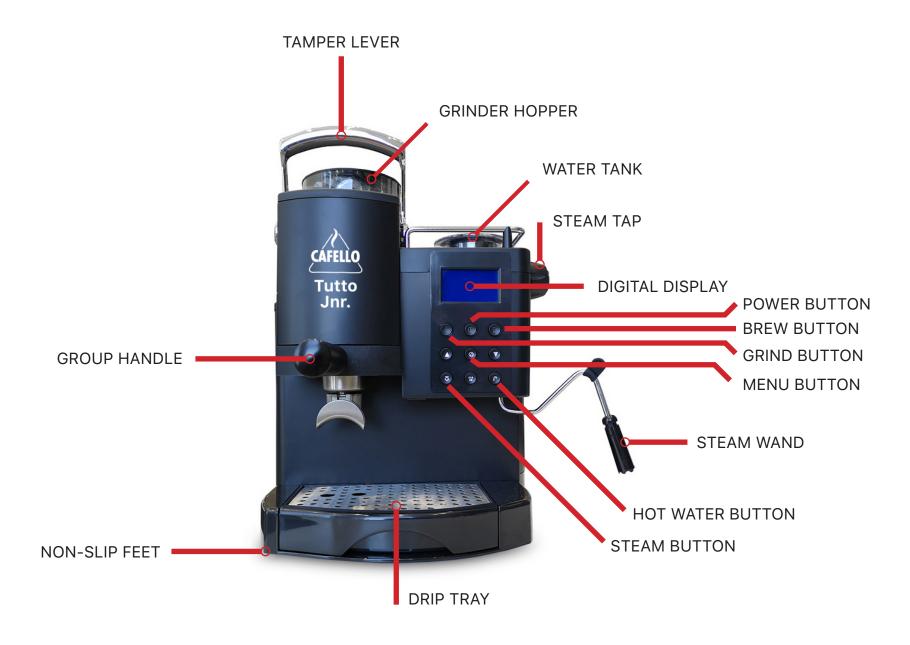

CAFELLO TUTTO Jnr.

TABLE OF CONTENTS

1 - 2 — SETUP

USING THE MACHINE

5 - CLEANING THE HANDLES

TROUBLESHOOTING

SETUP

THINGS YOU WILL NEED...

- 10 amp power supply (Standard wall outlet) to power machine
- Access to tap water or (filtered water recommended)
- Coffee beans

- Start by carefully unpacking the box with your new Tutto Jnr inside. Place the Tutto Jnr on a bench or where you wish to install it.
- Plug the machine into the power outlet.

SETUP

- Add tap water (filtered water recommended) to the water tank on the machine. (Water tank is detachable, to allow you to fill it).
- Press the power button to turn the machine on. Wait for the blue button to stop flashing (boiler heating up).
- **5.** Your Tutto should now be on and ready to make coffee.



Filtered water is recommended for the water tank.

USING THE MACHINE

- Make sure the tamper lever is in the UP position. You can
 now fill the hopper with coffee beans. You can adjust how
 coarse the grind is by rotating the hopper to the left or
 right. Only change the grind setting whilst the grinder is in
 operation to avoid any coffee getting jammed.
- 2. The blue button on the interface will flash to indicate the boiler heating up the water. Once the button stops flashing the water is hot and ready for brewing coffee.
- 3. After you have ground the coffee you can now pull down on the Tamper lever, then pull up the Tamper Lever and tamp once more to remove excess coffee from the chute. Leave it in the DOWN position.
- 4. Place a cup under the spouts of the group handle. You can

- now press the **D** button to start the coffee brewing.
- 5. Once the boiler is ready you will be able to steam milk by pressing button and then the interface will display a hour glass wait until this goes away. Now the steam is ready, turn the steam tap on to start steaming milk.
- (For hot water) Remove the handle and position your cup or jug under the brew head to pour hot water. Press the button and press again to stop.
- 7. Now slide the group handle into the front of the machine. You can now press the Grind button to grind directly into the group handle. To change the grind time navigate to the Grind menu, press the button to access the menu. Use the buttons to navigate the menu. You can then

USING THE MACHINE

change the amount of seconds the it grinds for.

- Once you have brewed a shot of coffee, position the tamper handle in the UP position. Remove the handle and discard the coffee grounds.
- To flush out the brew head, press the button. This function flushes out any coffee grounds left on the brew head.


CLEANING THE HANDLES



CLEANING THE HANDLES

STEP 2

Place Tutto Handle inside container of cleaner solution

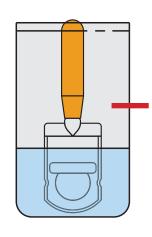

STEP 3

Make sure the solution is **not touching** the coloured part of the handle. (Can cause colour to fade).

STEP 4

Leave handle in solution to **soak overnight**.

STEP 5

RINSE THROUGHLY BEFORE USE

TROUBLESHOOTING

THE GRINDER

The grinder on your Tutto can sometimes build up with ground coffee which can stop it from working properly. If the grinder sounds like it is struggling to move, start by turning the grinder back to setting [1]. Press the grind button and let it run 3 times to allow any built up coffee grounds to be pushed out.

Now with the grinder running again, turn the grinder back to being finer one step at a time until you have reached your desired grind setting.

SETTING THE GRINDER

When setting the grind coarseness we find that setting [3-4] works the best. This can sometimes change depending on what type of beans you are using.

Set your grind time to be from 6 - 9 seconds. If there is too much coffee in the basket the tamper may not be engage properly. **Do not force the tamper down**. Set the Small Cup Volume to 30cc and the Large Cup Volume to 80cc.

TROUBLESHOOTING

UNBLOCK STEAM WAND

If the steam wand is not working and appears to be blocked. Turn off the machine, wait until the steam wand and nozzle to cool down. Now you can unscrew and take off the plastic nozzle and soak both the nozzle and the steam wand in a jug of hot water hot water for 20-30 minutes.

After 20-30 minutes take the nozzle out of the water, and use a pin or paper clip to unblock the nozzle holes. Now that the nozzle is unblocked, you can screw back onto the steam wand. You can now turn the machine on.

ADD WATER ERROR

When the 'add water message' appears on screen, it could be that the coffee grinds are to fine. The water cannot run through the coffee when coffee is to fine. Empty coffee grounds from handle basket. Adjust grind to a coarser setting and try again.

DESLAG

When the Deslag message appears on the machine. It just means "press any button" the message should disappear.

CAFELLO TUTTO Jnr.