



RGBSABER MANUAL

WARNING

This toy is not suitable for children under 13 years.

Children under the age of 16 years should always be supervised by an adult to prevent injuries.

Always act responsible, safe and respectful.

Fully Charge Saber Before Operating!

Use ONLY Included Cable with 5V Wall Charger

THE FIGHT FOR THE FATE OF THE GALAXY WAITS FOR YOU. WILL
YOU FIGHT FOR FREEDOM OR DOMINATION?

JEDI OR SITH? YOU DECIDE.

MAY THE FORCE BE WITH YOU!!!

Electronics kit and empty hilt available for DIY and OEM service

USER GUIDE

To wake the lightsaber:

Hold down power button for 1 seconds. A sound will play and the light ring around the power button will illuminate. The saber is now in awake mode.

Awake mode operation:

Pressing the power button will turn the blade on and activate sounds and effects.

When the blade is lit, the power button operates thusly:

BUTTON PRESS	BUTTON LED	ACTION
Tap		Blaster Deflection
Hold 0.5 second	LED flashes once	Saber Lock-Up
Hold 1 second	LED flashes twice	Cycle Rainbow Blade colours - when the desired colour is reached - tap the button to set colour
Hold 1.5 seconds	LED flashes 3 times	Cycle Solid Blade Colours - when the desired colour is reached - tap the button to set colour
Hold 2 seconds	LED flashes 4 times	Powers off the blade

When the blade is off, but the saber is powered on the power button operates thusly:

BUTTON PRESS	LED	ACTION
Hold 0.5 second	LED flashes once	Cycle volume settings
Hold 1 second	LED flashes twice	Select a new light effect (goes through stable, unstable and pulse)
Hold 1.5 seconds	LED flashes 3 times	Select a New Sound Font

At any time holding the power button for 10 seconds will put the Saber into sleep mode.

The Saber will also turn on sleep mode if it has been sat idle for 10 minutes

Sleep mode operation:

When the saber is in sleep mode there will be no lights or sounds to preserve battery power.

Features

- Strong enough for medium to heavy dueling. Has flash-on-clash effect for realistic saber duels
- Ultra loud sound volume and bright LED lights
- Removable blade: use the provided tool to loosen the screws in the hilt

- This saber has infinitely variable colors to choose from
- Sensitive swing and clash sounds like a "real" lightsaber
- Can connect two sabers directly into one double bladed saber (Remove one pommel)
- The saber have battery reverse connection, charging and discharging protection
- Playing and charging time take around 4 hours. **Please use 5V wall charger or devices with USB port to charge**
- Removable electronics kit, please ensure that all the screws are not loose and use the tools to tighten them if needed

Troubleshooting

Issue 1 - Saber has no sound

Saber may be in mute mode. Turn off the saber, then hold the button for 0.5 seconds to change sound volume.

Issue 2 - Saber does not light up at all, or has no swing or clash sounds

Charge the battery for one hour, as this is likely a low battery issue. Removing and reinstalling the battery may fix it if the issue is not related to charge.

