



# GUIDE FOR THE 2 BUTTON PROFFIE SABERS



# Instructions

## Standard Controls While Blade is OFF

Turn On / Ignite Saber = Click PWR

Turn On / Ignite Saber (Muted) = Double Click PWR

Change Preset (one at a time\*) = Click AUX

\*if pointing down will go to previous

NEW! Scroll Presets (using twist menu) = Long Click AUX

Turn Right (Stepped) = Next Preset

Increment by 5 = Hold PWR + Turn Right

Turn Left (Stepped) = Previous Preset

Increment by 5 = Hold PWR + Turn Left

Click PWR = Select Preset

Click AUX = go to First Preset

Play Track = Long Click PWR pointing up

NEW! Track Player\* = Long Click PWR parallel

Turn Right (Stepped) = Next Track

Turn Left (Stepped) = Previous Track

Click PWR = Play Current Track Once

Click AUX = Random (will play current track and then randomly select next tracks)

Hold PWR + Turn Right = Rotate (will play current track and then next sequential tracks)

Hold PWR + Turn Left = Loop Current Track

Long Click PWR = Stop Track Player

NEW Control! Volume Menu = Hold PWR, Click AUX

Turn Right (Stepped) = Increase Volume (to max)

Turn Left (Stepped) = Decrease Volume (to min)

Click PWR or AUX = Exit

Check Battery Level\* = Hold AUX, Click PWR

## NEW! Change Font

Next Font = Hold AUX + Long Click PWR (parallel or up)

Previous Font = Hold AUX + Long Click PWR (down)

## Optional Gesture Controls (if enabled and Gesture Sleep is deactivated)

### Ignite Saber



Swing On

Stab On

Twist On

Thrust On

NEW! Toggle Gesture Sleep\* = Hold PWR + Clash

\*toggles gesture controls on/off

### **Standard Controls While Blade is ON**

Turn Off / Retract Blade\* = Click PWR (Hold PWR\*\*)

Blast Effect = Click Aux

Multi-Blast Mode = Long Click Aux

Each Swing in Multi-Blast Mode will deflect Blast effect

To exit, click AUX or do Clash

Clash Effect = Clash Saber

Stab Effect = Stab (thrust and impact tip of blade on object)

Lockup Effect = Hold PWR + Clash Saber (Hold AUX\*\*)

Drag Effect = Hold AUX + Stab Down

Melt Effect = Hold AUX + Stab Parallel or Up

Lightning Block Effect = Hold PWR + click AUX

NEW! Force/Quote = Long Click PWR (parallel or down)

If quotes exist in current font pointing straight down will toggle between Force/Quote and play

\*Quotes play sequentially 1,2,3...

If parallel will do Force/Quote based on current mode

Start/Stop Tracks = Long Click PWR (pointing straight up)

\*default track only (use Track Player while OFF to select tracks or playback modes)

Color Change = Hold AUX + Click PWR (parallel or down)

Rotate Hilt to select color (unless ColorChange click to Change style is active)

Click PWR to save

NEW! ColorWheel "Zoom"\* = Hold PWR, Release to Save

\*While in ColorWheel you can Hold PWR down to zoom in color for easier selection

NEW! Change Style (All Blades)

Next Style = Hold AUX + Long Click PWR (parallel or up)

Previous Style = Hold AUX + Long Click PWR (down)

Multi-Phase Preset Change\*



Hold AUX + Twist = Next Preset  
Hold PWR + Twist = Previous Preset  
Optional Gesture Controls (if enabled)  
Retract Blade  
Twist Off

"Battle Mode" Controls\* - While ON  
Enter/Exit Battle Mode = Hold AUX until sound effect plays

If blade stops/slows on clash the saber will initiate Begin Lockup  
To perform a "clash" do an immediate Pull Away this will transition from Begin Lockup to  
End Lockup in quick succession

To Lockup, steady the blade after Clash

To end Lockup do Pull Away

Drag / Melt = controlled by gesture

Stab (thrust with impact at tip of blade)

If pointing down Drag will initiate

To end Drag pull blade up from floor at an angle

If parallel or up Melt will initiate

To end Melt pull blade away from object at an angle

Blast Effect = Click AUX

NEW! swing within 2 seconds to enter Multi-Blast Mode

Multi-Blast Mode = Long Click AUX

Each Swing in Multi-Blast Mode will deflect Blast effect

To exit, click AUX or do Clash

Lightning Block = Hold PWR, Click AUX

Force Push\* = Push Saber

NEW! Force/Quote = Long Click PWR (parallel or down)

If pointing down will toggle Force/Quote mode and do Force Effect or play Quote accordingly

If parallel will do Force/Quote

Start/Stop Tracks = Long Click PWR (pointing up)



## **Rehearsal / Choreography Modes\***

Begin Rehearsal\*\* = While Off, Hold AUX + Twist

\*\*If a Saved Rehearsal Exists it will prompt you to "Replace?"

To confirm Turn the hilt Right (Clockwise) to "Accept" and Click PWR to begin a new Rehearsal

To keep saved rehearsal Click AUX and Rehearsal Mode will be cancelled.

Saber will Ignite in Rehearsal Mode

In Rehearsal Mode, standard Clash and Lockup controls are used to record sequence

Clash = Clash

Hold PWR + Clash = Lockup

Rehearsal will also record the sound files used for each effect to repeat in Choreography

Cancel Rehearsal Mode = Hold AUX

Save Rehearsal = Hold PWR

Begin Choreography = While Off, Hold AUX - or - Hold AUX + Swing

During Choreography Mode Clashes, Lockups and sound files are replayed in sequence

When recorded sequence completes the saber goes into Battle Mode automatically

During Choreography PWR button is disabled

Turn Off = Hold AUX + Hold PWR

## **Edit Mode\***

Enter Edit Mode = While Off, Hold AUX + Hold PWR

While in Edit Mode controls are as follows:

Rotate Forward, Increase Value, Confirm "Yes" = Turn Right (Stepped)

Increment by 5 (Fonts, Tracks, Blade Length) = Hold PWR + Turn Right

Rotate Back, Decrease Value, Confirm "No" = Turn Left (Stepped)

Increment by 5 (Fonts, Tracks, Blade Length) = Hold PWR + Turn Right

Select, Save, Enter = Click PWR

Cancel, Revert, Go Back = Click AUX

Go to Main Menu (from sub-menu) - Hold AUX

Exit Edit Mode - Hold AUX (or rotate to "Exit") while in Main Menu



"Edit Color" Additional Control  
"Color List" and "Adjust Color Hue" Zoom Mode = Long Click PWR

