

ACTIVATE SABER: hold button for 2 seconds TURN ON SABER/IGNITE: click button once

## WHILE SABER BLADE IS OFF:

**ADJUST VOLUME**: hold button 0.5 second/button led flash one time/countdown sound one time, then release

**CHANGE LIGHT EFFECT**: hold button 1 second/button led flash two times/count down sound two times, then release

**CHANGE BLADE MODE**: hold button 1.5 seconds/button led flash three times/count down sound three times, then release

**CHANGE TO LAST FONT**: hold button 2 seconds/button led flash four times/count down sound four times, then release

**CHANGE TO NEXT FONT**: point down hilt and twist (counterclockwise and then clockwise)

**PLAY MUSIC**: point up hilt and twist (counterclockwise and then clockwise)

## WHILE SABER BLADE IS ON:

LOCK UP: hold button and clash hilt

**DRAG**: hold button 0.5 second/button led flash one time/countdown sound one time, then release

**INFINITE COLOR CHANGE**: hold button 1 second/button led flash two times/countdown sound two times, then release

**STANDARD COLOR CHANGE**: point down hilt, hold button and twist (counterclockwise and then clockwise)

**TWIST COLOR CHANGE**: point down hilt, hold button and twist (clockwise and then counterclockwise)

**FORCE EFFECT**: point up hilt, hold button and twist(clockwise and then counterclockwise) **BLASTER/BLASTER DEFLECT**: click button

STAB: thrust the hilt forward

SPIN: spin the hilt quickly

MELT: hold button, and stab hilt (twist to change melt color)

LIGHTNING BLOCK: hold button and pull hilt inwards

**MULTI LOCK MODE**: Enter into LOCK UP first, then hold the button 0.5 second/button led flash one time/countdown sound one time, then release. Same control to exit mode. **MULTI BLOCK MODE**: hold button and swing saber. Same control to exit mode. **TURN OFF SABER**: hold button 1.5 seconds

**DEEP SLEEP/DEACTIVATE SABER**: hold button 10 seconds, after saber blade is off **PIXEL TO RGB/RGB TO PIXEL**: hold button 13 seconds when saber blade is off