

# AmaMedic

## AM-919 Foot Massager



Thank you for purchasing our foot massager!  
Please read the user manual carefully before using  
and pay special attention to safety instructions for  
proper operation and use of the product.

This manual provides users with safe and efficient  
approaches of operation, so please properly retain it  
for future reference and inquiries after reading.

Table of contents

Safety Instructions

Warranty

Product Components

Features and Use Diagram

Settings

Specifications

Troubleshooting

Maintenance

# Safety Instructions

---

## a) Important Safety Instructions

- Be sure to read the user manual in a detailed way prior to use to ensure safety and proper use of the product.
- Make sure to use the product by following the instructions in this manual
- After using or before cleaning the product, please disconnect to the power.
- Always cautiously use the heating function to avoid serious burns.
- Do not apply the product to too insensitive and over sensitive skins or to body parts of poor blood circulation.
- Never allow children or those of physical and mental disorders to use the heating function or improper operation may be dangerous.
- To prevent fire, electric shock or injuries caused by overheating, never use it under a pillow or a blanket.
- Do not cover it during using so as to avoid malfunction or damage resulting from motor overheating.
- Children, those of physical and mental disorders and the disabled should be under guidance when using the product.
- Please stop using immediately if you feel uncomfortable.
- When the power cords or plugs are damaged, inappropriate operation is performed and the product has been dropped or damaged or dropped into water, do not use this product. Please contact the service center for inspection and repair.
- Do not use spare parts that are not recommended by the manufacturers.
- Do not insert or drop objects into any opening of the product.
- Please close all operational controls before disconnecting the product to the power if you want to cut off the power.
- This product cannot be used for self-diagnosis or treatment and please visit professional medical care if in need of diagnosis or treatment.

## b) Use Environment

- Do not use the product in a wet or dusty environment in order to avoid product failure.
- Do not use this product at room temperature over 40°C.
- Do not use the product outdoors.
- Do not use the product next to an electric heater or stoves or in direct sunlight.

# Safety Instructions

---

## c) People Not Recommended Using the Product

- Please consult your doctor before using if you have the following situations
- Receiving medical treatment or experiencing physical discomfort
- Suffering from cancer
- Pregnant or in a period
- Suffering from osteoporosis
- Using a pacemaker or implantable medical devices
- Suffering from acute diseases
- Minors

## d) Buttons

- Do not operate the button with wet hands.
- Keep the buttons from water or other liquid.
- Do not fall asleep when using the product.
- Do not use this product when you are drunk or feeling uncomfortable.
- Do not directly contact the massager pad with your hands, feet joints, knees, chest and abdomen.
- Do not use this product over thirty minutes in a row.
- Do not use if the product's cloth cover has been damaged.
- Do not use the product one hour before and after eating so as to avoid adverse effects.
- Do not enable the heating function when the product is being used in a low room temperature. It is recommended that you should gradually adjust the temperature to a normal range before enabling heating.
- If the product is used immediately after being transferred from a cold environment to a warm environment, the accumulation of water vapor inside the product may affect the normal operation of the product or even cause mechanical failure. You are suggested to put the product in a normal room temperature for 1 hour before starting to use it after the transfer.

# Warranty

---

1. Warranty is not transferable.
2. Users can enjoy free warranty from the date of purchase during the warranty period (The surface is not covered under warranty.)
3. Product warranty is valid for one year.
4. Please present the original proof of purchase and warranty card when applying for warranty service.
5. The purchasing date shall be based on the effective receipt or invoice issued by the retailers.
6. This warranty shall not apply to leasing, trade, commerce, institutions and other non-buyer users.
7. The following situations are not covered by the warranty and only paid service are provided (charging labor costs and material costs)
  - (a) Destruction caused by human factors, including the non-normal using environment, usage and storage that are not compliant to the instructions, and damage caused by improper use, etc.
  - (b) Disassemble, repair and modification of the product without our authorization.
  - (c) Damage caused by users' poor transportation after purchase;
  - (d) Damage resulting from any other force majeure (such as flood, fire, lightning and earthquakes).

# Product Components

---



- (1) Central Surface: four independent buttons—controlling the product's settings and functions
- (2) Central Massager Pad: Scratching—Acupressure on the arches with heating.
- (3) Front Massager Pad: Roller Kneading—Acupressure on the front soles
- (4) Rear Massager Pad: Push Kneading—Acupressure on the heels
- (5) Interior airbag—Air pressure on the insteps
- (6) Removable and washable fabric cover—cleaning
- (7) Bottom: Cord Wrap—keeps things tidy

# Features and Use Diagram

---

## Product Features

- Egg-shaped design, fashionable and beautiful, lightweight and portable;
- A combination of a variety of functions including scratching, roller kneading and push kneading acupressure, air pressure and heating;
- Massager Pad that provides all-around massages and in-deep acupressure to clear the body's meridians and foot reaction zones;
- Removable and washable cover, allowing you to keep clean at any moment;
- Cord Wrap, bringing convenience to life.

## Use Diagram



# Settings

---



Time: Adjust the massage time



Mode: There are three modes, P1 is the positive kneading massage mode, P2 is the reverse forward kneading massage mode, and P3 is the air pressure massage mode.



On/off: open or close the machine



Heating: During work, the heating function makes you feel more comfortable.



Level: There are 5 Level to make stronger or not. L1, L2, L3, L4, L5.

## a) Before use

- Check the product for any damage.
- Ensure a stable and comfortable use environment.

## b) Use

1. Untie the power cord and connect to power of 220V/50Hz
2. Default Settings.

- Press the Power Button ONCE, and the heating function is ON in a blue indicator; the Intensity is low in a blue indicator, and the product is on Mode 1 in a blue indicator.
- Press the Power Button ONCE, then press the Heating Button ONCE, and the heating function will be OFF as the blue indicator goes off.
- When the product is in operation, press the Intensity Button to switch between the two types of intensity. Blue light indicates high and low intensity.
- When the product is in operation, press the Mode Button to switch between two Modes. Blue light indicates Mode 1 and blue light indicates Mode 2.



# Specifications

---

Name	
Rated Voltage	110V-220V
Rated Power	45W
Standards	GB 4706.1-2005
	GB 4706.10-2008
Timer	15 minutes

# Troubleshooting

---

Please refer to the following several tips and possible solutions if problems occur during usage of this product. The product may be returned to the service center or undergone inspection and repair by authorized technicians.

Problems	Possible Causes	Remedies
Not working	<ol style="list-style-type: none"><li>1.Unplugged</li><li>2.Power button not pushed</li></ol>	<ol style="list-style-type: none"><li>1.Connect the product to power or check whether or not the product is well-connected</li><li>2.Push the power button</li></ol>
Suddenly stops running	<ol style="list-style-type: none"><li>1.Power disconnection</li><li>2.Operation duration over 15 minutes</li><li>3.Product overrun and overheat</li><li>4.Too much operating pressure that the massage balls stop rotation</li></ol>	<ol style="list-style-type: none"><li>1.Check whether or not the product is well-connected</li><li>2.Restart the product</li><li>3.Restart the product after cooling</li><li>4.Restart the product</li></ol>

# Maintenance

---

## a) Storage

- The product should be put into the color box and stored under safe, dry, well-ventilated and cool condition when it is not in use.
- Do not twist switching the power button and the cord.
- Do not hang the product with the cord.
- Avoid scratching by sharp objects on the surface of the product.
- Do not put the product in direct sunlight or under condition of high temperature.

## b) Cleaning

- Make sure the power button is off and unplug the power cord before cleaning.
- Use a dry cloth to clean the surface of the product.
- Do not hang the product with the cord.

## Note

- Do not use corrosive detergents, such as benzene or thinner, to clean the product.

## c) Maintenance

- Keep the product clean and away from high humidity conditions.
- Please use a dust cover (not included in the box) to cover the product to prevent dust from coming into it if it is not used for a long period of time.