

HomeCourse Golf Screen **Instruction Guide**

 
Welcome to HomeCourse. A video tutorial on installing the unit can be found at www.homecoursegolf.com.

Contents:

1. Home Course Golf Screen Unit X 1 Pc
2. Ceiling Wood Bolts X 2 Pc (M10 X 80mm)
3. Telescopic Rod X 1 Pc
4. Ceiling Mount Bracket X 4 Pcs
5. Extension Bracket X 2 Pcs
6. Ceiling Mount Screw & Nut X 8 sets (M10 X20mm)
7. Remote Control X 1 Pc
8. Button Cell for Remote Control (CR2450 - 3V) X 1 Pc
9. AC/DC Charger X 1 Pc
10. Fabric Target X 1 Pc (Detachable from the screen)
11. Instruction Manual X 1 Pc

Please read carefully before installing the unit:



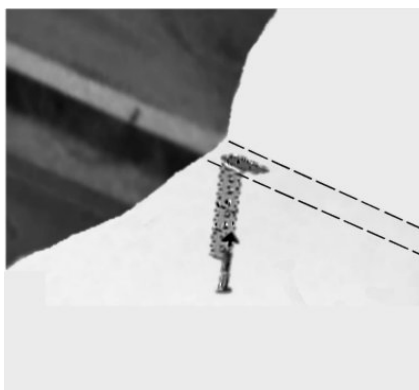



- The unit must be installed to a ceiling stud or wall stud (do not use wall anchors or mollies).
- To ensure the unit is secured to an area that can hold the weight of the unit (approximately 70 lbs./32kg) it must be mounted to a ceiling stud or wall stud.



- To prevent unnecessary damage, the operating and maintenance of the screen should be conducted by adults.
- Make certain the screen is level when installing.
- If the voltage of the built-in battery is low, the motor will stutter back and forth 10 times, To recharge the battery, use the provided charger and insert the tip into the indicated recharging port located at the right end cap of the unit.
- The screen ascending and descending limits are preset to an optimum configuration. Please contact us or visit HomeCourse website www.homecoursegolf.com to adjust the [setting](#).

Please read the following as any damage to the screen surface will affect the quality of the projected picture:

1. Do not write or draw on the screen surface.
2. Clean the screen with a soft cloth and lukewarm water. Do not use any detergent or cleaning products on the screen. Make sure the screen is fully dry before rolling the unit back into the housing.

 Ignoring the safety warnings may lead to injuries and/or damaging the product.	 Fixtures should be installed in a secure place to avoid accidents or the screen falling.
 Do not connect any electrical attachments or remote controls.	 Roll up the screen after every use. Leaving it hanging for a long period of time may cause the fabric to loosen.
 Please contact our company for repairs or maintenance. And if you have any further questions. Avoid taking apart the fixtures yourself. Loose parts may cause the screen to fall.	 Refrain from hanging anything on the screen as it may cause the screen to fall.

 
 
 
Do not take apart and replace with unknown parts. If there are any problems, please contact our company. Product specifications are subject to change.

Installation

The HomeCourse Golf Screen should be installed in the best possible location for the player. Consider your golf swing and make certain it is free and clear of obstructions. Take out all parts from the packaging and check the contents to ensure you have all parts noted on contents list above. The parts needed for installation vary and depend on which installation you choose to use. For installation on a ceiling, affix to a stud using the 10mm X 80mm wood bolts.



Step 1: Identify Screen Location

- Determine the best location for the screen. An area with a ceiling height of between 8 ft. and 9 ft. is recommended.
- Screen should be at least 20 inches away from wall (to avoid bounce back), with a minimum width of 128" (10'8").

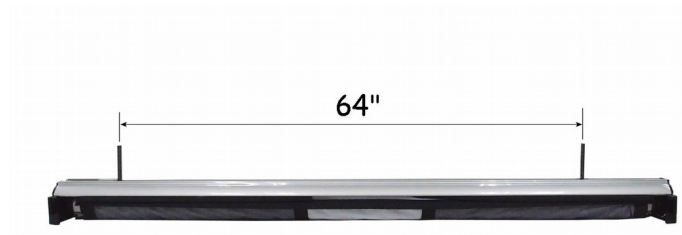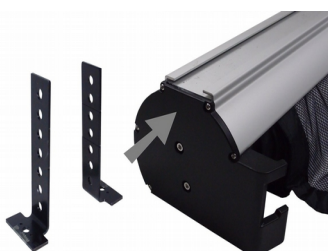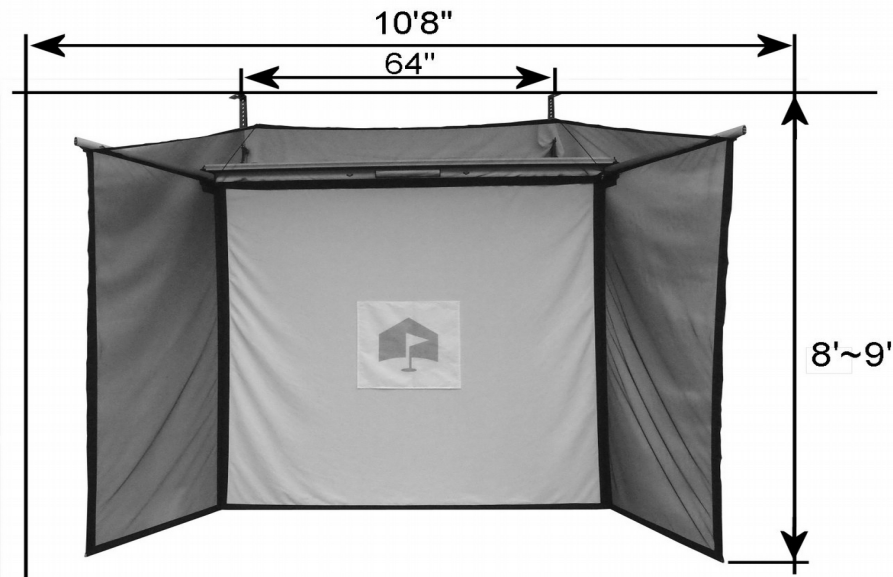

Step 2: Mounting to Ceiling

  1. Locate the ceiling beams. It is recommended you use a stud detector.
2. Using a tape measure, locate the two ceiling mount brackets at a distance approximately 64" apart. Each mounting bracket should be centered on a ceiling beam. Drill holes at the corresponding positions on the ceiling. The first hole should be at least 32" from the wall. Use standard recommended size of drill bit.
3. Use a proper socket wrench or crescent wrench to install two ceiling mounting brackets onto the ceiling.
4. Slide-fit the corresponding two ceiling mounting brackets into the rail at the top of the screen cover. Then hold the screen unit and adjust the two lower ceiling mounting brackets to line up with the upper ceiling mounts and use provided bolts and nuts to lock them together. Two sets of bolts and nuts should be used each side to fix the screen unit firmly. Please ensure the unit is mounted to the best horizontal position.
5. Use extension brackets when the ceiling is more than 8'9" above floor.

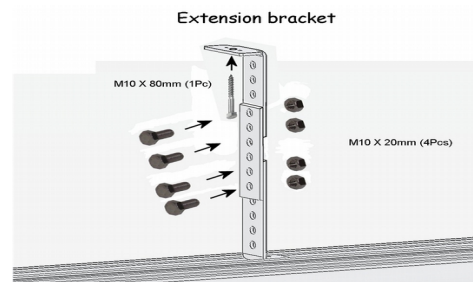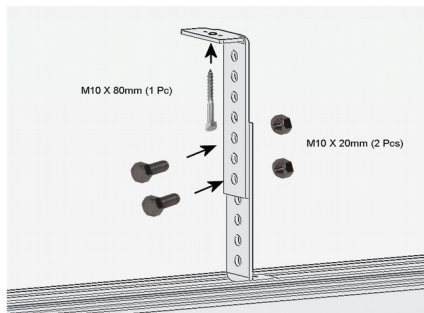


Step 3: Operating the Unit

1. Please charge the battery for 4 hours prior to the first use. Once the screen is fully charged, the signal lamp will change to green. Please charge the battery as needed, or about every 6 months.



 2. To use the remote control, insert the button cell battery (included) following the correct polarity, and close the cover.
3. To lower the screen press the "down" button/arrow on the remote control.

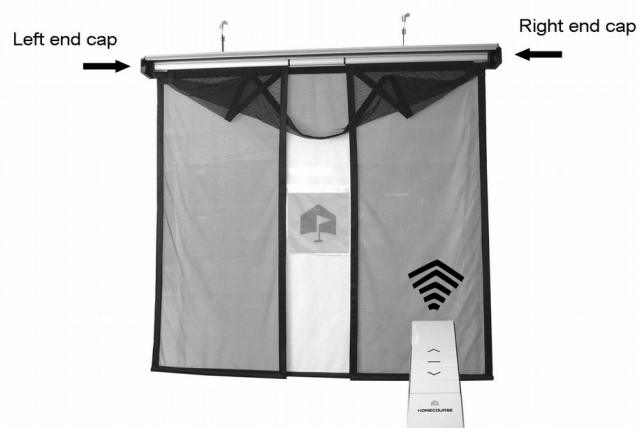

- The two pro-arms (side nets) are magnetically locked to the screen tube. To open the side net, adjust the telescopic rod (included) and insert the handle into the material loop on the top of the net (see image below). Pull the side pro-arm net out to the open position and lift the pro-arms onto the stabilizing hook located on the left and right side of the end caps. The sky netting (top of the net) will automatically expand.

Telescopic Rod



Material Loop



Hook for Side Netting

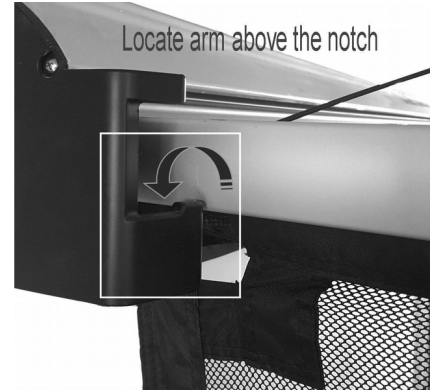 


Image of Opening Side Arm Netting



- When opening the second side pro-arm net, do not push or force the pro-arm too high to avoid dislocating the first pro-arm (which has already placed above the hook on the end cap).
- Before closing/retracting the screen, use the telescopic rod to lift the pro-arm out of the stabilizing hook and return the pro-arms to the original closing position. Verify the pro-arms are fully locked in place to the magnet before closing the screen.
- Press the "up" button/arrow on the remote control to roll up the screen.

CAUTION: To avoid damaging the unit, it is important to ensure the pro-arms are affixed to the magnetic locks on the screen tube before rolling up the unit. This will help maintain the unit.

When closing the side nets, if the Pro-Arm fails to engage with the magnetic lock, it (usually the later closing one) may droop and dislocate the ascending limit. To reset this, re-open both Pro-Arms and position them onto the stabilizing hooks again and then close the unit as usual.

The factory warranty will be voided if the unit is abused, such as, operating the unit while in the open position.