



DAYBREAK TIMER QUICK START GUIDE

All of us from Orbit® would like to thank you for choosing the Daybreak timer. You have made a smart decision and we are sure that you are going to love this product! Your timer has two unique ways to be set:

USING THE **DAYBREAK** SIDE

Choose to water **Every Day** or **Every 2 Days** in **5, 15, 30,** or **60** minute increments. Once this side is selected the timer will automatically turn on at sunrise. This will help you water during the most optimal time of day to water.

|| **HELPFUL HINT:** Watering at sunrise helps avoid creating an environment susceptible to fungus and bacteria and reduces water waste as a result from evaporation.

USING THE **SET TIME** SIDE

Choose to water **Every Day** or **Every 2 Days** in **5, 15, 30,** or **60** minute increments. The timer will note the exact time at which you set it and will water at this same time until you change the timer settings by turning the dial. Choose this side to select your preferred watering time.

|| **EXAMPLE:** If you set your timer at 7:08 am to water every day, then your water will turn on at 7:08 am each morning going forward.

USING **ON/OFF**

Using **ON** or **OFF** will reset the timer and you will need to rotate the dial back to **DAYBREAK** or **SET TIME** to start automatic watering again. **DAYBREAK** will water as normal. **SET TIME** will water at the new set time.

Choose **ON** to manually water at the faucet. Choose **OFF** to stop using the timer.

LIGHT INDICATOR

The light indicator will **flash green** while changing dial settings. Resting the dial in a position for three seconds will confirm the selection and will show as a **solid green** light.

The light will **flash red** when the batteries are low and ready to be changed.

HELPFUL HINT: Watering too little each day can lead to shallow grass roots. Overwatering can reduce oxygen supply to your lawn and cause the grass to stress.

2 AA batteries required, sold separately.

WARNING



When expecting freezing temperatures, timers should be removed from the hose faucet and stored indoors to avoid potential freeze damage.



Filter traps dirt particles, prolonging life of timer. Clean filter regularly and replace if worn.

Pressure Operating Range: 10-100 PSI
Temperature Operating Range: 35-120°F (0-48°C)

For Outdoor Use with Cold Water Only.

Not For Use with Appliances.

Do Not Mix Alkaline, Standard (Carbon-Zinc), or Rechargeable (Nickel Cadmium) Batteries.

Used up or dead batteries must be removed from the timer and disposed of properly.

Do not dispose of batteries in fire.

Batteries may explode or leak.

Visit us at:



orbitonline.com 