

CONAIR® FASHIONCURL™



Instructions

Model: C910 Series

READ THESE SAFETY PRECAUTIONS CAREFULLY BEFORE USING THE UNIT!

SAFETY PRECAUTIONS

WARNING: the polyethylene bags over the product or its packaging may be dangerous. Keep these bags out of the reach of babies and children.

Never use them in cribs, children's beds, pushchairs or playpens. The thin film may cling to the nose and mouth and prevent breathing. A bag is not a toy.

WARNING: do not use over or near washbasins, bathtubs, showers or other containers with water. Store the unit in a dry place.

- If you are using the unit in a bathroom, unplug it after you have finished using it. Using the unit close to a source of water can, in fact, be dangerous, even if the unit is switched off. To ensure additional protection, have installed in your bathroom a residual current device (RCD) with a nominal trip current no higher than 30 mA. Ask your electrical fitter for advice.
- Never immerse the unit in water or any other liquid.
- If the power cord is damaged, it must be replaced by the manufacturer, its aftersales service or a similarly qualified person to avoid a hazard.
- Do not use the unit if it has fallen or if it appears to be damaged.
- Do not leave the unit unattended when it is plugged in or switched on.



- Unplug the unit immediately if you have problems when using it.
- Do not use any accessories other than those recommended by Conair.
- Unplug the unit after each use and before cleaning it.
- Avoid any contact between the unit's hot surfaces and your skin, in particular, your ears, eyes, face and neck.
- This appliance is not designed for use by persons (including children) with physical impairment, sensory or mental capabilities, or lack of experience and knowledge, unless they have been supervised or instructed in the use of the appliance by a person responsible for your safety. Children must be supervised to ensure that they do not play with the appliance.
- Allow the unit to cool before storing.
- To prevent damage to the cord, do not wrap it around the unit and ensure it is stored without twisting or folding it.
- To reduce hazards, damaged power cords must be replaced by the manufacturer or an authorized service center.
- This appliance is not a toy. Keep away from children.
- Burning danger. Keep the appliance out of the reach of small children, especially during use, and cool it down.
- When the appliance is connected to the power supply, never leave it unattended.
- Always place the appliance with the stand, if any, on a flat, stable, heat-resistant surface.

END-OF-LIFE ELECTRICAL AND ELECTRONIC EQUIPMENT

In everybody's interest and to participate actively in protecting the environment:

- Do not discard your products with your household waste.
- Use the return and collection systems available in your country. Some materials can in this way be recycled or recovered.



TO CURL HAIR

Hair should be clean, completely dry and combed before you use the curling device. Plug into an electrical outlet and turn on the switch. **The red LED will blink while Conair FashionCurl™ is heating up. Red light must stop blinking and be steady before curling hair.**

WARNING: The styler's tourmaline ceramic-coated curl chamber will get very hot within a few seconds and should not be placed in contact with the skin after the styler has been turned on.

The secret to Conair FashionCurl™ is how easy it makes creating the perfect curl – one after another! Hair goes in, curl comes out. It's that simple. For best results, start with freshly washed and dried hair. If you are curling the lower layers first, you might want to clip some hair out of the way.

TO CURL HAIR (cont.)

Remember: Before starting, make sure the temperature indicator light has stopped blinking.

1. Begin by carefully combing through hair to smooth it. Then take a ½ in. to 1 in. section (Fig. A).



 
2. Please note the styler must be positioned into the hair with the opening of the curl chamber facing toward the head (Figure B).



3. Position the styler where you want the curl to start. The hair section must be straight, and placed neatly through the center of the hair guide (Fig. C and D).



4. Once the hair is in place, let go of the hair section and close the handle to allow the hair to be automatically taken into the curl chamber (Fig. E).



5. A series of beeps will sound, and once you hear a rapid succession of quick beeps, you know your curl is ready. Open the Conair FashionCurl™ and gently pull it away from the head to release a perfect curl (Fig. F)! Let it cool in place for a minute to set the curl. Quick heat-up and recovery, and Conair FashionCurl™'s fully automatic curling technology, let you make consistently perfect curls – one after another – effortlessly!

ARGENTINA WARRANTY

Congratulations! You have purchased a guaranteed CONAIR product.

Warranty conditions:

1. The warranty is valid for 12 months from the date of purchase. To make it effective, you must submit the purchase invoice, which must be within the warranty period.
2. The warranty only applies to proven manufacturing defects. The product will be inspected and will be exchanged and/or repaired free of charge only if it presents an electrical or mechanical manufacturing defect within the warranty period.
3. The warranty does not apply:
 - 3.1. If the product has been opened, disassembled or repaired by unauthorized personnel. The product should only be opened, inspected and/or repaired by the network of Authorized Service Technicians.
 - 3.2. If the product has been used other than for domestic/household use, and/or for purposes for which it has not been designed.
 - 3.3. If the damages are not manufacturing defects but damages caused by: impact, spills or spill residues on parts, insects, or any other external factors, as demonstrated during inspection; as well as damages caused by misuse, contrary to what is stated in the instruction manual.
 - 3.4. If the damages or failures were caused by accidents, unforeseen or deliberate causes, electric shocks, voltage fluctuations and/or voltage 10% greater or lesser than the one indicated on the product's rating plate.
 - 3.5. If the damages or failures were caused by accessories and parts broken or damaged during improper use of the product.

It's a revolutionary new way to curl your hair. Fast, easy, and always perfect, curl after curl. For more styling tips and instructional videos, visit www.curlsecret.com

NOTE: If you continue to hold the hair section after closing the handle, Conair FashionCurl™ will stop and beep to indicate that you must release the tension on the hair. If you have taken too much hair, or hair is not neatly going through the center of the chamber, the Conair FashionCurl™ will again stop and beep to indicate a problem. This safety feature ensures there will be no tangles.

MOST IMPORTANT: If hair does get tangled, unplug the unit and gently work the hair out of the unit. Take very small strands one at a time and slowly remove from the chamber. If hair is stuck outside of the tool with your fingers removing small sections at a time. Make sure fingers do not come in contact with heated chamber.

• The hair is automatically drawn into the ceramic curl chamber, where it is softly held and heated from all directions to effortlessly form the curl.

• The automatic beep indicator will start as soon as the handles are closed together. There will be a series of individual beeps. Hold the styler still, with the handles held together, until the end of the individual beeps. There will then be four quick beeps in succession. This indicates that the time is up and you can remove the styler from your hair.

NOTE: Always release the handles first to set the curl free; if you pull away before you open the handles, the curl will be straightened out.

• To allow the curl to set, do not comb or brush the hair until it cools.

• Repeat around the head until you have the amount of curls desired.

NOTE: Do not use this styling appliance on hair extensions.

ADDED FEATURES

Conair FashionCurl™ comes with 3 functions for added safety and energy savings:

 
Auto Shut-Off: If the appliance is switched on for more than 60 minutes continuously, it will automatically switch off. If you wish to continue using the appliance, simply slide the switch to the OFF position and then slide the switch to the relevant setting to turn the power on.

Sleep Mode: Energy efficient – after 20 minutes of idle time, temperature drops to around 170°C/340°F.

Motion Sensor: Ends sleep mode and reheats to selected temperature when handle is closed.

NOTE: Curl chamber will be hot to the touch.

GETTING TO KNOW YOUR CONAIR FASHIONCURL™

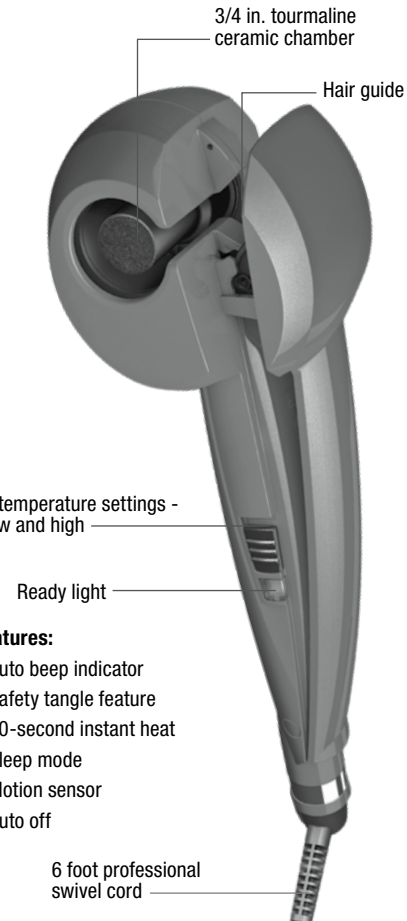

Features:

- Auto beep indicator
- Safety tangle feature
- 30-second instant heat
- Sleep mode
- Motion sensor
- Auto off

Effortlessly create long-lasting beautiful curls, with Conair FashionCurl™. Hair is automatically drawn into the tourmaline ceramic curl chamber where it is softly held and heated from all directions to effortlessly form the curl. Then, simply release. The result is beautiful, free-flowing curls.

GETTING STARTED

The styler's two unique high-heat temperature settings and Instant Heat technology provide styling versatility for all hair types. If you have fine hair, the lower temperature will provide the best results. If you have thick, wavy or hard-to-curl hair, keep the heat setting on high. Create a variety of curls based on two temperature settings.

| CURL TYPE | TEMP. CONTROL |
|--------------------|---------------|
| LOOSE CURLS | LOW |
| MED. - TIGHT CURLS | HIGH |

THE NEW TOURMALINE CERAMIC EASY-GLIDE STYLER

The Conair FashionCurl™ has a tourmaline ceramic easy-glide coated surface, the newest technology. This means it's not only simpler to clean off styling product residue, etc., after each use, but you'll find that hair glides easily over the coated surface of the curl chamber as you're curling. The tourmaline ceramic coated surface also helps smooth down flyaways and frizzies.

It evenly distributes heat so that the style you create has a salon-perfect, silky smooth, shining finish. Hair also slips right through the curl chamber after it's curled. The new Tourmaline Ceramic™ technology makes styling your hair easier and the results more professional. Never leave your styler on and unattended. However, should you fail to turn the styler off, it will shut itself off automatically within 60 minutes.

USING INSTANT HEAT, THE 2 TEMPERATURE SETTINGS & UNIFORM HEAT RECOVERY SYSTEM

This styler features a high-performance heater that maintains constant temperature during use for precision styling. This Instant Heat technology has two temperature settings. There is a temperature that's gentle and safe for every type of hair, from the finest to the curliest and most resistant, and helps you create the look you want. And that's not all. Conair's professional salon standards of engineering provide you with a uniform and improved heat recovery system that maintains the styler at constant temperatures. There is a constant surge of power to ensure that heat is continuously and quickly delivered for optimal styling results, unlike other units, which lose heat during use. This provides consistent styling power so that every strand of your hair is set with the same level of heat and comes out the same way for a perfect finish.

Conair FashionCurl™ is energy efficient. The sleep mode function drops the styler's temperature to 340°F (170°C) if styler remains idle after 20 minutes. And auto shut-off turns the Conair FashionCurl™ off after 60 minutes.

USER MAINTENANCE

Your styler is virtually maintenance free. No lubrication is needed. Keep all vents and openings clear of dirt and dust. If cleaning becomes necessary, disconnect the unit from the power source, allow to cool and wipe exterior with a cloth. If any abnormal condition occurs, unplug the unit, allow it to cool, and return it for repair to an authorized service representative only. No repairs should be attempted by the consumer.

CAUTION

 
NEVER allow the power supply cord to be pulled, twisted, or severely bent. Never wrap the cord tightly around the appliance. Damage will occur at the high flex point of entry into the appliance, causing it to rupture and short circuit. Inspect the cord frequently for damage. Stop use immediately if damage is visible or if unit stops or operates intermittently.

STORAGE

When not in use, your appliance is easy to store. Allow appliance to cool, then simply store out of reach of children in a safe, dry location. Do not jerk or strain cord at plug connections. Do not wrap the line cord around the appliance. Allow the cord to hang or lie loose and straight at the point of entry into the appliance.

WARNING:
IF YOU THINK
THE POWER IS OFF
WHEN THE SWITCH
IS OFF,
YOU'RE WRONG.

KEEP AWAY FROM WATER

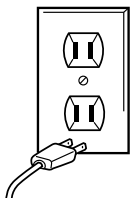

Everyone knows that electricity and water are a dangerous combination. But did you know that an electric appliance is still electrically live even if the switch is off? If the plug is in, the power is on. So when you are not using your appliances, keep them unplugged.

ALWAYS UNPLUG SMALL APPLIANCES

We recommend that you read the instruction manual.

IMPORTANT: KEEP YOUR PURCHASE RECEIPT. ONLY ARTICLES ACCOMPANIED BY THE INVOICE/RECEIPT FROM THE STORE WHERE THE ITEM WAS PURCHASED WILL BE ACCEPTED.

Customer Service: Conair
0810-888-2847 and 5300-5823
Hours of operation: 8 am to 8 pm

CHILE/PERÚ CERTIFICATE OF WARRANTY

Congratulations You have purchased a guaranteed CONAIR product. Conair and its brands: Cuisinart, Waring and CONAIR, extend the following service warranty, which entitles you to enjoy all the advantages that our network of Authorized Technical Services provides. Terms and Conditions of the Certificate of Warranty:

1. The warranty is valid from the date of purchase. To make it effective, the customer must present a proof of purchase and the Certificate of Warranty.
- 2-. The warranty only applies to proven manufacturing defects. The product will be inspected and will be exchanged and/or repaired only if it presents any electrical or mechanical manufacturing defect.
- 3-. The warranty does not apply:
 - 3.1- If the product has been opened, disassembled or repaired by unauthorized personnel. The product should only be repaired by the network of Authorized Service Technicians.
 - 3.2- If the product has been used for purposes for which it has not been designed.
 - 3.3- If the damages are not manufacturing defects, e.g. impact damage, spill damage, insect damage or any other damages found during inspection. If the product has been misused, i.e. contrary to what is indicated in the instruction manual.

- 3.4-. If the damages were caused by accidents, accidental or deliberate acts, or voltage 10% greater or lesser than the one indicated on the product's rating plate.
 - 3.5-. If the damages are due to the normal wear of parts and/or accessories during normal use.
 - 3.6-. If the damages were caused to accessories and parts during improper use of the product.
- **We recommend that you read the instruction manual.

IMPORTANT! PLEASE KEEP THIS CERTIFICATE OF WARRANTY, STAMPED BY THE ESTABLISHMENT WHERE THE PRODUCT WAS PURCHASED. YOU WILL BE REQUIRED TO PRESENT IT FOR ANY CLAIM UNDER THIS WARRANTY.

MODELS #: C910BAR/C910PAR/C910TAR/ C910BCL/C910PCL/C910TCL/ C910BPE/C910PPE/C910TPE

SERIAL #: _____

DATE OF PURCHASE: _____

INVOICE #: _____

THE WARRANTY PERIOD IS INDICATED ON THE PRODUCT BOX

VENDOR'S NAME AND STAMP:

CLIENT'S SIGNATURE AND ID #

@conairlatinoamérica

conairlatinoamérica

@conairlatam

@conairlatinoamérica

@conairlatam

Manual and product references also available at: www.conairlatam.com or www.conair.com.



ADVERTENCIAS DE SEGURIDAD MANUAL
LEER MANUAL ANTES DE USAR
Marca TUV válida solo para C910TAR, C910BAR y C910PAR

©2021 Conair Corporation
ORIGEN: CHINA
DENOMINACIÓN: RIZADOR DE CABELLO
MARCA: CONAIR
DATOS TÉCNICOS
For C910BAR/C910PAR/C910TAR,
220-240V~ 50-60Hz 25W
For C910BCL/C910PCL/C910TCL,
230V~ 50-60Hz 25W
For C910BPE/C910PPE/C910TPE,
220-240V~ 50-60Hz 25W

Argentina
Importa Distribuye y Garantiza Newsan S.A.
Roque Pérez 3650-C1430FBX
C.A.B.A. República Argentina

Chile
Importado por : VENTIS SPA
El Estero 5533, Condominio El Estero,
Penalolen, Santiago, Chile.
TEL:+(569)78088043/ +569 9
61855284/+56975374879
RUT : 76229287-4

Perú
Importado y Distribuido por: MACROTEL S.A.C.
Av. Arequipa 4130 Dpto. 205 Miraflores,
Lima, Perú.
RUC : 20546288979