 




# 12V TRAVEL CAMPING OVEN USER GUIDE

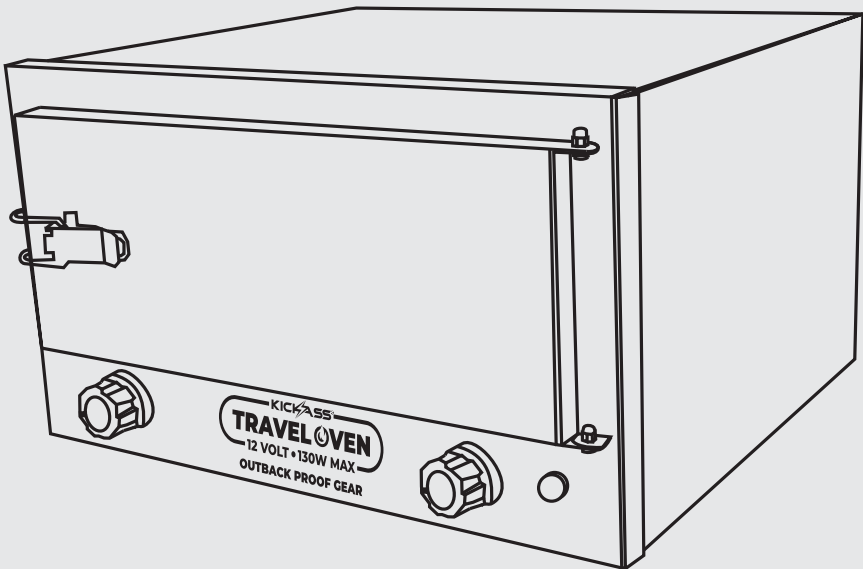

**KATRAVELO12**



# Contents

---

Introduction .....	1
Whats included .....	2
Oven Overview .....	3
Setup .....	4
Operating Instructions .....	4



# Introduction

---


Thank you for purchasing the KickAss Travel Oven. This oven is all you need when it comes to convenient, easy and portable cooking when you are on the road or away from home. The KickAss Travel Oven has been specially designed for vehicle use, operating on a 12 volt power supply that can also easily be connected to any cigarette socket.

## User's Guide


- In this manual, we refer only to the model KATRAVEL012.
- Be sure to read the 'Safety Precautions' in this document, and make sure you use this product correctly.
- Keep this manual in a safe place for future reference.

- The contents of this user guide is subject to change without notice.
- Copying of this manual, either in part or it's entirety is forbidden. You are allowed to use this manual for your personal use. Any other use is forbidden without the permission of KickAss Products Pty. Ltd
- The images and sample screens shown in this manual are for illustrative purposes only, and may not be the exact same as the actual model.


# What's Included

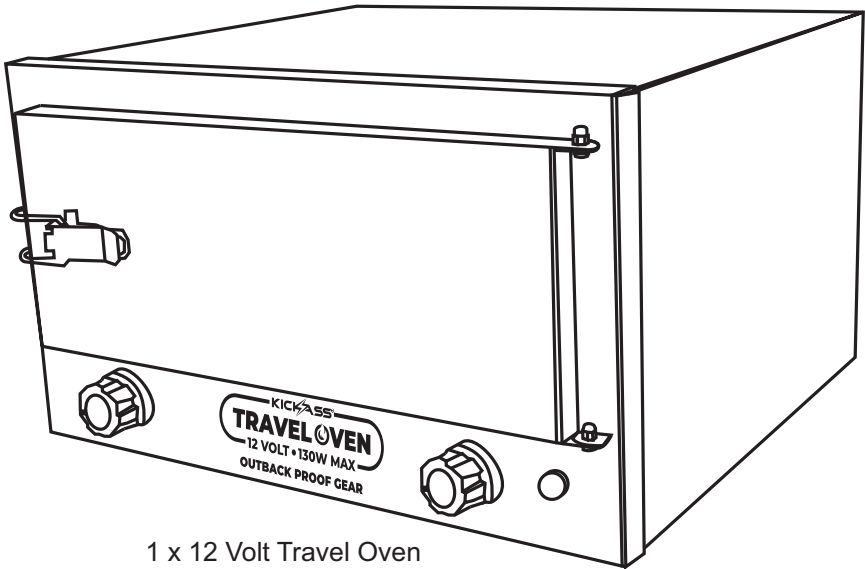

1 x 12 Volt Travel Oven

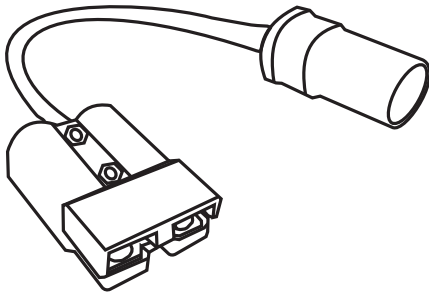


1 x Anderson to Cigarette Adapter

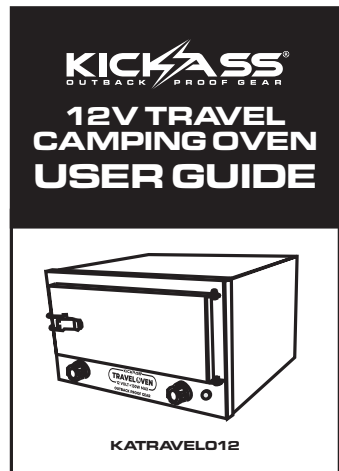

1 x User Guide

# Oven Overview

---

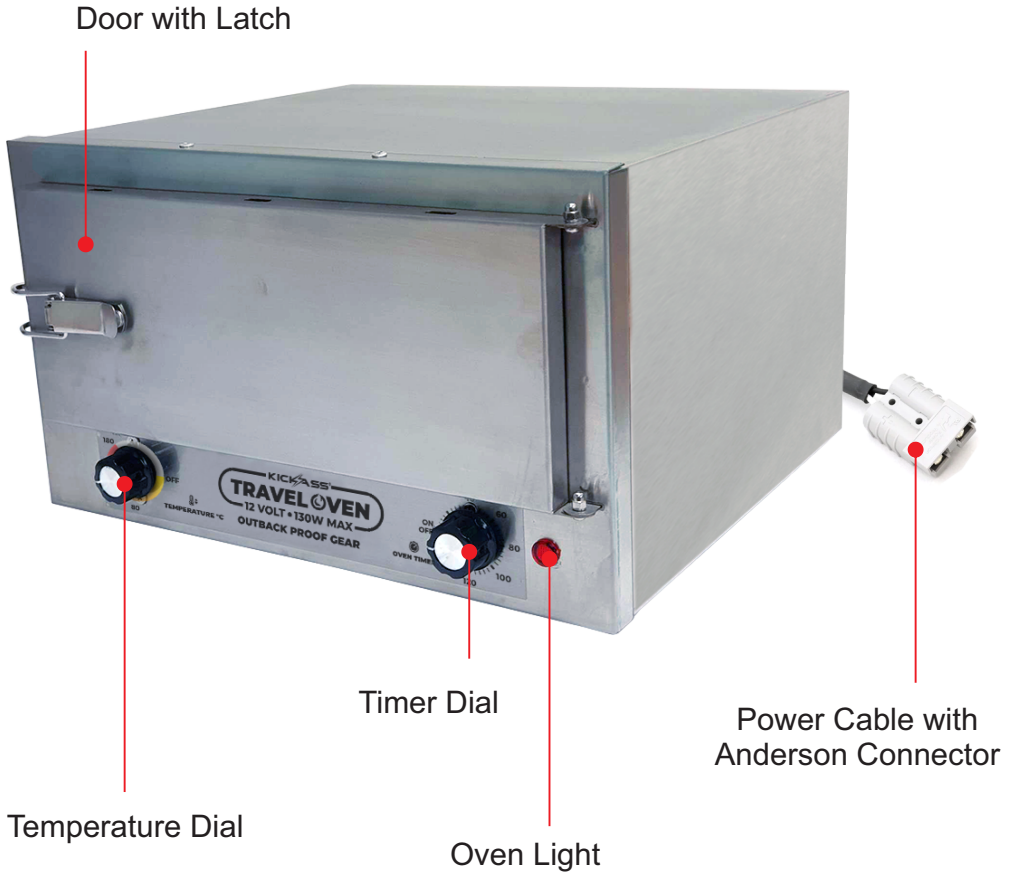



**Warning:** To reduce the risk of injury:

The oven, its surfaces, racks and handles may be hot when in use and immediately after use. It is important to ensure precautions are taken before handling.

## Setup

- The KickAss Travel Oven can simply be connected to a 12 volt power source using a cigarette socket by using the anderson to cigarette adapter or to an anderson connector directly.
- The KickAss Travel Oven comes with a pair of brackets that can be used to secure the oven to your vehicle or bench.
- The KickAss Travel Oven is insulated.

## Operating Instructions

---

**Important: The KickAss Travel Oven is not fan forced, please keep this in mind when considering cooking times and allow for a longer cooking period.**

### Cooking with the KickAss Travel Oven

1. Preheat the oven to the desired temperature. Max temperature is 180°C and will take approximately 80+ minutes to reach temperature.
2. Place food in the oven on the racks. Ensure you don't overload the oven.
3. Set the oven timer to the desired cooking time.
4. Check food occasionally and rotate/turn when necessary.
5. When food is cooked, remove contents from oven and turn off.

## Oven Timer

1. Rotate the timer clockwise to set to desired cooking time. Range between 1-120 minutes.
2. Timer will make a noise when the set time has been reached.
3. To turn off the timer earlier, rotate anticlockwise until the timer makes a noise.

## Oven Light

- The oven light will turn off once the desired temperature has been reached.
- Any adjustments to the temperature whilst in use will turn the light back on, until the desired temperature has been reached.

## Opening and Closing the Oven

- The KickAss Travel Oven is fitted with a door latch allowing you to securely close the oven to prevent any loss of heat.
- The latch may become hot during use. Please ensure appropriate safety precautions are taken.

## Oven Use

- It is important that the oven is not overloaded as this will extend cooking times.
- Food may be placed on the racks provided directly, using aluminum foil or baking trays/dishes.
- We don't advise placing food directly on the bottom of the oven unless you are able to check this consistently to prevent any burning.

THANK YOU FOR CHOOSING



KickAss® is committed to providing you with the most up to date product information. As printed material is harder to update we have created an online user guide portal including videos, user guides and product tips so you can view or download the latest product information at any time. This also helps to save our environment which we are committed to just as much as we are committed to our customer service.



## ONLINE USER GUIDES

To get started with this product, please visit  
**[USERGUIDES.KICKASS.COM.AU](https://USERGUIDES.KICKASS.COM.AU)**  
and search for your SKU code



SCAN QR CODE



## **OUR GUARANTEE**

This KickAss® product comes with a 1 year warranty for your peace of mind. In the unlikely event this product fails when used according to our user guide, we will either repair or replace it. For full warranty terms and conditions on this product, please see the user guide at:

**[userguides.kickass.com.au](http://userguides.kickass.com.au)**

### **Customer Support**

For any technical or warranty enquires please visit our customer service portal at:

**[warranty.kickass.com.au](http://warranty.kickass.com.au)**

## **KICKASS PRODUCT QUALITY**

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Warranty does not cover products that have not been used in accordance with the KickAss® user guide or are outside the warranty terms and conditions.

## **QUESTIONS AND COMMENTS**

Please visit us at **[kickass.com.au](http://kickass.com.au)** or  
email us at **[support@kickass.com.au](mailto:support@kickass.com.au)**

**KICKASS**<sup>®</sup>  
OUTBACK PROOF GEAR