Thanks for purchasing another Flipo® product intended to make life a little easier. FLIPO® offers a wide variety of unique products of the highest quality. To ensure the maximum performance of your product, please read and save these instructions.



## **SPECIFICATIONS**

Power Source: Rechargeable 2 x 5000mAh Li-Ion Battery (Built-In)

Modes: Extra Bright, High, Medium & Low

Beam Distance: 200m

Max Brightness: 10,000 Lumen
Micro USB Charging Cable Included

## CHARGING

#### **FLASHLIGHT**

Your Stinger includes an integrated Li-ION rechargeable battery. To charge, turn the lens head counterclockwise until a USB A and Micro USB port are fully revealed. Insert the appropriate end of the included charging cable into the Micro USB port; the opposite end should be connected to a wall charger. While charging, the LED indicator adjacent to the POWER button will illuminate – when charged, all indicator lights will be fully illuminated.

### POWER BANK

Your Stingers integrated Li-ION rechargeable battery can also be used to charge portable devices. To do so, turn the lens head counterclockwise until a USB A and Micro USB port are fully revealed. Insert the appropriate end of your device's charging cable into the Stinger's USB A Port; the opposite end should be connected to the device. While charging, the LED indicator lights adjacent to the POWER button will illuminate. The number of illuminated indicator lights will decrease as your flashlights battery discharges.

## **OPERATION**

#### ILLUMINATION

Press the POWER button once to activate High mode, press it again to activate Medium mode and press it a third time to activate Low mode. To turn off, press the POWER button a fourth time. Your Stinger includes an Extra Bright mode that can be accessed at any time by pressing and holding the POWER button for 3 seconds. Pressing the button again will return the Stinger to the normal illumination cycle. PLEASE NOTE: If you activate the flashlight by holding the POWER button for three seconds on start up the next press will turn the Stinger off.

## **BEAM DISTANCE/WIDTH**

The beam on your Stinger can be adjusted by twisting the rotary lens head. Turn the head of the flashlight counterclockwise to narrow and lengthen the beam of your Stinger. To return to wide beam, turn the head of the flashlight back to its original position by turning the lens head clockwise.

#### STRIKE BEZEL

The rotary lens includes a durable three tooth strike bezel. This can be used for self defense or to strike and break materials such as glass in an emergency.

# **CAUTION**

- 1. Fully charge your battery before using your product for the first time.
- 2. Use only the USB-C cable provided with your product to charge.
- 3. Do not store your product in a high-temperature environment including heat caused by intense sunlight.
- 4. Do not place product in fire or other excessively hot locations; exposure to fire or temperature above 212° may cause an explosion.
- 5. Do not expose your product to rain or snow.
- 6. Do not drop from high distances.
- 7. Do not disassemble this product or attempt to modify it in any way.
- 8. Do not dispose of this product in the garbage. Disposal of batteries in the garbage is unlawful under state and federal environmental laws.
- 9. Turn off your light when not in use.
- 10. Use a damp cloth to clean if necessary.
- 11. To prevent serious injury, including temporary or permanent loss of sight do not stare into the light, shine light into eyes or focus the beam using an additional lens. Keep away from children.
- 12. Due to high light output, certain areas of this flashlight may become hot while in use. Avoid touching the area where the "HOT" symbol m is visible.

## **30 DAYS LIMITED WARRANTY:**

FLIPO GROUP warrants to the original purchaser, when used in North America only, that this product shall be free of defects in material and workmanship. This warranty applies within 30 days of the original purchase with normal home use. This warranty does not apply for commercial use of this product. Use outside of North America is not covered by this warranty.

During the warranty period, we will at our option, repair or replace this product without charge, which shall be the consumer's sole remedy. ALL RETURNS must be accompanied by a Return Authorization Number, which is issued by the Customer Service Department of Flipo Group. Please contact Customer Service BEFORE returning any item. Once you have obtained a Return Authorization Number, the product must be returned with a clear copy of the proof of purchase, showing place and date of purchase, postage and insurance prepaid to:

Flipo Group 613 First Street La Salle, IL 61301

This warranty does not cover installation, adjustments in the home, nor damage due to accidents, misuse, abuse, fire or other acts of God, incorrect line voltage, damage to other equipment caused by improper installation, unauthorized or improper modification. This warranty gives you specific legal rights and you may also have other rights that vary from state to state.

