



 
 
RUFINO

# RUFINO DOG COLLAR – MEASURING GUIDE

RUFINO

SIZE	SMALL	MEDIUM	LARGE
IN CENTIMETRES	29cm - 34.5cm	38.5cm - 46cm	42cm - 54cm
IN INCHES	11.8" - 13.6"	15.1" - 18.1"	16.5" - 21.2"

Measurements start from the turnback which is where the buckle is attached to the leather. The grey dotted lines below provide a visual guide.

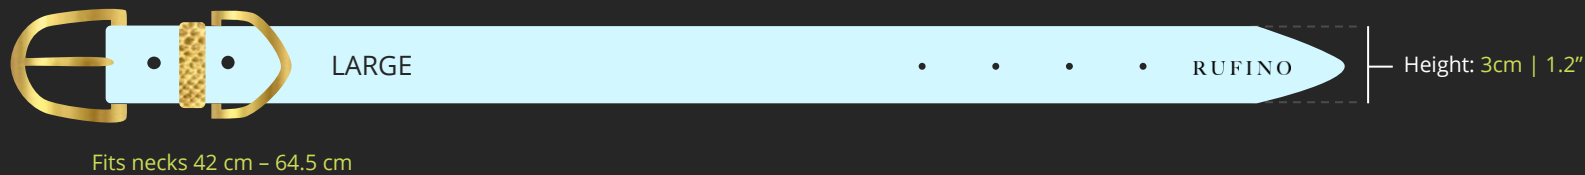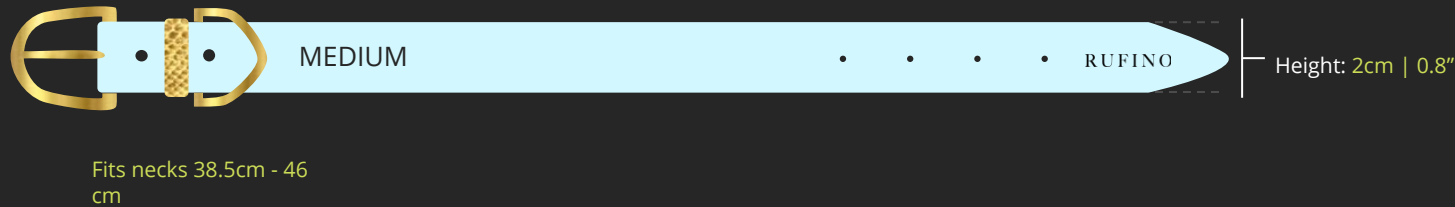

Measure your dogs neck where the dog collar would naturally sit.

Properly fitting the collar depends on the size of your dog. To ensure your dog is comfortable and secure, slide your fingers underneath the collar to check for room and adjust as necessary.

**For dogs under 10kg | 22pounds:**

Your pinky should fit comfortably under the collar.

**For dogs over 10kg | 22pounds:**

Two fingers side by side together should fit comfortably under the collar.

For growing puppies, check the collar weekly to ensure it's not getting too tight.

# Steps

Step 1 : Grab a measuring tape and gently wrap this around your dog's neck where the dog collar would naturally sit.

Step 2: Insert your pinky finger (for dogs under 10kg | 22 pounds) or two fingers side by side together (for dogs over 10kg | 22 pounds) underneath the dog collar so that they fit comfortably underneath.

Step 3: Take note of this measurement and relate back to the Rufino sizing chart to see what size will best suit your pup.