

Usage of remote control

Both the camera and the remote control have four kinds of address codes, which are A, B, C and D. when the remote control and the camera address codes match, the camera can be controlled normally. The default address code for cameras and remote controls is A.

The method of setting the remote control address code: directly press the "A", "B", "C", "D" buttons on the remote control

The method of setting the camera address code: use the remote control to enter "menu" → "system" → "remote control address" → "modify address with left and right buttons" → "confirm".

Note: After the camera address is modified, the address of the remote control must be modified to be the same as that of the camera to control it.

Button Introduction

1. HOME

Press the return button and the camera lens will return to the maximum angle position or return to the previous menu.

2. Equipment selection/code matching (ABCD)

Select the device to be controlled. Code matching refers to pressing a button, and then controlling it after pressing the button in the subsequent control. This remote control can control four devices, divided into A\B\C\D;

3. Number buttons

Call preset positions 0-9;

"T" and "W" buttons

Press "T" to zoom in, and press "W" to zoom out;

"F" and "N" buttons

Press "F" and "N" buttons to manually control the focus of the camera

6. Direction control buttons (up, down, left, right)

Control the up, down, left and right rotation of the camera (only effective for PTZ), and control the menu to move up and down, left and right in the menu mode

7. MENU/OK: Enter the menu or enter the next menu;

8. F1~F6 buttons: special function buttons

9. Set and clear preset position buttons (Add, Del)

Set the preset position: After adjusting the camera to the corresponding position, press the set preset (Add + number buttons (0-9) to set the preset position of the corresponding number button;

10. Power button ()





Press the power button to turn off or turn on the camera




Menu settings



Main menu

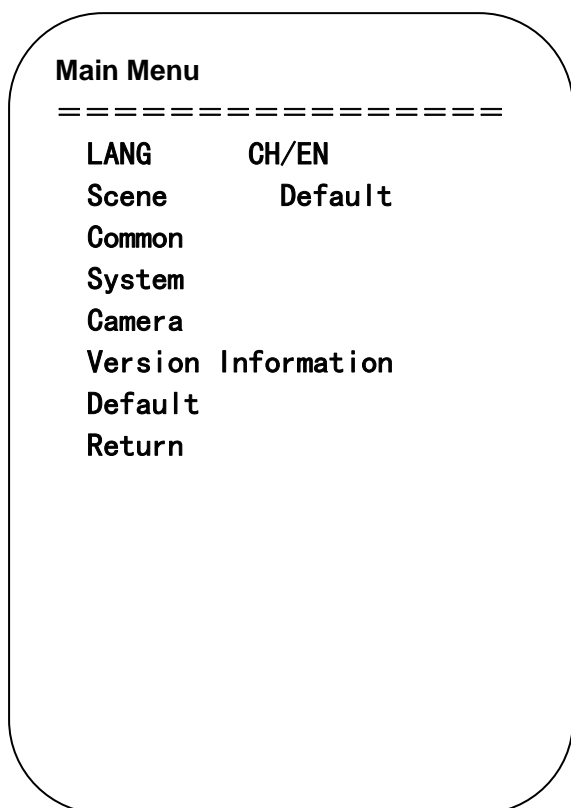

Display the contents of the menu on the screen, pointing to the selected item with the scroll arrow.

Press , , move up and down to select the content you want to set, press [ ] to modify, press [menu / confirm] to confirm or enter the submenu, and press [return] to return. Note: after modifying the options, you need to press [menu / confirm] to confirm!



1. Language: Chinese and English settings of the menu

In the main menu, move the pointer to (LANG/language), press [ ] to modify Chinese or English

2. Scene: Press [ ] to switch scenes such as "default", "beauty", "jewelry" and "clothing"

3. Common: adjust image brightness, color, style and other parameters

4. System: Set the output frame rate and resolution of the camera, and the address code of the remote control to control the camera.

5. Camera: Set the camera's scene, lens, image, exposure, white balance, enhancement, other → image flip, horizontal and vertical screen and other parameters.

6. Version information: display the camera's software version, remote control address and other information.

7. Default: restore the factory settings of the camera.