

Quick Start Guide

① Charge the device

Please charge the device before turning on it.

② Open the lid

Slide down



③ Label loading

Make the label face up



Extend a bit beyond the opening

4 Turn on



Long press the button

5 Set a calibration mode

⚠ Don't miss this step!!!

One-click the button, it will slowly analyses the label, or it align the label incorrectly.




⑥ APP download

 
Search FlashMini in Google Play or APP Store.



7 Bluetooth connection

 **Open FlashMini APP to turn on the Bluetooth, NOT in system settings.**

 in "setting"

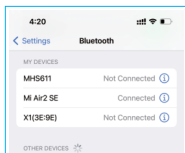

B1_3154

 
B1_3154_BLE


Don't click here!!!






in "FlashMini" APP

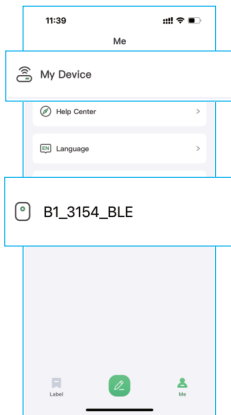


- Click “” or “My Device” to search the device.

 8 Select label paper

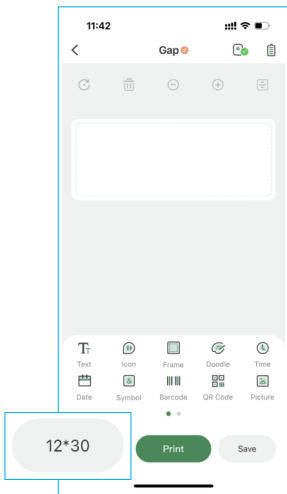

9 Edit

 Click on **Text** , **Double click** pops up, then edit labels in the entry bar.

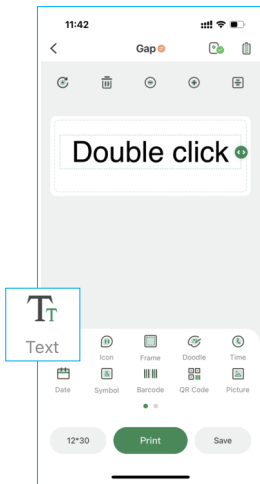

10 Cut paper



Frequently Asked Questions

What's the specifications of label tape compatible with B1 label maker?

- Label tape diameter: 1.6 inch (both continuous and non continuous)
- The gap between the label tape: 0.3 inch (non continuous)
- Make sure the diameter of the label tape is less than 1.6 inches, or it can't fit inside the B1 label maker.
- And check if the gap between the label tape is between 0.24-0.3 inch, or it can't align the labels to print correctly.

Why cannot the machine be searched by the APP?

- Please Connect B1 label maker in "Flash Mini"App, NOT in system settings, or the app won't work.
- The machine is charging, please unplug it and try to search it again.
- Bluetooth responds slowly. Please re-open the APP and reboot the machine to connect it again.
- Please update the APP to re-install it.

Why does the machine work normally but keep printing blank paper?

- It may be because the label paper is laid reversely, please make the label sticker face up.

- Improperly load the paper without leaving 1-3mm outside the slot port.
- Residues is sticking on the cutter or feed slot and the label paper fails to be detected. Please clean the dust or residues with an alcohol cotton pad.

Why does the APP get frozen?

- This always happens when you use it for the first time.
- Please long-press the button to shut down the machine and reactivate it. It will get normal after restarting.

Why the label maker doesn't print at all or only print half the word?

- Using the WRONG LABEL TYPE will

cause unsatisfied printing results, please check your label type.

- Improperly load the paper without leaving 1-3mm outside the slot port.
- Please check if the label exceeds label width range. Off Brand label paper will not work.
- Font size exceeds perimeters range. Please configure whatever you want within the label template perimeters.

Why it can't print any of the colored labels or cute characters, just the words or icons?

- All the label makers on the market apply thermal printing technology and uses chemically-treated paper that darkens when heated by a thermal print head.

Thus, it ONLY SUPPORTS BLACK PRINTING. Color options are the labels themselves. The colored labels are just for reference only.

 
Why cannot the label maker be fully charged when being plugged into the laptop, causing automatic shutdown after unplugging?

- The output voltage of the laptop USB interface is insufficient and unstable, which is unable to provide a stable charging environment. Please use a wall socket for charging! —

What's the PIN code for Bluetooth connection?

- PIN code is 0000.

Product Overview

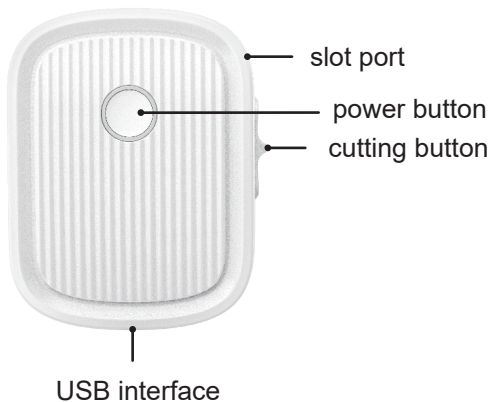

Indicator Light Instructions

Label Maker Status	Status	Action
Lights up in green	Normal Standby Mode	—
Lights up in blue	Bluetooth connected Printing in progress	—

Label Maker Status	Status	Action
Lights up in red	Charging	—
	Cover is open	Close the cover
	Out of paper	Refill label tape
	Improperly load paper	Make the label face up and leave 1-3mm of label outside the slot port
Flashes slowly in red	Low battery	Charge the machine

Customer Service Contact Information

We want you to love your purchase, but if you are not completely satisfied, please contact our Customer Service team with any questions you may have.

- **Phone:**

+1 281-236-7202 (9am-6pm PST)

+1 281-236-8167 (8pm-3am PST)

- **Email:**

support@jioseprinter.com

- **Official Site:**

www.jioseprinter.com

- **Live-chat:**

www.jioseprinter.com

