

The Rich Barber®

1 MIN. BLADE MODIFIER® INSTRUCTIONAL MANUAL

PURPOSE

This tool is key to a sharper lines and closer shaves. In order to get the maximum benefit from the modification, the two top and bottom blades must be set properly to maximize the modification. So you want to make sure that it's up close and tight and not over adjusted, but also not underadjusted. The Blade Modifier® will give the modification an overall better performance to all of your professional trimmer blades.

Package Contents:

1 Blade Modifier®
1 Instructional Manual

PATENT NUMBER
US 10,556,324 B1

STEP ONE

Add one to two drops of clipper oil in the center of the modifier.

STEP TWO

Remove the stationary blade (the part with the logo on it). The tip is the part of the blade that will be modified.

STEP SIX

Once the grinding is finished, double check the desired blade modification; notice that the tip is shiny, it's tapered off and it's perfectly even all across the blade. Wipe the blade completely clean with a towel.



Product Instructions

SCAN HERE,
FOR ONLINE VERSION OF
INSTRUCTIONS



@THERICHBARBER #THEPOWEROFANIDEA

STEP THREE

Take the blade, with the logo side facing the direction of the blade modifier that says "Blade Brand Logo On This Side". Matching that side up, slide the blade into the bottom of the blade modifier. This allows it to sit correctly in *the catch*.

STEP FIVE

Put the Blade Modifier® in position, and with sufficient pressure push the blade back and forth within the diamond stone (.but light enough to allow for the blade to be moved). Move the blade back and forth, you will hear it being grinded and modified. After an initial test (5-10 seconds of grinding), look at the modification which has already begun.

Note: Check the blade every 30 seconds to see if it's at the desired modification. The blade trimming average time will take 30 seconds to two minutes to modify fully. *Depending on what blade is being modified.

STEP FOUR

There are two block sidelines. Keep the blade within these sidelines (and don't move past them). With a tight grip, hold the blades upright in a verticle position. Using two fingers, hold onto the two ends, with a firm hold in a position where it cannot be moved. Now it's time to modify the blade.

LEGAL/DISCLAIMERS

Product use is at one's own risk. The Rich Barber® is not liable for any damage or injury resulting from use or misuse of this product for failure to comply with these instructions. Store product in cabinet to avoid dust, and away from sunlight to avoid product damage. Keep all small bags away from children and pets to avoid swallowing or choking. For more product information, contact us at: support@therichbarber.com

THE RICH BARBER®
THERICHBARBER.COM
DESIGNED IN CALIFORNIA

The Rich Barber®