

Cleaning Head Replacement Instructions

Gasket will not seal properly unless installed correctly. Start the gasket at the top of the slot, position the cleaning head on the tool, and press down firmly. To complete insert 3 screws.

