

# NEUTRAL OVEN CLEANER

## Non Caustic Grill and Oven Cleaner



Our unique non-caustic and non-corrosive neutral oven cleaner delivers a quality problem solver that cares about the user and the environment. Based on our all purpose cleaner and degreaser Citra Clean, we have used a carefully selected blend of surfactants and solvents to clean even the most stubborn grime.

Our Neutral Oven Cleaner uses rheology technology to help clean oven walls and is safe to use on aluminium and all the oven surrounds and is suitable for use on combi ovens.

- pH neutral formulation (pH 7—8.5)
- Non-corrosive and non-caustic
- No nasty odours associated with traditional oven cleaners
- Removes even stubborn soiling
- Safe to use on aluminium
- Can be used to clean all surfaces of the oven
- Can even be used to clean combi ovens



### DIRECTIONS

Spray directly onto the surface and work into the soiling to ensure all areas are treated.

**LIGHT SOILING** leave for approx. 15 minutes then use a scraper or green scourer pad to remove.

**HEAVY SOILING** after ensuring the spray has covered all areas, leave for 15 minutes to 1 hour depending on soiling

Rinse off with warm water and wipe surfaces dry.  
Can be applied to warm ovens to remove even heavy soiling.

**WARNING ONLY**



### PACKAGING

**Order Code: NOC750**

Pack Size: 6 x 750ml

### STORAGE

Store in the original sealed container in cool, dry conditions.

Keep lid tightly closed when not in use

Keep out of the reach of children.

# NEUTRAL OVEN CLEANER

Non Caustic Grill and Oven Cleaner



## Cleaning of Combi Ovens

### PREPARING TO CLEAN THE OVEN

For the oven to operate at peak efficiency, the cavity, door, air filter and grease filter must be kept clean. A daily cleaning routine will ensure that you comply with the required hygiene standards and will help to maintain and prolong the efficiency of your oven.

### COLD OVEN CLEANING INSTRUCTIONS

1. Remove the air filter from the back of the oven.
2. Open the oven door, remove the cook plate, bottom jet plate, and grease filters. Wash all parts in warm soapy water, using the **Neutral Grill and Oven Cleaner** for stubborn stains. Wash off using a clean cloth and plenty of clean, warm water. Allow to dry.
3. Remove any spillages with disposable paper wipes. Use a dry clean brush to remove any food particles from between the oven floor and the inside of the front door.
4. Wear protective rubber gloves and protective glasses, carefully spray the **Neutral Grill and Oven Cleaner** onto all the internal surfaces of the oven.
5. For difficult areas, leave to soak for 10 minutes with the oven door open. Use a non-abrasive nylon scrub pad / sponge to clean the cavity, roof and the inside of the door. **Do not** scrub the door seal or use metallic scourers.
6. Wash off using a clean cloth and plenty of clean warm water and dry using a fresh clean cloth or paper towel. Replace all the cleaned oven parts. Close the oven door and spray the exterior with the **Neutral Grill and Oven Cleaner** and wipe clean with a damp cloth.



### PACKAGING

**Order Code: NOC750**

Pack Size: 6 x 750ml

### STORAGE

Store in the original sealed container in cool, dry conditions.

Keep lid tightly closed when not in use

Keep out of the reach of children.