



OPERATION GUIDE

SPOTLESS™

1.5-Gallons Li-Ion Battery Powered Backpack Spray Mop

MODEL NUMBER: XCMADD

TABLE OF CONTENTS



4	WARNINGS
5	SAFETY
8	REGISTER YOUR SPRAY MOP
9	SPRAY MOP CAPABILITIES
10	WHAT'S IN THE BOX

CLEAN WITH CONFIDENCE™



12	ASSEMBLY & SPRAYING
18	BATTERY CHARGING
20	PARTS & ACCESSORIES
22	TROUBLESHOOTING
23	WARRANTY POLICY

ATTENTION

WARNING



- Never use this spray mop with liquids such as gasoline, ethanol, methanol, acid, caustic, or any other flammable, pressure, heat, or gas producing chemicals.
- Always read and follow chemical manufacturer's instructions before use with this spray mop as some chemicals may be hazardous when used with this power tool.
- Never leave chemicals or solutions sitting in your spray mop after using.
- After using spray mop with chemicals, it is important to rinse the tank and flush with fresh water for 3-5 minutes to ensure residual chemicals in the gun, tank, pump, and hose are cleaned out
- Read and follow all instructions and cautions on label of products used in this spray mop.
- Do not store your spray mop in extremely high temperatures. Heat can lead to the build-up of pressure within the spray mop, resulting in a possible explosion.
- Do not try to make modifications to the spray mop. Always use X-Stream Clean® branded replacement parts from the manufacturer.
- Do not use batteries that are wet or have been damaged.
- Inspect the spray mop for damage or loose connections before each use.
- Keep spray mop and all chemicals out of the reach of children.
- **Remove chemicals and thoroughly clean the spray mop after each use. Failure to clean the spray mop may cause contamination of subsequent applications, will cause premature spray wear, and void the warranty.**

NOTES

- The spray mop may have residual water in it when first opened. This is due to quality testing every spray mop undergoes before leaving our factory.
- **THIS SPRAY MOP IS DESIGNED TO OPERATE WITH ONLY X-Stream Clean® BRANDED BATTERIES. ANY OTHER BATTERIES COULD CAUSE SERIOUS HARM OR INJURY TO THE OPERATOR AND SERIOUS DAMAGE TO THE SPRAY MOP.**

WARNING

This product contains chemicals, including lead, known to the state of California to cause birth defects and other reproductive harm. This product is designed to apply chemicals that may be harmful and could cause serious personal injury if inhaled or brought into contact with the user.



When using chemicals, always wear protective clothing.



Do not dispose of Lithium-ion batteries with household waste; recycle where proper facilities exist.

SAFETY & PRECAUTION



SAFETY

- Use the spray mop and accessories in accordance with these instructions, taking into consideration the working conditions and the work to be performed. Use of this spray mop for applications that it was not intended for could result in a hazardous situation.
- Keep handles and lift points dry, clean and free from oil and grease. Slippery handles and lift points do not allow for safe handling and control of the spray mop.
- Risk of fire or explosion: Never use this spray mop with liquids such as gasoline, ethanol, methanol, or any other flammable or gas producing chemicals. Do not use around sparks, flame or smoke.
- Failure to adhere to these instructions may cause the chemicals to ignite, resulting in potential injury and damage to property.
- To reduce the risk of fire, personal injury, and product damage from a short circuit, never immerse the spray mop, battery, or charger in fluids. Do not place or store spray mop where it could fall or be pulled into a tub or sink. Corrosive or conductive fluids, such as seawater, certain industrial chemicals, and bleach or bleach containing products, etc., can cause a short circuit.
- Electric shock hazard: Never spray toward electrical outlets.
- Spray area must be well ventilated to avoid hazardous fume build-up. Always refer to the product label of the chemical being used for safety instructions and proper use practices.
- Do not store chemicals in the tank. Chemicals can degrade seals and hoses. Drain and clean after each use. Failure to do so may void the warranty.
- Thoroughly inspect the interior, exterior, and all components of the spray mop before each use. Check for cracked and deteriorated hoses, leaks, clogged nozzles and missing or damaged parts. If damaged, ensure the spray mop is repaired before use. Many accidents are caused by poor maintenance.
- Always remove the battery pack from the spray mop before performing any maintenance, storing or draining of the spray mop.
- Do not eat or smoke while handling or operating. Refer to the product label of the chemical being used for user safety practices.
- Do not use the battery compartment to store the battery.
- **Always use common sense and be cautious when operating.** It is not possible to anticipate every situation that could result in a dangerous outcome. Do not use if you do not understand these operating instructions or if you feel the work is beyond your capability.

SAFETY & PRECAUTION CONT.



OPERATING

- Do not allow familiarity with products to make you careless. Remember that a single moment of carelessness is sufficient to cause serious injury.
- Always wear eye protection with side shields when handling or operating this spray mop. Failure to do so could result in serious injury from chemical contact or flying dirt or debris.
- The Lithium-ion battery pack can be used in temperatures down to 32°F. When operating in cold temperatures, put the battery pack in the battery compartment and use the spray mop in a light duty application. After about a minute the battery pack will warm up and begin operating normally.
- Do not use the spray mop if the power switch is not functioning correctly. Any power tool that cannot be controlled with the switch is dangerous and must be repaired.
- Remove battery before making any adjustments, changing accessories, or storing the spray mop. Disconnect the spray mop from the power source by removing the battery pack. These preventative safety measures reduce the risk of starting accidentally.

STORING

- Store out of reach of children and do not allow persons unfamiliar with the power tool or these instructions to operate the spray mop. Power tools are dangerous in the hands of untrained users.
- Maintain spray mop and accessories. Check for misalignment or binding of moving parts, breakage of parts and any other condition that may affect operation.

Scan the QR code to view the most updated manual online!



or visit xstreamclean.com/operation-guides

SAFETY & PRECAUTION



WORK AREA

- Keep work area clean and well lit. Cluttered or dark areas invite accidents.
- Do not operate in explosive environments, such as in the presence of flammable liquids, gases or dust. Power tools can create sparks which may ignite the dust or fumes.
- Keep children and bystanders away while operating. Distractions can cause you to lose control.

ELECTRICAL

- Do not expose to rain or wet conditions. Water entering the electrical compartment of the spray mop will increase the risk of electric shock.
- Do not expose to rain; store indoors.

PERSONAL

- Stay alert, watch what you are doing and use common sense when operating. A moment of inattention while operating power tools may result in serious personal injury.
- Use personal protective equipment. Always wear eye protection. Protective equipment such as a respiratory mask, non-skid safety shoes, hard hat or hearing protection used for appropriate conditions will reduce the chance of personal injuries.
- Prevent unintentional starting. Ensure the switch is in the off-position before connecting the power source (battery pack), picking up, or carrying the spray mop.
- Do not overreach. Keep proper footing and balance at all times. This enables better control of the spray mop in unexpected situations.
- Dress properly. Do not wear loose clothing or jewelry. Keep your hair and clothing away from moving parts. Loose clothes, jewelry or long hair can be caught in moving parts.
- Do not let familiarity gained from frequent use of the spray mop allow you to become complacent and ignore tool safety principles. A careless action can cause severe injury within a fraction of a second.

DO NOT RETURN SPRAYER TO STORE, if you experience problems or have questions contact our Customer Support Center, M-F 9am-5pm, EST at +1 803.339.2500, or email: info@xstreamclean.com, or find more information at xstreamclean.com/troubleshoot.

REGISTER YOUR X-STREAM CLEAN® SPOTLESS™ SPRAY MOP!

To take advantage of the 1-year Limited Warranty from WESSOL, LLC.
Register your spray mop at the website below:

xstreamclean.com/register

LET'S
GET
SPRAYING!

Please read and follow this manual carefully to ensure that you get the most out of your new spray mop. If you need assistance with the assembly or operation of your spray mop, please don't hesitate to contact WESSOL via the support methods below:

xstreamclean.com

info@xstreamclean.com

+1 803.339.2500

WHAT YOUR SPRAY MOP IS CAPABLE OF

The X-Stream Clean® Spotless™ Cleaning & Sanitation Spray Mop is a highly efficient battery powered portable backpack spray mop for the toughest cleaning, sanitation, and decontamination jobs.

Say hello to the battery-powered X-Stream Clean® Spotless™ Spray Mop and bid farewell to the clumsy mop bucket! Transport your cleaning solution in a clean 1.6-gallon backpack tank and eliminate rolling around dirty, recycled bucket water. Plus take your Spotless™ spray mop wherever you need to clean with its light-weight portability. Drastically reduce slip-and-fall scenarios by preventing excessive wetness on your floors by quickly cleaning spill accidents with silver-infused micro-fiber pads that kill up to 99.99% bacteria and germs. Buck the bucket with the specially designed Spotless™ spray mop to make tough mopping jobs faster and easier!



X-STREAM CLEAN® SPOTLESS™ SPECIFICATIONS

Model Number	XCMADD	Pump	Gear Pump
Battery	7.2V / 4.0Ah Lithium-Ion	Pressure	Up to 30 psi
Battery Charger	9.2V / 1.5A	Spray Distance	Up to 5 feet
Coverage per Charge	Up to 8,600 ft ²	Tank Capacity	1.5G / 6L
Battery Cycle Life	300 cycles	Spray Time	Up to 2 hours

WHAT'S IN THE BOX




10.



1. SPOTLESS™ GUN
PART NUMBER: XCRAJP



2. SPOTLESS™ MOP POLE HANDLE
PART NUMBER: XCRAKE

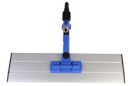

3. 18" MICROFIBER ALUMINUM PLATE
PART NUMBER: XCAAKA



4. 18" SILVER INFUSED MICROFIBER PAD
PART NUMBER: XCAAJW



5. 1.5G/6L TANK
PART NUMBER: XCRAJQ



6. TANK LID
PART NUMBER: XCRAJS



7. 7.2V/4.0AH LITHIUM-ION BATTERY
PART NUMBER: XCAAJN



8. 9.2V/1.5A BATTERY CHARGER
PART NUMBER: XCAAJM



9. 65° QUICK-CONNECT FAN NOZZLE
PART NUMBER: XCAAJU



10. 5-FOOT COIL HOSE
PART NUMBER: XCRAJR



11. STRAPS
PART NUMBER: XCRAJT

STEP 1.

A).

Bring the ComfortStraps™ to the bottom of the tank. Secure lower strap clips to the tank loops near the bottom of the tank.



B).

Next, slide the adjustable strap through the top tank loop. Continue by sliding the strap over and under the buckle fitting. Lightly tug at the strap to make sure it's secure. Repeat on other side.



C).

Attach the mop head to the handle connector by laying the female blue connector in the forward position so that the lock cavity is on the right side. Insert the male black connector with the nozzle fitting facing forward, until you hear it click.



STEP 1.

D).

Align the female handle with the male connector facing up. Insert fully and twist to the right to lock in place. Follow arrow guides on the handle.



E).

Take the spray gun and attach it to the threaded fitting on the opposite end of the handle. If handle collar is attached, unscrew and slide down. Align the spray gun with the mop head so that the nozzle fitting faces the forward. Insert the gun, then slide handle collar over the gun and tighten until secured.



F).

Next, connect the hose to tank by pressing the blue lock on either end of the hose and attach. Repeat process for connection to gun.



STEP 2

PREPARING TO SPRAY

A).

Fully charge the battery before the first operation. In a separate container, prepare the solution you want to spray according to the manufacturer's instructions. Open the tank and carefully pour in the solution. Securely tighten the tank lid.



B).

Insert the nozzle into the fitting using the quick-connect method by pulling the female collar back, inserting the male nozzle into the fitting and push the collar back into its original position.



A).

Begin spraying by squeezing the spray trigger on the spray gun.

Note: Lock the gun when not spraying, by pressing the blue lock on the trigger.



STEP 3.

HOW TO MOP

A).

Get the most efficient deep clean with your Spotless™ Spray Mop! Choose the corresponding mop head and pad that best fits the job (18" Mop Head & Pad included).

- 18" - Isolated spill/spot treatment
- 24" - Floor cleaning
- 36" - Larger surface coverage

First, place the spray gun so that it's located in the center axis of your body and move your other hand on the handle at a comfortable height as a pivot point. Start in the furthest corner of the room and work your way backwards in a figure-8 motion. By using this motion, you are able to cover more surface area, collect larger debris, and avoid walking over the clean surface!

Our silver-infused microfiber pads collect and kill up to 99.99% of microbes and bacteria!

**We recommend washing your microfiber pads after every job at 140°F (Avoid fabric softeners, bleach, or alkaline products when washing and do NOT heat your dryer, this will prolong the life of your pads).*



STEP 4

AFTER YOU FINISH MOPPING

A).

Dispose of extra liquid/chemical based on manufacturer's instructions. Rinse out any residual solution in the spray tank with warm, soapy water. Then spray fresh water through the spray mop for 3 to 5 minutes to completely clear the tank, pump, gun, wand, and any used nozzles of chemicals.

B).

Disconnect the hose from the spray gun and let the hose hang down towards the ground in order to drain the hose of any liquid.

C).

Dry the tank and clear the nozzle of any buildup.

D).

Store the spray mop in a clean, dry, and shaded location to protect it from extreme heat or frost.

*

For long-term storage, regular charging of the battery is required to maximize battery life. Do not allow the battery to fully discharge.

Proper maintenance is crucial to ensure the extended life and performance of your spray mop. Many spray materials can harden if left in the spray mop, causing clogs in the nozzle or hose. Gasoline should never be used to clean out your spray mop.



CHARGING THE BATTERY



Please read the following information carefully. User must read and understand entire manual before operating this spray mop. Improper use or failure to follow instructions could lead to spray mop failure and possible serious injuries.

These batteries have been designed to provide maximum trouble-free life. However, like all batteries, they will eventually wear out. Do not disassemble battery pack and attempt to replace the batteries. Handling of these batteries, especially when wearing rings or jewelry, could result in serious burns.

- Recharge only with the charger specified by the manufacturer. A charger that is suitable for one type of battery pack may create a risk of fire when used with another battery pack.
- When battery pack is not in use, keep it away from other metal objects like paper clips, coins, keys, nails, screws or other small metal objects that can make a connection from one terminal to another. Shorting the battery terminals together may cause burns or fires.
- If the battery is damaged, liquid can be ejected from the battery; avoid contact. ***If contact accidentally occurs, flush with water. If liquid contacts eyes, immediately seek medical help.***
- Liquid ejected from the battery may cause irritation or burns.
- Do not use a battery pack or spray mop that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Do not expose a battery pack or spray mop to fire or excessive temperature. Exposure to fire or temperatures above 265°F (130°C) may cause explosion.
- Follow all charging instructions and do not charge the battery pack outside the temperature range specified in the instructions. Charging improperly or in a temperature outside the specified range may damage the battery and increase the risk of fire.

STORING BATTERY PACK LONGER THAN 30 DAYS

- Store the battery pack where the temperature is below 80°F and away from moisture.
- Store the battery pack in a 30%-50% charged condition.
- For long-term storage, regular charging of the battery is required to maximize battery life. Do not allow the battery to fully discharge.

CHARGING

THE BATTERY



Please read the following information carefully. User must read and understand entire manual before operating this spray mop. Improper use or failure to follow instructions could lead to spray mop failure and possible serious injuries.

BATTERY RECYCLING PREPARATION

- To preserve natural resources, please recycle or dispose of the batteries properly.
- This product contains Lithium-ion batteries. Local, state or federal laws may prohibit disposal of lithium-ion batteries in ordinary trash. Consult your local waste authority for information regarding available recycling and/or disposal options.

LITHIUM-ION BATTERY PACKS

- Lithium-ion batteries deliver fade free power for their entire run time. Lithium-ion batteries will not gradually lose power due to decreasing battery charge. Instead, power from the battery pack will drop from full to zero once the full charge has been drained from the battery. Once this happens, recharging of the battery is required. It is not necessary to drain the battery pack completely before recharging.

BATTERY PACK PROTECTION FEATURES

- Lithium-ion battery packs are designed with features that protect the lithium-ion cells and maximize battery life. If the spray mop stops during use, release the trigger to reset and resume operation. If the spray mop still doesn't work, the battery needs to be recharged.

If after 2 hours during the charging process, remove the battery pack from the charger to avoid damaging the product. DO NOT insert another battery. Contact Customer Support for instruction on replacing the battery. M-F 9am-5pm, EST at +1 803.339.2500, or email: info@xstreamclean.com.

ACCESSORY & REPLACEMENT PARTS



XCRAJP
Spotless™ Mop Gun



XCRAJQ
1.5G/5L Replacement Tank



XCAAJN
7.2V/4Ah Lithium-Ion Battery



XCRAJT
Replacement Straps



XCAALA
Spotless™ Wand Attachment



XCRAJS
1.5G/5L Replacement Tank Lid



XCAAJM
9.2V/1.5A Battery Charger

 


XCRAJR
5-Foot Coil Hose




XCAAJU
65° Quick-Connect Fan Nozzle

ACCESSORY & REPLACEMENT PARTS




XCAAKA

 18" Microfiber Aluminum Plate



XCAAKB

 24" Microfiber Aluminum Plate



XCAAKC

36" Microfiber Aluminum Plate



XCAAJW

18" Silver Infused Microfiber Pad



XCAAJX

24" Silver Infused Microfiber Pad



XCAAJY

36" Silver Infused Microfiber Pad



XCRAKX

Mop Gun to Hose Viton™ Gasket



XCRAKY

Mop Pole Connector Viton™ Gasket



XCRAKE

Spotless™ Mop Pole Handle

TROUBLESHOOT YOUR SPRAY MOP

If your spray mop is experiencing trouble, see below or visit xstreamclean.com/troubleshoot for detailed instructions/videos on how to determine which part is not functioning. To contact Technical Support, email info@xstreamclean.com or call +1 803.339.2500

PROBLEM	POSSIBLE REASON(S)	SOLUTION
Not turning on and there is no sound coming from the spray mop	Dead battery	Charge the battery. If the battery will not charge, test the charger or call Support at +1 803.339.2500 for a replacement if applicable.
Leaks from gun/nozzle area	Loose connection	Ensure spray gun is fully tightened onto threaded end of the hose.
Clogged pump / hose / gun / wand / nozzle.	Not rinsing tank / pump / hose / gun / nozzle(s) with water after use.	Rinse thoroughly with warm, soapy water after each use.
Dead battery	Defective charger	Test the charger using a multimeter. Replace if necessary.
	Damaged lithium cells	If the battery receives no reading from a multimeter, a replacement battery is needed.
Pump makes a sound when it's on and output is limited	Clog in filter or nozzle	Check filter or nozzles for clog. Using warm water, thoroughly clean the components.
	Clog in pump	Open the pump and clean. Contact Support for assistance.
Leaks from tank	Loose hose-pump connection	Open cover plate and identify the hose clamps. Use a flathead screwdriver to tighten.
	Damage on pump	Replace the pump.
	Damage on tank	Replace the tank.

WARRANTY & COVERAGE

WARRANTY COVERAGE

WESSOL, LLC warrants to the original purchaser that the X-Stream Clean® product will function as intended under normal use and consistent maintenance, subject to the limitations and exclusions detailed below. At the discretion of WESSOL, LLC, we will repair or replace any parts found to be defective in material or workmanship without charge, apart from shipping and handling costs, during the covered warranty period.

WARRANTY PERIOD

The warranty period will begin from the date of retail purchase and exist for one 1 year, regardless of when the unit is placed in service. The warranty period is not extended if we opt to repair or replace the product in question.

WARRANTY CLAIMS

WESSOL, LLC reserves the right to require the return of the defective product, proof of purchase, and established product registration to file a claim under this warranty.

If the product fails to function as intended **DO NOT RETURN IT TO THE STORE**, call our customer support hotline at +1 803.339.2500, email info@xstreamclean.com or submit a contact form at xstreamclean.com/warranty.

PRODUCT REGISTRATION

All purchases from X-Stream Clean® or an authorized distributor must be registered online to validate the warranty and allow for warranty claim processing. Follow the link below to register your spray mop.

EXCLUSIONS AND LIMITATIONS

WESSOL, LLC only warrants products purchased from authorized distributors. Products purchased from unauthorized resellers or distributors are not subject to warranty services. The limited warranty does not cover damages, loss, or injury resulting from transportation, storage, accident, improper use, neglect, modifications, normal wear, or operation not in accordance with the instruction manual.

WESSOL, LLC reserves the right to change the design or specifications of any product without obligation to modify previously produced units.

ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR CONSUMER USE, ARE LIMITED TO THE DURATION SPECIFIED ABOVE. WESSOL, LLC'S LIABILITY IS LIMITED SOLELY TO THE REPAIR OR REPLACEMENT OF THE NON-FUNCTIONING PRODUCT OR PART. WESSOL, LLC EXCLUDES LIABILITY UNDER THIS WARRANTY FOR ANY AND ALL INCIDENTAL AND CONSEQUENTIAL LOSS OR DAMAGE.

In no event shall WESSOL, LLC be liable for any incidental, special, consequential or punitive damages, or for any costs, attorney fees, expenses, losses or delays alleged to be as a consequence of any damage to, failure of, or defect in any product including, but not limited to, any claims for loss of profits. Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary from state to state.

xstreamclean.com/warranty



xstreamclean.com
+1 803.339.2500
info@xstreamclean.com

© WESSOL, LLC