

## SURGE



## **OPERATING INSTRUCTIONS**

BEFORE USE: Remove tail cap and remove plastic tab on battery.

**BATTERY REPLACEMENT:** Install battery by first removing tail cap. Place one 26650 (3.7 volts) rechargeable battery with positive (+) end toward head of flashlight as shown. Make sure the spring is in the tail cap. Replace tail cap by screwing in securely.

**BATTERY RECHARGING:** Use USB-C charging cord. Unscrew head of flashlight and plug USB-C cord into charging port. Blue indicator lights will become solid when fully charged.

**PUSH BUTTON SWITCH:** Press button switch on side of barrel to turn flashlight On and Off. Partially depress button to cycle through modes: High, Med, Low, Strobe, SOS. Blue indicator lights will momentarily indicate charge level of battery when flashlight is first turned on.

1-YEAR LIMITED WARRANTY: This product is guaranteed to be free of defects in material and workmanship for one year from date of purchase to the original owner. If this product is defective, call our Customer Service at 855-735-9922 for repair or replacement parts or return the product to store from which it was purchased. Guarantee does not include normal wear and tear, batteries or charging cords.

Fair Game Group LLC

Carrollton, TX 75006 www.surge-lighting.com

## **A WARNING**

To prevent damage to eyesight, never look into light when light is on. Do not shine light into the face of someone else.

Batteries must be recycled or disposed of properly Model HHL3070AS