


**1000  
LUMENS**

# ***SURGE***

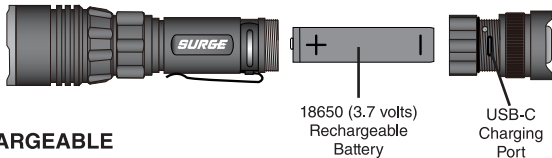

## **RECHARGEABLE LED FLASHLIGHT**

### **OPERATING INSTRUCTIONS**

**BEFORE USE:** Remove tail cap and remove plastic tab on battery.

**BATTERY REPLACEMENT:** Install battery by first removing tail cap. Place one 18650 (3.7 volts) rechargeable battery with positive (+) end toward head of flashlight as shown. Make sure the spring is in the tail cap. Replace tail cap by screwing in securely.

**BATTERY RECHARGING:** Use USB-C charging cord. Unscrew tail cap and plug USB-C cord into charging port. Indicator light will turn green when fully charged.

**PUSH BUTTON SWITCH:** Press button switch in tail cap to cycle through lighting modes: High, Low, Strobe.

**1-YEAR LIMITED WARRANTY:** This product is guaranteed to be free of defects in material and workmanship for one year from date of purchase to the original owner. If this product is defective, call our Customer Service at 855-735-9922 for repair or replacement parts or return the product to store from which it was purchased. Guarantee does not include normal wear and tear, batteries or charging cords.

Fair Game Group LLC  
Carrollton, TX 75006  
www.surge-lighting.com

#### **⚠ WARNING**

To prevent damage to eyesight, never look into light when light is on. Do not shine light into the face of someone else.



Batteries must be recycled  
or disposed of properly

**Model HHL3080AS**

100 mm x 125 mm