

# Oven & Grill Cleaner

Oven and grill cleaner

## Features & Benefits

- Very efficient. Oven & Grill Cleaner quickly and easily penetrates and removes baked on deposits.
- Easy to use. Apply to surface, allow to react and wipe off.
- Economical. Oven & Grill Cleaner is highly concentrated, meaning it takes less product and less time to clean as normal oven cleaners.
- Does not contain solvents or other volatile compounds.

## Use Directions

Oven & Grill Cleaner may be applied by spraying, brushing or wiping onto surfaces. Do NOT atomise if spraying.

Do NOT use on aluminium, tin, brass, pilot lights or painted surfaces as damage may occur.

Preheat equipment to 40–70°C. For removing burnt-on fats, grease and carbon use Smart Choice Oven & Grill Cleaner undiluted. Allow it to penetrate for 5-15 minutes, then wipe with a damp cloth. Rinse thoroughly with water, or preferably a solution of 1 part vinegar to 10 parts water.

For grills and steak platters, dilute 1 litre of Oven & Grill Cleaner with 2 litres of water.

For fryers, use at a dilution rate of 1:15 with water

## Safety Information

**WARNING:** This substance is corrosive. Avoid contact with skin and eyes. Rubber gloves and eye protection should be worn. Avoid inhaling spray mist – wear a face mask if applying by spraying.

Oven & Grill Cleaner is classified as HAZARDOUS according to the criteria of Safe Work Australia and is classified as a DANGEROUS GOOD according to the Australian Dangerous Goods Code.

Refer to our safety data sheet (SDS) for more or consult your Chemform representative for further assistance.

## Packages

5, 20L