

# EASY OVEN

## Non Caustic Oven Cleaner

EASY OVEN is a non caustic oven and grill cleaner which dissolves heavy grease and food build up on ovens and hot plates without the overpowering fumes of caustic cleaners. Safer for staff to handle and easier to use. EASY OVEN de-carbonises, de-crusts and de-fats in one operation.

With a powerful combination of cleaning formula and surfactant system, EASY OVEN has the strength to remove burnt on carbon and grease deposits from cast iron, steel, stainless steel, glass, aluminium, enamel and ceramic surfaces.

This non-caustic cleaner is the product of choice when daily cleaning is required to keep oven and grill surfaces clean. For deep cleaning, TURBO S.O.C. is recommended.

### How to Use

EASY OVEN is a non caustic oven cleaner that effectively cleans ovens, grills plates, fry pans, rotisseries, cook tops and deep fryers. Best results are gained with regular use. USE NEAT

**Ovens** Heat oven to 50 degrees C. and switch off. Allow to cool for 5 to 10 minutes then apply EASY OVEN onto the side wall of the oven first, then the top and bottom. Allow to work for 5 to ten minutes on warm surface. Agitate surface to break up softened carbon deposits and grease, then wipe off with damp cloth, sponge or paper towel and rinse with potable water.

**Hot Plates** Apply OVEN. to slightly warm, NOT HOT, surface. Agitate with scourer or scraper then rinse off with potable water.

**Notes** WHEN CLEANING COLD OVENS AND GRILLS: Apply to surface, leave for 20 minutes, wipe or scour depending on the surface being cleaned, rinse off with potable water.

**SAFETY NOTES:** DO NOT use on a hot oven or grill plate. Turn the appliance off and allow cooling before cleaning.

### Specifications

Colour	Light yellow
Odour	Slight solvent
Rinsability	Yes

