

# MAINSRING

LONDON

**OXFORD GUARDIAN**  
6 SLOT WATCH WINDER

INSTRUCTION  
MANUAL



Vol. I. II EN

**M A I N S P R I N G**

L O N D O N

**OXFORD GUARDIAN**  
**6 SLOT WATCH WINDER**

The watch winder is a device designed to help keep automatic watches wound and running when not being worn.

Through careful, programmed rotations the winder moves the watch, which helps keep the watch parts, gears lubricated extending the life of the watch.

Your watches are wound and stored securely, ready to use, wound to be worn at any time.

For more details on operating this watch winder please refer to the enclosed booklet or visit  
**IM.MAINSPRING.STORE**

 
 
 
 
# WHAT'S INSIDE

 
1. Six slot watch winder

3. AC/DC Adapter

2. 6 x Pillow

4. 4 x Regional plug attachments

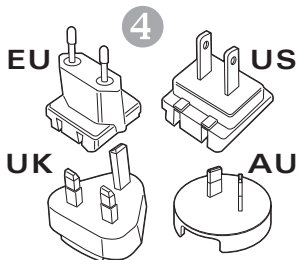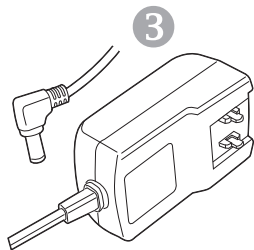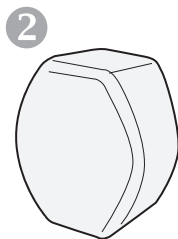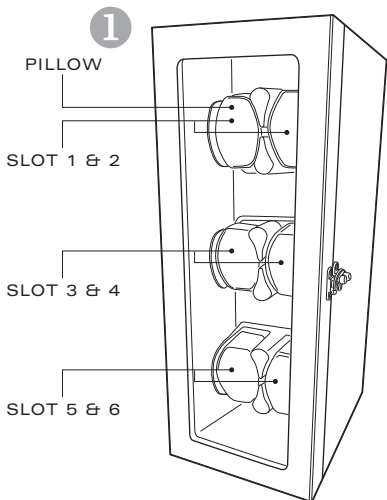


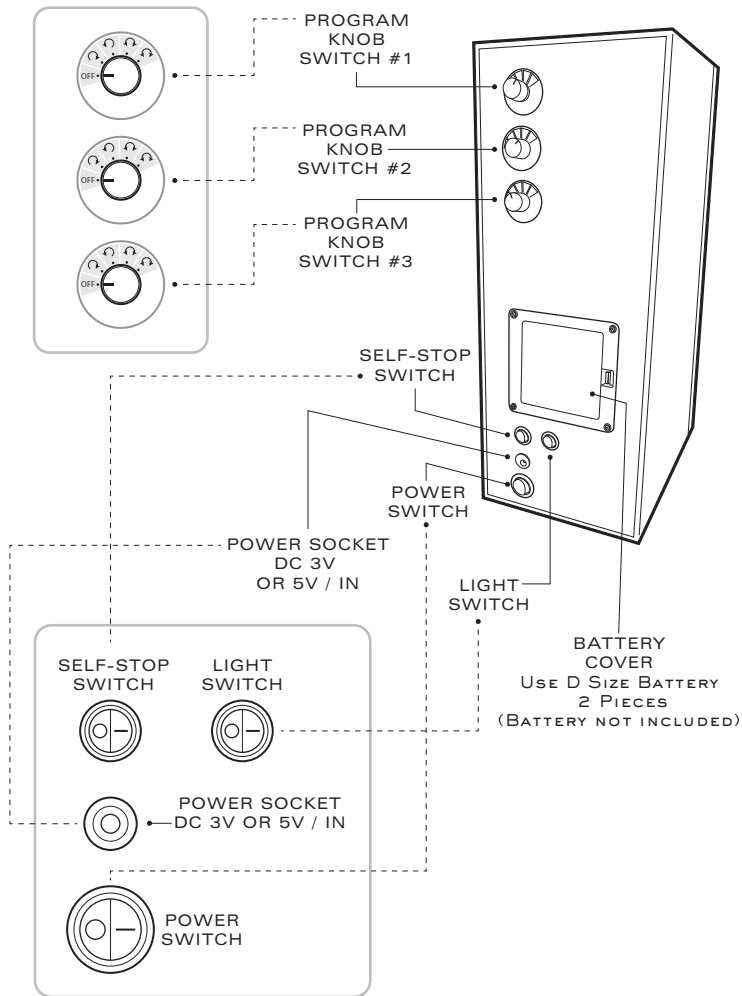


# OPERATION INSTRUCTIONS

If your automatic watch has already stopped running please manually wind the watch to ensure it is running first before storage in the winder.

 
1. Load your watch on the pillow, then fix it on the rotator.

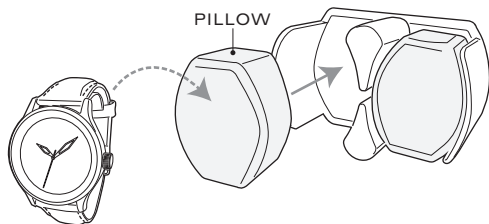

 2. Plug in the adapter and turn on the power.

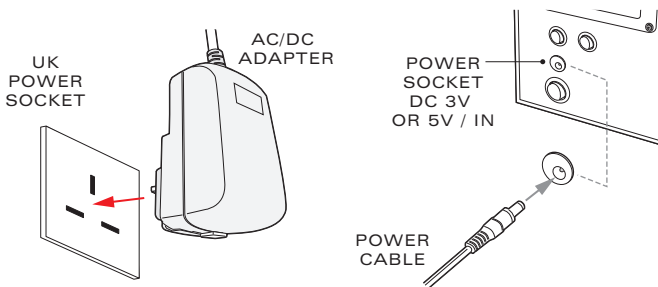

 3. Select a suitable programs mode by Program Knob Switch, 5 modes are available.

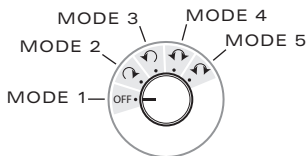


# PRODUCT WITH 5 PROGRAM MODES

Your winder is equipped with different modes of operation. Each one id.

## 5 PROGRAM MODES

 While all modes should work for your watch, your winder is equipped with multiple wind settings that enable a more finely tuned experience better suited to your timepieces.

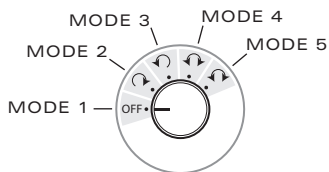

Mode 1: Winder is off.

Mode 2: Winder rotates clockwise for 2 minutes, rests for 6 minutes, then repeats the cycle.

Mode 3: Winder rotates counter-clockwise for 2 minutes, rests for 6 minutes, then repeats the cycle.


Mode 4: Winder rotates clockwise for 2 minutes, rests for 6 minutes, then rotates counter-clockwise for 2 minutes, rests for 6 minutes, then repeats the cycle.

Mode 5: Winder rotates clockwise for 5 minutes, counter-clockwise for 5 minutes, repeats this cycle for 3 hours, then rests for 9 hours before repeating the entire cycle from the beginning.

## SELF-STOP SWITCH

 I: When the door is open the motors will stop working and trays will stop moving. When the door is closed all the motors work and the trays will start revolving.

O: The product is off. Even if the door is closed, it will not run.

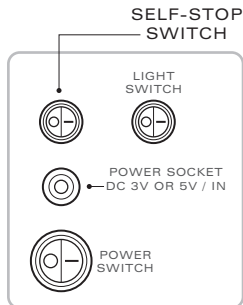

# TROUBLE SHOOTING

Please note that the winder is designed to rotate and maintain the amount of power reserve in the watch. If your watch is already on a low amount of power reserve or is not running when you place it in the winder, it may not work.

Please check that the door of the winder is closed. The winder motors will stop running when the door is open when the “SELF STOP SWITCH” is operated.

There are some factors which generally affect the effectiveness of the winder :

1. Check the watch placement in the winder. Your watch should be placed in the winder with the dial facing you. When looking at your watch in the winder, it should be as if you are making a reading of it from your wrist.
2. Some watches must be fully wound before being placed into the winder as the power reserve when removed from your wrist may not be enough to keep the watch wound. Please refer to your instruction manual on how to manually wind your watch.
3. Manually wind your watch prior to placing it into the winder. You can prop the back of the winder using a book or magazine to increase the angle of the turntable and test the winder again. The closer the watch dial is to being vertical the better the chance of the test being accurate.

## CAUTION:

1. Please use the adapter included with your watch winder or similar adapters with the exact same voltage output.
2. Please do not manually spin the winder. This will damage your watch winder and void your warranty.
3. Avoid exposing the watch winder to direct sun, water and extreme temperatures which may damage the watch winder.

# CARE AND MAINTENANCE

1. Please do not place your watch winder in direct sunlight or other heat sources such as radiators, electric heaters or stoves.
2. Your watch winder should be kept away from water and liquids.
3. Avoid placing your winder next to areas of excessive sand, dust or other objects that may vibrate, as this may also impact the functioning of your winder.
4. Please store your watch winder at room temperature.
5. When the watch winder is on, make sure there is nothing stopping or blocking it from turning.
6. Unplug your watch winder if not being used for a prolonged period of time.
7. Watch winders are not toys. We recommend that you store your winder carefully out of reach of children.
8. Your watch winder does not require any special maintenance. We recommend cleaning it regularly with a soft, damp cloth, then wiping it dry.



## RECYCLING

Your watch winder, together with new or used batteries, must not be disposed of as household waste. These elements must be taken to a waste collection point that recycles electrical devices and batteries.

By ensuring these products are disposed of properly you can help prevent potentially harmful effects, both to the environment and human health. Recycling helps conserve natural resources. For further information on recycling this product please contact your local authority, waste collection site, or place of purchase.

### **DARTMOUTH BRANDS LTD**

C/O THE WOW COMPANY  
HIKENIELD HOUSE, EAST ANTON COURT,  
ICKNIELD WAY, EAST ANTON,  
ANDOVER SP10 5RG,  
UNITED KINGDOM.

RoHS  
COMPLIANT

