

DSM ARCADE



Switch 'N' Shoot Arcade Manual

Endless arcade action with just ONE button - Switch directions whenever you shoot!

Contents:

- Objective
- Game Controls
- Operator Menu
- Switch 'N' Shoot Pinout
- Contact

Objective:

- Shoot aliens, advance in sectors, and achieve a high score.

Game Controls:

Big Red Button - Switch and Shoot

Operator Menu:

The button to access the Operator Menu is located inside the upper coin door.

Pressing the button will show the following options:


- **Mute Music in Attract Mode**
 - On/Off
- **Free Play**
 - On/Off
- **Credits per Payment**
 - Select the cost of play.
- **Enable Consolation Credits**
 - This feature enables a system that greatly assists in onboarding new players. If you score under a certain threshold, you will be awarded an additional credit.

- **Consolation Credit Threshold**
 - This determines the maximum amount a person can score and still earn a consolation credit. If a player exceeds this amount, they will not earn an additional Consolation Credit.
- **Reset Scores Weekly**
 - This feature ensures new players have a chance of achieving a high score.
- **RESTORE ALL DEFAULT SETTINGS**
 - Return the system to factory defaults.
- **RESET HIGH SCORES**
 - Reset high scores to factory defaults.
- **RESET CREDITS**
 - Set credits back to 0.
- **SAVE & QUIT**
 - Save your settings and return to the game.

Switch 'N' Shoot Pinout:

The Switch 'N' Shoot Arcade Cabinet uses a control board called an I-PAC2. It converts all arcade button presses to keyboard strokes for the arcade PC. Below is a pinout diagram to ensure your controls are wired correctly.

Switch 'N' Shoot Pinout

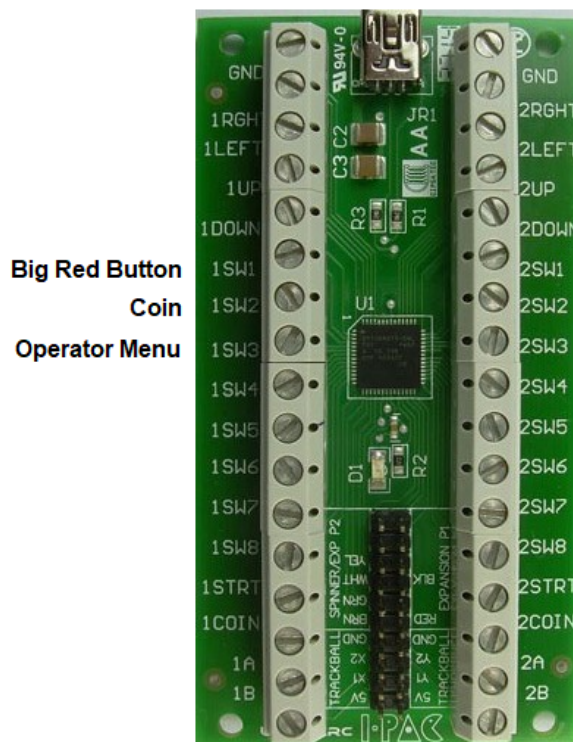

FAQ:*Audio Sounds Distorted, Speakers Sound “Blown Out”*

- The sound level in the Operating System may have been set too high. Connect a keyboard and mouse, press Alt+F4, and click the top-right hand corner of the screen. Reduce volume level to 50%. Reboot through OS or by toggling power switch in rear.

What is the Operating System Admin password?

- If you need the administrator password, it is “game123!”. We strongly recommend against any unauthorized changes to the OS settings.

Contact:

Contact support@dsmarcade.com for any questions you may have about your Switch ‘N’ Shoot Arcade Cabinet. The standard warranty is 12 months cabinetry, 3 months electronics. Warranty starts on the day of delivery. Support and repair options are always available, regardless of warranty.