

IMPORTANT SAFEGUARDS

SAVE THIS INSTRUCTION BOOK
FOR FUTURE REFERENCE

1. For first time use, clean your **La Pavoni** coffee grinder with a soft damp cloth. Unplug the unit and wipe the storage chamber (Fig. 6), lid and bean chamber (Fig. 5), dry completely before using.
2. DO NOT WASH ANY PART OR COMPONENT IN A DISHWASHER OR WITH WATER AT OR ABOVE 120 DEGREES. DAMAGE TO THE APPLIANCE AND ITS PARTS MAY OCCUR. The grinder body may be wiped with a damp cloth. Never use any cleaners with a strong scent; coffee will absorb such odors.
3. To protect against the risk of electrical shock, **do not immerse the cord, plug or any part of the appliance in water.** If the unit falls into or is immersed in water, UNPLUG IMMEDIATELY. Do not reach into the water!
4. Close supervision is necessary when any appliance is used by or near children. Always unplug when not in use, or before removing any parts for cleaning. Do not let the cord hang over the edge of a table or counter top; avoid contact with any hot surface.
5. Ensure all parts are securely assembled before use, check the BURR wheel (Fig. 7) to ensure it has been replaced and locked after cleaning. Avoid contact with any moving parts.
6. Check bean chamber for the presence of foreign objects before using. ONLY COFFEE BEANS SHOULD BE PLACED IN THE BEAN CHAMBER (Fig. 5), THIS UNIT IS NOT DESIGNED FOR GRINDING SPICE OR OTHER TYPES OF BEANS.
7. Do not use outdoors, or with any other attachment or accessory not designed for the **La Pavoni** PA-BURR grinder.
8. Use only 120V 60hz power source, do not use the unit if the power cord or plug has been damaged, return unit for repair.

P.4

IMPORTANT NOTICE:

ALL WARRANTY INFORMATION IS LISTED ON THE ENCLOSED CARD. PLEASE FILL OUT THE INFORMATION AND RETURN THE SELF-ADDRESSED PORTION OF THE CARD AND KEEP THE REMAINDER FOR YOUR RECORDS. FOR FURTHER ASSISTANCE OR QUESTIONS CALL, WRITE OR EMAIL .

EUROPEAN GIFT
& HOUSEWARE
514 S. 5TH AVE.
MT. VERNON, NY
10550

PH: 800-927-0277
FAX: 914-664-3257
EMAIL: sales@europeangift.com



The Finest
Gourmet
Products for

LA PAVONI

COFFEE GRINDER

AUTOMATIC BURR GRINDER



MODEL PA-BURR

MODEL PA-BURR-C

MODEL PA-BURR-BC

HOUSEHOLD USE ONLY

“ A users guide for great coffee”

TIPS AND CARE INSTRUCTION

WHEN USING ANY ELECTRICAL APPLIANCE, BASIC SAFETY PRECAUTIONS SHOULD ALWAYS BE FOLLOWED. PLEASE READ ALL INSTRUCTIONS CAREFULLY.

1. Remove the lid at the top (Fig. 1) and ensure the bean chamber is empty and clean. The top chamber will store up to 1/4 pound of coffee. To ensure freshness, do not store coffee in chamber for long periods of time.
2. Fill the coffee beans into the bean chamber (Fig. 1) with quality coffee. The 4oz. capacity will equal about 18 cups of **drip-style** coffee.
Note: Espresso and other dark roasts may weigh less by volume.
3. Plug the cord into a 110 AC outlet. **Note:** The system is controlled by a computer chip. The area under the portion timer will feel warm to the touch when plugged in. This is normal.
4. The grind size setting (Fig. 4) will be found on the left side of the unit. It contains a numbered progression of 18 settings from fine to coarse. Rotate the wheel to match your grind selection. The top 4 coarse settings are for **percolator** and **coffee press**. The medium 6 settings are used for **electric Auto-drip (flat brew basket) method**. The medium fine setting is used for **cone-style electric drip** machines and **stove top espresso pots**. Use the finest 4 settings for **electric pump espresso machines**. Your choice of water, brewing method, type of roast and quality of beans will all affect the taste of the coffee. **Note:** The **PA-BURR** grinder is not designed to grind very fine coffee and may not be suitable with some **Piston style Espresso machines**.
5. **Please Note:** Some roasters produce a very oily beans that can jam and clog almost any grinder. If you prefer to use dark oily bean you must remove the burrs and clean them with a brush and soft cloth daily. Oily roasts can cause coffee grinds to stick to the sides of the chamber and the oil to coat the burrs, so daily maintenance is essential for proper operation. The grinding wheel area can be cleaned by unlocking the

P.2 Household use only, Recommended use with Automatic drip and electric espresso machines. Not intended for extra fine machine use. For questions regarding the use and operation of this unit, please contact EG&H at 800-927-0277 or email customer service at lapavoni@erols.com

“ A users guide for great coffee continued”

5. **burr wheel.** Turn the wheel clockwise and lift up to remove. Make sure to lock the grinding wheel securely before using again. Dust out the coffee chute with a small soft brush or pipe cleaner to improve performance of the unit.
6. Place the storage chamber (Fig. 6) with the cover in position into the unit and make sure it snaps securely. Fine coffee grinds can leak out of the edge of the chamber if the unit has been damaged, not replaced correctly or if used at very high elevation.
7. Set the timer (Fig. 2) for how many cups you wish to brew and adjust the grind size setting (Fig. 4). You may wish to add more coffee if your brewing unit operates at a temperature below the industry standard of 180degrees.
8. Push the activator button (Fig. 3) to start the grinder. The coffee grinder will switch off automatically when it reaches the desired amount. **Note:** If you wish to end the cycle early, press the activator button (Fig. 3) again.
9. Remove the coffee from the storage container (Fig. 6) and **ENJOY** the rich taste of fresh coffee!

Description of Parts

