

IMPORTANT SAFEGUARDS

SAVE THIS INSTRUCTION BOOK

1. **For first time use**, clean your *La Pavoni* coffee grinder with a soft damp cloth. Unplug the unit and wipe the grinding chamber (Fig. 4), lid (Fig. 1), dry completely before using.
2. DO NOT WASH ANY PART OR COMPONENT IN A DISHWASHER OR WITH WATER AT OR ABOVE 120 DEGREES. DAMAGE TO THE APPLIANCE AND IT'S PARTS MAY OCCUR. The grinder body may be wiped with a damp cloth. Never use any cleaners with a strong scent; coffee will absorb such odors.
3. To protect against the risk of electrical shock, **do not immerse the cord, plug or any part of the appliance in water**. If the unit falls into or is immersed in water, UNPLUG IMMEDIATELY. Do not reach into the water!
4. Close supervision is necessary when any appliance is used by or near children. Always unplug when not in use, or before removing any parts for cleaning. Do not let the cord hang over the edge of a table or counter top; avoid contact with any hot surface. Do not disassemble until motor stops completely.
5. Ensure all parts are securely assembled before use, check the blade (Fig. 4) to ensure it has been in the locked position after cleaning. Avoid contact with any moving parts. Unplug from outlet when not in use.
6. Check bean chamber for the presence of foreign objects before using. ONLY COFFEE BEANS SHOULD BE PLACED IN THE BEAN CHAMBER (Fig. 5), THIS UNIT IS NOT DESIGNED FOR GRINDING SPICE OR OTHER TYPES OF BEANS.
7. Do not use outdoors, or with any other attachment or accessory not designed for the *La pavoni* PA-mill grinder.
8. Use only 120V 60hz power source, do not use the unit if the power cord or plug has been damaged, return unit for repair.

IMPORTANT NOTICE:

ALL WARRANTY INFORMATION IS LISTED ON THE ENCLOSED CARD. PLEASE FILL OUT THE INFORMATION AND RETURN THE SELF-ADDRESSED PORTION OF THE CARD AND KEEP THE REMAINDER FOR YOUR RECORDS. FOR FURTHER ASSISTANCE OR QUESTIONS CALL, WRITE OR EMAIL.

EUROPEAN GIFT
& HOUSEWARE
514 S. 5TH AVE.
MT. VERNON, NY
10550



PHONE: 800-927-0277
FAX: 914-664-3257
EMAIL: sales@europeangift.com

LA PAVONI

COFFEE GRINDER

MILL GRINDER



MODEL: PA-MILL


PA-MILL-C

PA-MILL-B

HOUSEHOLD USE ONLY

PARTS DESCRIPTIONS

1. SWITCH KNOB
2. TOP LID/MEASURING CUP
3. FILL LINE
4. CHOPPER
5. BEAN RESERVOIR
6. MOTOR BODY
7. PLUG

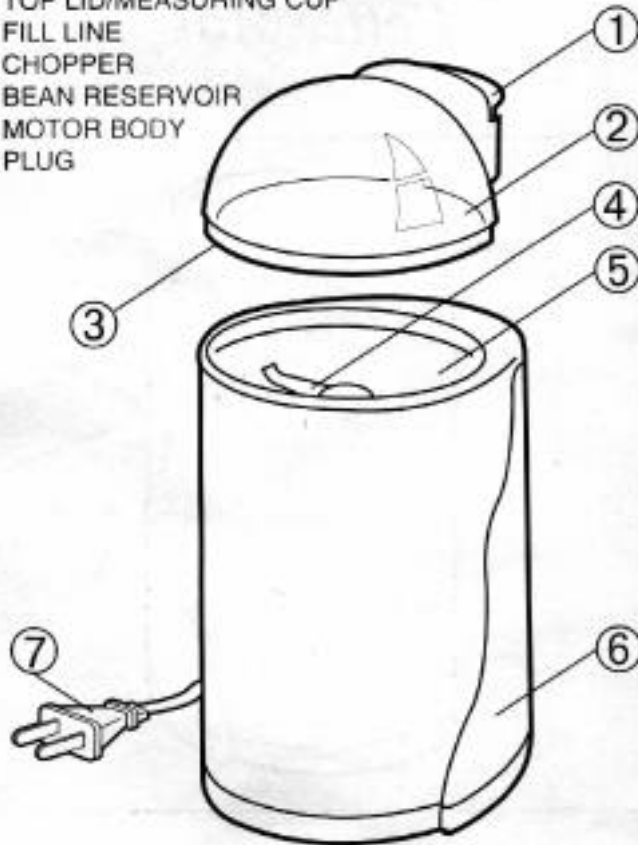

EUROPEAN GIFT & HOUSEWARE
514 S. 5TH AVE.
MT. VERNON, NY 10550
PHONE: 800-927-0277 FAX: 914-664-3257



HOW TO USE

1. **For first time use**, clean your **La Pavoni** coffee grinder with a soft damp cloth. Unplug the unit and wipe the grinding chamber (Fig. 4), lid (Fig. 1), dry completely before using.
2. Fill top lid with coffee beans up to the fill line (Fig.2), then pour into bean grind chamber (Fig. 5)
3. Screw top lid firmly into place (Fig 3)..
4. Plug the **La pavoni** PA- MILL grinder firmly into AC outlet (Fig 7).
5. Depress on/off button with pulse action until coffee beans reach desired grind consistency (Fig 1.). Note: Your grind size depends on the length of time the PA-MILL operates.
6. After using, switch off the appliance and disconnect the plug.
7. Unscrew top lid and empty out the ground coffee.

IMPORTANT

Never hold down the on / off switch for longer than 30 seconds.
Never unscrew top lid while mill is operating.
Never operate mill with the reservoir empty.
Always use on level surface.
Rinse top lid after each use.
Store unit in dry place when not in use, never use outdoors or near water. Keep out of the reach of children.