 




OPERATION MANUAL

T3

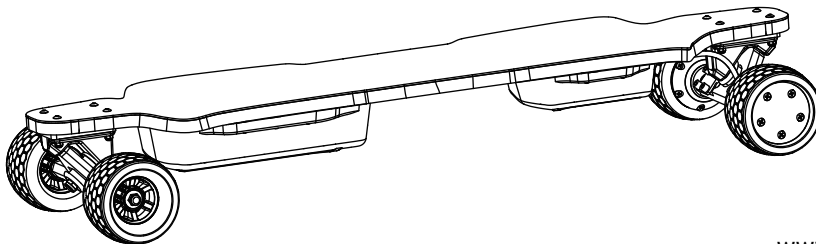

WWW.POSSWAY.COM

READ BEFORE RIDING

THERE IS A RISK OF SERIOUS INJURY

Whenever you ride a board, you risk death or serious injury from loss of control, collision, and falls. To ride safely, you must read and follow the instructions and warnings in the manual.

Always wear a helmet when riding. Avoid water, wet surfaces, slippery / uneven surfaces, steep hills, traffic, cracks, tracks, gravel, rocks, or any obstacles that could cause a loss of traction and cause a fall. Avoid night riding, areas with poor visibility, and small spaces.

This board has a regenerative brake function. Braking downhill on a full battery can cause a board shutdown. To avoid this situation please ride on flat or uphill roads to reduce the battery energy before attempting a downhill.

Warning: Do not ride on side-hills or on an incline of more than 10 degrees. Do not ride at speed which you would not safely control the board. In case of wireless interface or battery error, you may need to rely on skating techniques like foot braking or sliding to stop.



WARNING: AVOID WATER!

Your board is not completely waterproof, you can easily go through the puddles but don't soak the board in the water. Water damage is not covered under the warranty.



WARNING: PINCH POINTS!

Keep fingers, hair, and clothing away from belts, motors, wheels, and all moving parts.



WARNING: RISK OF ELECTRONIC SHOCK!

Do not open or tamper with electronics housing, which also voids the warranty.

PROTECT

- Always wear a helmet.
- Find an open, flat area with clean pavement for your first ride.
- Read the warning on the skateboard and at the beginning of this manual.
- Other protective equipment is highly recommended.



 
STANCE

Follow these tips to ensure a safe riding experience:


- Move the throttle wheel in small increments.
- Keep a wide stance on the board.
- Keep a low center of gravity.
- Lean forward when accelerating.
- Lean backward when braking.



QUICK START GUIDE

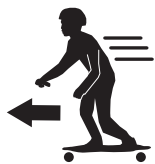

Accelerate

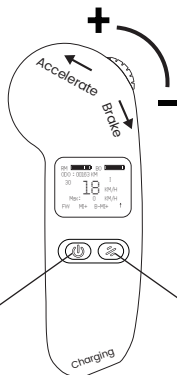 


Power On

Switch Ride Mode




 Brake


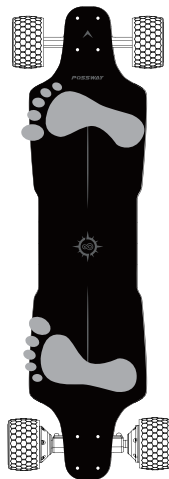


If you're a beginner, please roll the throttle wheel forward gently to start with a slow speed to avoid falling.

 BOARD DIAGRAM

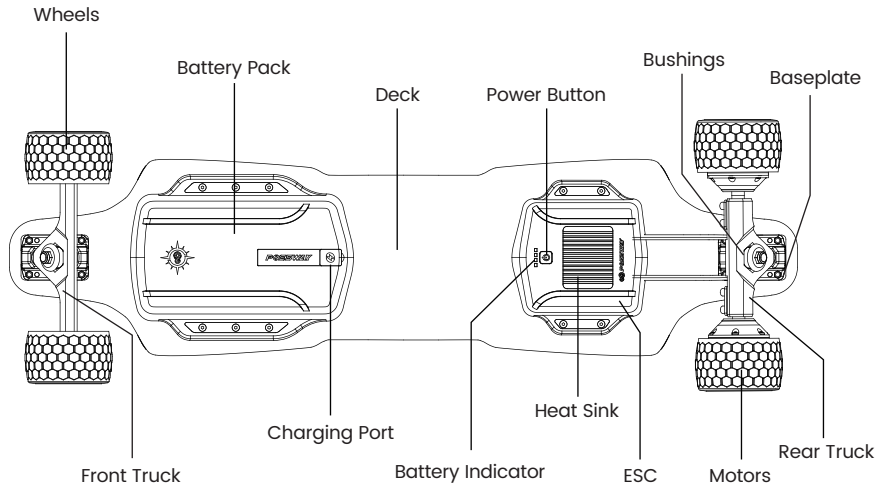

REMOTE DIAGRAM

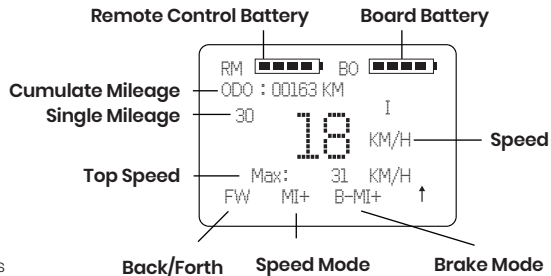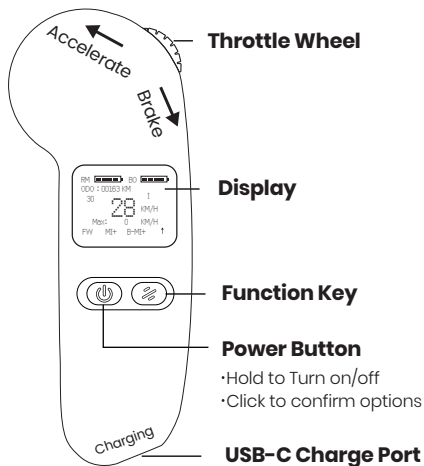  


SPECIFICATION

Board Size	945*235*133mm (37.2x 9.3x 5.2 in)		
Minimum Ground Clearance	56mm		
Board Material	8 ply canadian maple and 1 ply Bamboo		
Wheels	105*65mm, 85 resilience, SHR78A, Shock-Absorbing Wheels		
Battery Type	7.8Ah, 36V, 10S3P 18650 Li-ion Battery		
Range	28-32km (17-20mi) The range varies according to the road, slope, and rider's weight.		
Ride Mode	Lo: 0-10km/h (6 mph) Mi: 0-20km/h (12mph) Hi: 0-52km/h (32mph) Pro: 0-52km/h (Faster acceleration)		
Climbing Grade	Up to 30%	Weight	20.2lb / 9.2kg
Top Speed	32mph / 52kmh	Max load	330lb / 150kg
Battery Capacity	280.8wh	Trucks	45°, 7in
Waterproof Rating	IP54	Remote Distance	15-20m
Board Charging Time	4 hours (2A)/1.5 hours (5A)	Remote Charge Time	40 mins

POWER ON / OFF

A POWER ON/OFF THE BOARD

 Press the Power Button for 1 second.



B Auto Power ON

Push the skateboard forward and after a beep, the skateboard will turn on automatically.

 
 


Auto Power OFF


When the skateboard is stationary for 10 minutes, the power will be turned off automatically.



MARCHING DIRECTION

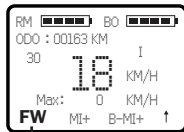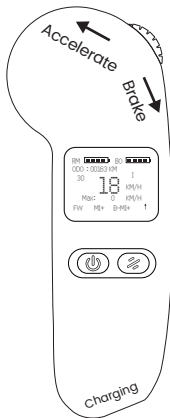


→ **FW: Forward**

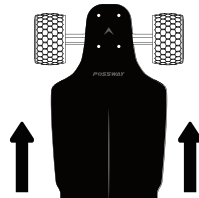 


Double-click to switch marching direction.



 
Do not switch directions while riding to avoid falling.

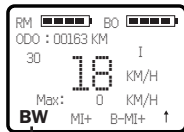

→ **BW: Backward**

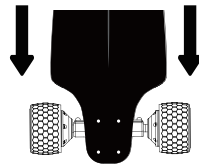 


RIDE MODE

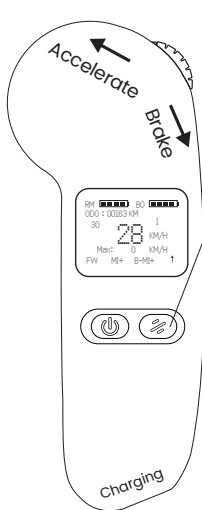 


SWITCH RIDE MODE

 
Click the button  to switch Ride Mode options.

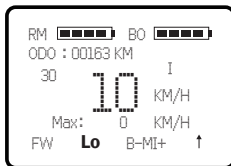


LO: 0-10km/h (6mph)

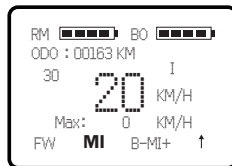 

MI: 0-20km/h (12mph)


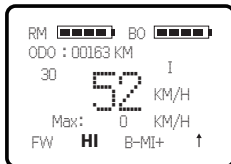 


HI: 0-52km/h (32mph)

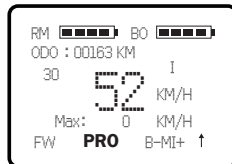 


PRO: 0-52km/h (32mph)
(Faster acceleration)

  
ADJUST THE BRAKE STRENGTH

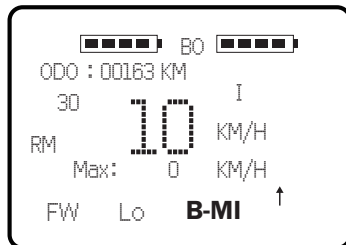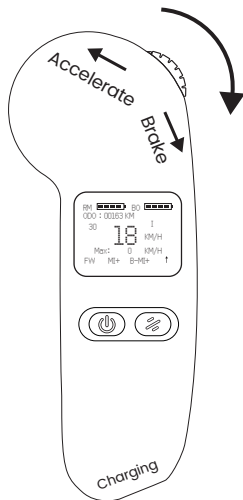



B-LO
B-MI
B-HI
B-PRO

 Pull the Throttle Wheel back on the remote control and do not release it. At the same time, short press the  to switch the four gears of the braking strength.

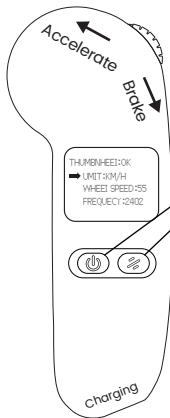ADJUST SPEED UNIT

 
 


① Turn off the remote.



② Press the  button and  button to enter setting mode.



③ Roll the throttle wheel and adjust the speed unit.

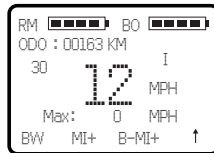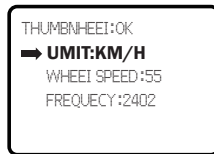④ Press power button  to save settings.

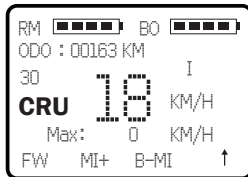 
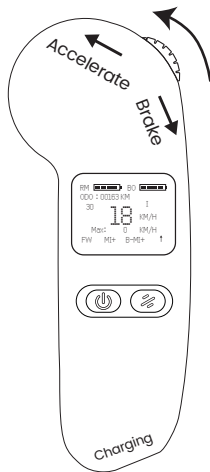 


SET CRUISE CONTROL



- ① Accelerate to the speed you want.
- ② Short press the Power button  to display CRU, and enter Cruise Control.
- ③ Push to accelerate, brake, or press the Power  button again to exit Cruise Control.

  CHARGE THE BOARD

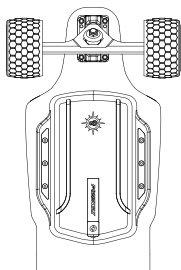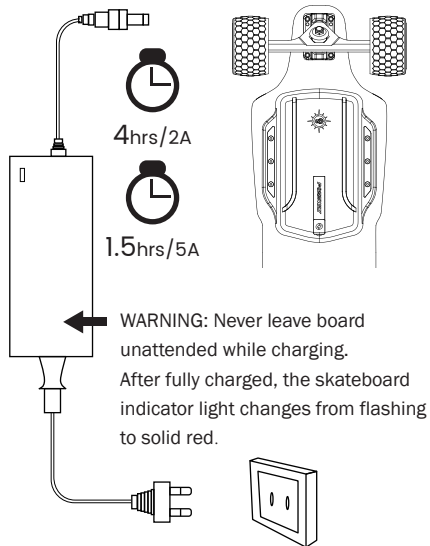


■ □ □ □
Less than 30%

■ ■ □ □
30% - 70%

 
■ ■ ■ □
70% - 90%



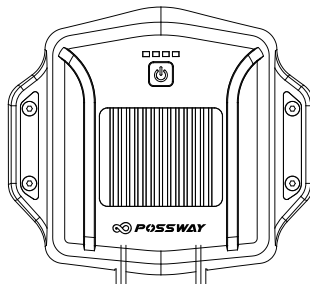


■ ■ ■ ■
90% - 100%

 Battery light
Signal light — ■ ■ ■ ■

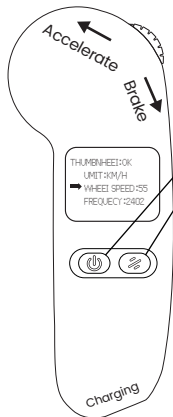

REPLACE WHEELS



- ① Turn off the remote.
- ② Press the  button and  button to enter setting mode.
- ③ Press  button to select wheel speed.
- ④ Roll the throttle wheel  and adjust the wheel speed.
- ⑤ Press power button  to save settings.

THUMBHEEI:OK
LIMIT:KM/H
→ WHEEL SPEED:55
FREQUENCY:2402

90mm wheels



THUMBHEEI:OK
LIMIT:KM/H
→ WHEEL SPEED:62
FREQUENCY:2402

105mm wheels



PRECAUTIONS FOR USE

RIDING OUTSIDE OF YOUR PRIVATE PROPERTY

Abide by the laws and regulations in your state or country.

Respect other drivers and pedestrians on the road.

Avoid riding in busy traffics and crowded areas.

Do not park your board in a way that blocks people or traffic, or may create a safety issue.

Cross road at designated crosswalks or signaled intersections.

When riding with other riders, keep a safe distance from each other and other transport devices.

Identify and keep a safe distance from hazards and obstacles on the road.

Do not ride your board on private property unless you have obtained permission.

STORAGE AND MAINTENANCE

Do frequent maintenance checks, make sure all screws are tight before riding.

Clean the bearings regularly.

Turn off board and controller when not in use.

Recharge the battery in well ventilated area.

Do not charge the battery in area with might wet the board or charging units.

Do not leave the board charging unattended. Stop using the product or charging unit if any wire is damaged.

Only use charging units supplied by us.

Do not use the board battery to power any other equipments.

BATTERY SAFETY

Lithium-ion battery can explode or cause a fire if they are used incorrectly. Therefore, it is recommended to read the following instructions very carefully:

- Each time before riding the board, carefully check the battery pack and especially the protective seal. Make it is undamaged and intact. If in doubt, take the battery to a chemical waste disposal facility.
- Never drop the board.
- Store the board with battery inside in a dry place.
- Never expose the battery to temperature above 100 Celsius degrees.
- Only use official board charger for charging board battery.
- Never leave the board unattended when charging.
- Never make the board work when charging.
- Charge fully the battery before first time use. This gives it better long-term performance.



If you are not planning to use the board for about 2 months or longer, Charge it to at least 50% - 60% and charge it once a month. A lithium-ion battery that has been left empty for too long no longer be charged.

WARRANTY

LIMITED WARRANTY

- We offer 6 months (180 days) warranty on parts from the date when you receive the board.
- If a defect arises during the Warranty Period, Company will , at is options :
 - 1) Send the new parts to replace the defect parts.
 - 2) Exchange the affected Products with functionally equivalent Products that are new or formed from new and/or previously used parts that are equivalent to new in performance and reliability.
- This warranty excludes damage resulting from abuse, accident, modifications, unauthorized repairs, neglect, abuse, water damage, or other causes that are not defects in materials and workmanship.
- This warranty excludes normal depletion of consumable parts (grip tape, wheels & bearings) unless due to a defect in materials or workmanship.
- This warranty excludes gifts.

FOR ALL RETURN and WARRANTY SHIPPING

Please keep your shipping box. The warranty does not include damage from shipping in insufficient packaging.

The damage of skateboard caused by immersion of water will not be within the scope of warranty.



www.possway.com



After-sales service:
service@possway.com

If the parameters are updated without notice, please refer to the official website.2021.12.31