


## **USER MANUAL**

# V4 PRO

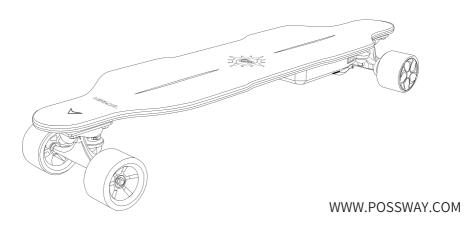

## **READ BEFORE RIDING**

#### THERE IS A RISK OF SERIOUS INJURY

Whenever you ride a board, you risk death or serious injury from loss of control, collision, and falls. To ride safely, you must read and follow the instructions and warnings in the manual.

Always wear a helmat when riding. Avoid water, wet surfaces, slippery / uneven surfaces, steep hills, traffic, cracks, tracks, gravel, rocks, or any obstacles that could cause a loss of traction and cause a fall. Avoid night riding, areas with poor visibility, and small spaces.

This board has a regenerative brake function. Braking downhill on a full battery can cause a board shutdown. To avoid this situation please ride on flat or uphill roads to reduce the battery energy before attempting a downhill.

Warning: Do not ride on side-hills or on an incline of more than 10 degress. Do not ride at speed which you would not safely control the board. In case of wireless interface or battery error, you may need to rely on skating techniques like foot braking of sliding to stop.



#### WARNING: AVOID WATER!

Your board is not completely waterproof, you can easily go through the puddles but don't soak the board in the water. Water damage is not covered under the warranty.



#### WARNING: RISK OF ELECTRONIC SHOCK!

Do not open or tamper with electronics housing without Possway's guidance, which also voids the warranty.

## THANK YOU FOR BUYING OUR ELECTRIC SKATEBOARD

### **PROTECT**

- · Always wear a helmet.
- · Find an open, flat area with clean pavement for your first ride.
- · Read the warning on the skateboard and at the beginning of this manual.
- · Other protective equipment is highly recommended.









## **STANCE**

Follow these tips to ensure a safe riding experience:

- · Move the throttle wheel in small increments.
- · Keep a wide stance on the board.
- · Keep a low center of gravity.
- · Lean forward when accelerating.
- · Lean backward when braking.






Please take some time to learn it and read this manual carefully. Especially safety, we hope you will like this product and have a lot of fun from it in the future.


## PARTS DIAGRAM

Capability	Mileage	13km / 8mph*	Entire board	N.W.	6.4kg / 14lb
	Low speed	0-7km/h / 0-4mph		Size	900*230*125mm
	Medium speed	0-15km/h / 9mph		Max load	100kg / 220lb
	Max speed	0-38km/h / 23mph *	Motor	Туре	83mm Hub Motor
	Max speed	0-38km/h / 23mph* (Faster Acceleration)		Power	400W*2
Battery	Capacity	4000mAh 29.4V	Wheel	Material	PU
	Туре	Lithium Battery		Size	83*51mm
	Charging time	2.5 Hrs	Remote	Distance	15-20m
Board	Material	8 Layers Maple		Frequency	2.4G
Mileage data was tested by a 60kg/132lb rider at M				Charge time	40 min
mode on a flat road.Maxspeed data was tested by a 60kg/132lb rider on a flat road.			Climbing	Grade	15%

## **PARTS DIAGRAM**

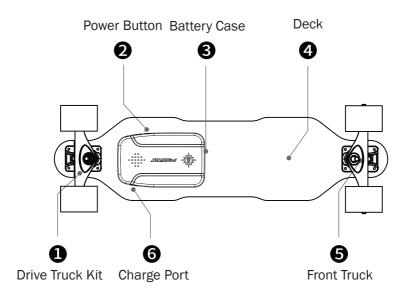

## **QUICK START GUIDE**

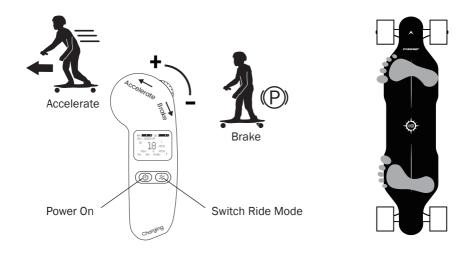




If you're a beginner, please roll the throttle wheel forward gently to start with a slow speed to avoid falling.

## POWER ON / OFF

A POWER ON/OFF THE BOARD

Press the power button for 1 second.

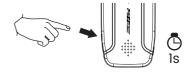

Auto Power ON

Push the skateboard forward and after a beep, the skateboard will turn on automatically.




**Auto Power OFF** 

When the skateboard is stationary for 10 minutes, the power will be turned off automatically.




## REMOTE CONTROL

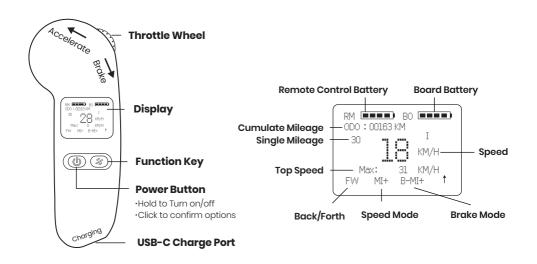

## MARCHING DIRECTION






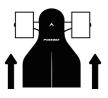


Double-click (b) to switch marching direction.



Do not switch directions while riding to avoid falling.

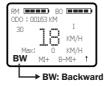

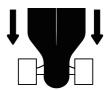


## RIDE MODE




#### **SWITCH RIDE MODE**


Click the button (%) to switch Ride Mode options.

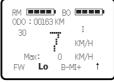

LO: 0-7km/h (4 mph)

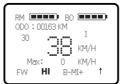

HI: 0-38km/h (23 mph)

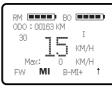


MI: 0-15km/h (9mph)



PRO: 0-38km/h (23mph) (Faster acceleration)

## ADJUST THE BRAKE STRENGTH




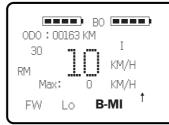

B-LO B-MI B-HI B-PRO


Pull the throttle wheel back on the remote control and do not release it. At the same time, short press the 💰 to switch the three gears of the braking strength.

## **ADJUST SPEED UNIT**

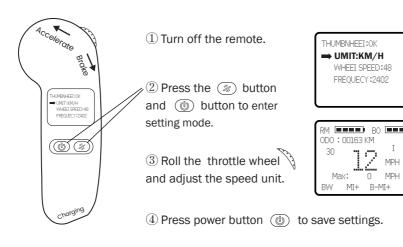

## SET CRUISE CONTROL



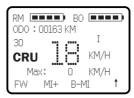

- ① Accelerate to the speed you want.
- $\ensuremath{\textcircled{2}}$  Short press the Power button  $\ensuremath{\textcircled{\textcircled{0}}}$  to display CRU, and enter Cruise Control.
- ③ Push to accelerate, brake, or press the Power (b) button again to exit Cruise Control.


## PAIR INSTRUCTION

The board and the remote are already paired for sale, if you want to change the drive motors or other settings, follow the steps below to do the re-connecting.



- ① Press the power button 1 of the board to turn it on.
- ② Long press the board power button (b) for 5-7 seconds, after a beep, the signal light flashes to enter the pairing mode.
- ③ Turn on the remote control ④
- ④ Click the power button ७ and 🔊 button at the same time, the connection is successful after a beep.

## **CHARGE THE BOARD**

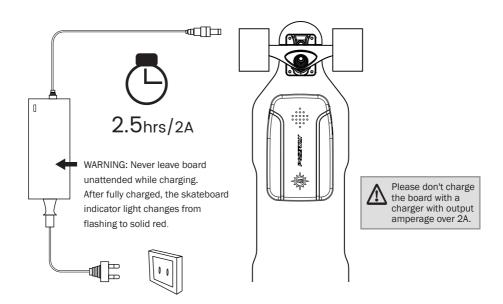

## **SAFETY INSTRUCTIONS**



The electric skateboard is not a toy, should be treated with appropriate caution. Ensure that you use the board in a safe appropriate environment, and always wear appropriate safety gear.



Safety Gear: we recommend that you wear full safety gear while riding. Please wear a suitable skateboard helmet, elbow pads, knee pads, and gloves.



Wear shoes: Flipflops or similar loose footwear are not suitable for riding wear.



The skateboard is designed for rider over 10 years old and above.



A skateboard only can be ridden by one rider each time. The maximum load of the board is 100kg. Exceeding this weight will compromise the structural integrity of the skateboard, as well as remote and function, and may cause board damage, losing control, etc.



Please observe your local traffic laws and regulations.



The board is designed to drive on flat and paved surfaces. Avoid driving on sand, gravel, mud, rugged or open ground. Do not drive on slippery ground, such as snow, ice or wet ground.



Keep fingers, hairs, and clothing away from motors, wheels and moving parts.



Riding on rainy days or waterlogged roads is not recommended.

## PRECAUTIONS FOR USE

#### RIDING OUTSIDE OF YOUR PRIVATE PROPERTY

Abide by the laws and regulations in your state or country.

Respect other drivers and pedestrians on the road.

Avoid riding in busy traffics and crowded areas.

Do not park your board in a way that blocks people or traffic, or may create a safety issue.

Cross road at designated crosswalks or signaled intersections.

When riding with other riders, keep a safe distance from each other and other transport devices.

Identify and keep a safe distance from hazards and obstacles on the road.

Do not ride your board on private property unless you have obtained permission.

#### STORAGE AND MAINTENANCE

Do frequent maintenance checks, make sure all screws are tight before riding.

Clean the bearings regularly.

Turn off board and controller when not in use.

Recharge the battery in well ventilated area.

Do not charge the battery in area with might wet the board or charging units.

Do not leave the board charging unattended. Stop using the product or charging unit if any wire is damaged.

Only use charging units supplied by us.

Do not use the board battery to power any other equipments.

## **BATTERY SAFETY**

Lithium-ion battery can explode or cause a fire if they are used incorrectly. Therefore, it is recommended to read the following instructions very carefully:

- Each time before riding the board, carefully check the battery pack and especially the protective seal. Make it is
  undamaged and intact. If in doubt, take the battery to a chemical waste disposal facility.
- Never drop the board.
- Store the board with battery inside in a dry place.
- Never expose the battery to tempreture above 100 celsius degrees.
- Only use offical board charger for charging board battery.
- · Never leave the board unattended when charging.
- Never make the board work when charging.
- Charge fully the battery before first time use. This gives it better long-term performance.



If you are not planning to use the board for about 2 months or longer, Charge it to at least 50% - 60% and charge it once a month. A lithium-ion battery that has been left empty for too long no longer be charged.

## WARRANTY

#### LIMITED WARRANTY

- We offer 6 months (180 days) warranty on parts from the date when you receive the board.
- If a defect arises during the Warranty Period, Company will , at is options :
  - 1) Send the new parts to replace the defect parts.
  - 2) Exchange the affected Products with functionally equivalent Products that are new or formed from new and/or previously used parts that are equivalent to new in performance and reliability.
- This warranty excludes damage resulting from abuse, accident, modifications, unauthorized repairs, neglect, abuse, water damage, or other causes that are not defects in materials and workmanship.
- This warranty excludes normal depletion of consumable parts (grip tape, wheels & bearings) unless due to a defect in materials or workmanship.
- This warranty excludes gifts.

#### FOR ALL RETURN AND WARRANTY SHIPPING

Please keep your shipping box. The warranty does not include damage from shipping in insufficient packaging.

The damage of skateboard caused by immersion of water will not be within the scope of warranty.



www.possway.com



After-sales service: service@possway.com

If the parameters are updated without notice, please refer to the official website.2022.03.31