


WIRELESS SPEAKER

AUM14136



USER MANUAL

Product Overview

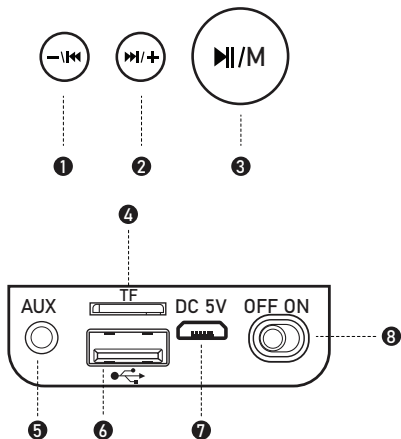

1. Tap for previous song, press and hold for reducing volume
2. Tap for next song, press and hold for increasing volume
3. Tap for play and pause, press and hold for mode change (Wireless/FM/AUX/TF Card/USB)
4. TF card slot (support 32G max). TF card not included.
5. AUX in slot
6. USB slot
7. Micro USB charging port
8. OFF/ON button

Charging The Speaker

1. Insert supplied Micro USB charging cable into the charging port ⑦ on the back of the speaker.
2. Insert the USB-A Cable into a suitable USB charger. It is recommended to use a product with a 5V charger (not included).
3. A red LED indicator will remain on while charging and the LED will switch off when fully charged.

Wireless Connection

1. Switch on the speaker ⑧.
2. Open the wireless menu on your wireless device and find “AUM14136” for pairing.
3. The speaker will beep once successfully paired to device. If a new device needs to connect to the speaker, please remove the wireless connection from the paired device.

FM Radio

1. Press M button ③ on speaker to switch to FM radio mode.
2. Press ③ to search for radio stations. The available channels will be stored after the search is completed.
3. Press ①② buttons to select radio stations.
4. For improved FM radio signal, plug the supplied Micro USB charging cable into the charging port ⑦.

Hands-Free Calling

When a phone call comes in on your connected device, press button ③ on speaker to answer or end the call. Press button ③ twice to re-dial or reject the phone call.

Wired Connection

1. Use the supplied 3.5mm audio cable to plug into AUX port ⑤ on speaker. The speaker will automatically switch to AUX mode.
2. Connect the other end of the 3.5mm audio cable to your device. You can now play audio content through the speaker.

TF Card

1. Insert TF card (not included) with music into TF card slot ④ on speaker. The speaker will automatically switch to the TF Card mode and will start playing audio content after card reading.
 - Supported music file formats: MP3, WAV
 - TF card supports maximum capacity: 32G

USB - Port

Insert a USB-A flash drive (not included) into USB-A port ⑥ on the back of the speaker. The speaker will automatically switch to USB music mode and will start playing audio content after reading the USB flash drive.

Specifications

1. Speaker Output: 3W
2. Wireless Operating Distance: 10m
3. Battery Capacity: 1200mAh
4. Input: DC 5V=0.5A

Contents

- 1 x Wireless Speaker
- 1 x Micro USB Charging Cable
- 1 x 3.5mm Audio Cable
- 1 x User Guide



Liquid Ears®

PO Box 5658 Brendale QLD Australia 4500
Customer Support 1800 812 261

www.liquidears.com

DESIGNED IN AUSTRALIA

WARNING: The included charging cable is for use with this product only.
Charging cable maximum load: 5V/0.5A

WARNING: Do not dispose of unit in fire or water. • Never attempt to disassemble and reassemble. • Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. • Check with your local authority for recycle advice. • Keep your device and all accessories out of the reach of children and animals. • Small parts may cause choking or serious injury if swallowed. • Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). • Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. • Do not allow your device to get wet — liquids can cause serious damage. • Do not handle your device with wet hands.