



TRUE WIRELESS




HPK13088, HPK13089, HPB13188, HPX13191
HPL13170, HPB13175, HPX13176



Quick Start Guide


FIRST TIME USE

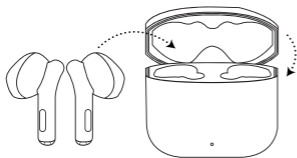

Place the buds inside the charging case and close the lid so that they will charge.


Using the charge cable supplied, please put on charge before first use.

POWER ON & CONNECT

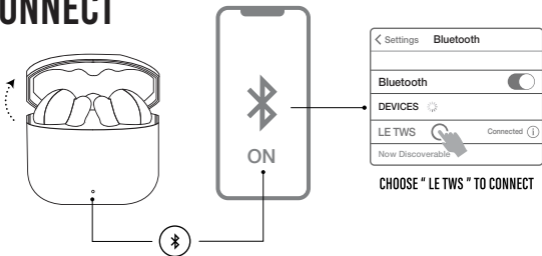


CHOOSE "LE TWS" TO CONNECT

CONNECT + SYNC

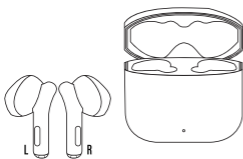


STEREO MODE

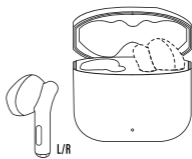

MONO MODE

CHARGING

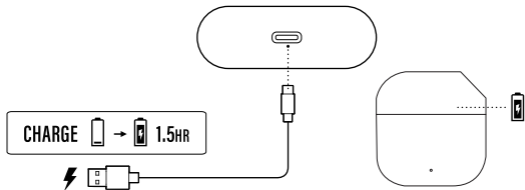

WARNING: The USB charging cable has been meticulously designed and optimized for use exclusively with the product it accompanies. Using the USB charging cable with devices other than this one could cause electrical hazards such as overheating, short-circuiting, or even damage to your device.

Controls

Dual Ear Mode	Left	Right
Play / Pause	1X	
Change EQ		1X
Volume Up	2X	
Volume Down		2X
Track Forward	Hold 1s	
Track Back		Hold 1s
Answer / End Call	2X	
Reject Call		Hold 3s
Voice Assistant	3X	
Gaming Music Mode		3X
Power On	Hold 3s	Hold 3s
Power Off	Hold 5s	Hold 5s

Single Ear Mode

Play / Pause	1X
Track Back	Hold 1s
Answer / End Call	2X
Gaming Music Mode	3X
Power On	Hold 3s
Power Off	Hold 5s

Specifications

Model: HPK13088, HPK13089

Bluetooth:	5.3
Driver Size:	13mm
Impedance:	32 Ohms
Sensitivity:	105dB \pm 3dB
Playtime:	20 Hours with case
Battery Bud / Case:	30mAh / 320mAh
Charge Time:	1Hour / 1.5 Hours
Charge Port:	USB-C
Power Supply:	5V, 1A



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by The Crest Company is under licence.



WARNING Do not dispose of unit in fire or water. • Never attempt to disassemble and reassemble. • Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. • Check with your local authority for recycle advice.

• Keep your device and all accessories out of the reach of children and animals. • Small parts may cause choking or serious injury if swallowed. • Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). • Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. • Do not allow your device to get wet—liquids can cause serious damage. • Do not handle your device with wet hands.