



LIQUID
EARS

WIRELESS NOISE CANCELLING

HPK13159



Specifications:

Driver Size: 40mm

Impedance: 32 Ohm \pm 15%

Sensitivity: 103dB \pm 3dB at 1kHz

Frequency Response: 20Hz – 20kHz

Battery Capacity: 400mAh

Play Time: 50 Hours

Charging Time: 2 Hours

Fast Charging Time: 10mins = 8 Hours play time

Standby Time: 400 Hours

Wireless Range: 15m (without obstacles)


Included:

1 x Wireless Headphone

1 x USB-C Charging Cable

1 x 3.5mm Audio Cable

1 x Instruction manual

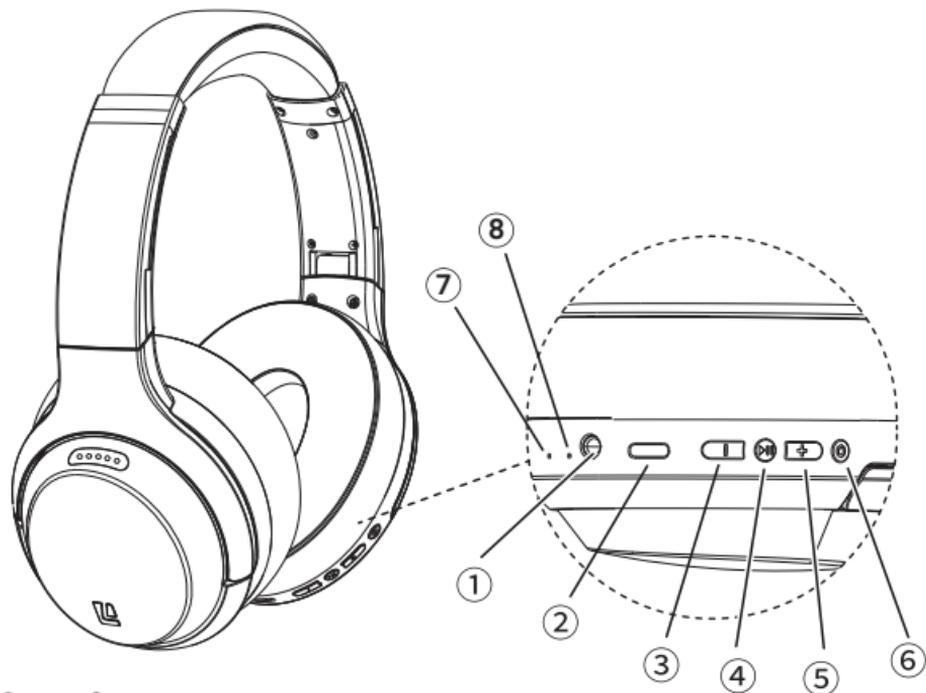

Overview:

1. 3.5mm Audio port
2. USB-C Charge port
3. Volume - / previous track
4. MF Button – Play/pause, answer/end call, voice assistant, EQ Mode switch, ON/OFF
5. Volume +, next track
6. ANC Mode change
7. Microphone
8. LED indicator

Battery Charge

This wireless headset is powered by a rechargeable Li-ion battery. When the battery is low, the headset will emit a sound to notify you to recharge it.

- Insert supplied USB charging cable into the USB port for charging.
- Connect the USB charging cable with USB-C port on the headset.
- The LED indicator turns red to battery is charging.
- The LED indicator turns off when the battery is fully charged.
- It takes approx 2 hours to fully charge the headset.

Fast Charging

When you don't have time for a full charge, the headset has a quick charge capability that provides up to 8 hours of playtime after just 10 minutes of charging.

Only charge your device with a 5V/1.5A or adapter using other adapted cables that do not damage the battery or not charge.

Wireless Pairing

- To enter pairing mode, ensure the headphone is OFF, then press and hold the power button (6) until the LED indicator (8) flashes blue and red, and a voice prompt “Pairing” can be heard.
- On your device, search for the pairing name: “LE ANC” and once selected the LED indicator will turn off and a voice prompt “Connected” can be heard.
- Once paired, the headphone will automatically re-connect to the same device when switched on again.

Wired Connection

- If you wish to use the headphone in a wired mode, simply connect the supplied 3.5mm Audio cable into the port (1) on the headphone and insert the other end into a source device.
- To use in a wired mode, you are not required to turn the headphone on, simply control the audio via the source device.

Playing Music Wirelessly

- Press MF button (4) to play music. Press again to pause music.
- Press and hold Volume+ button (5) to skip to next track.
- Press and hold Volume- button (3) to rewind track.
- Press Volume+ button (5) to increase volume, voice prompt can be heard when maximum volume is achieved.
- Press Volume- button (3) to decrease volume.

Answer/End Calls

- To answer an incoming call, press MF button (4).
- To end a call, press MF button (4).
- To reject an incoming call, press and hold MF button (4) for 2 seconds .
- The microphone (7) is located on the headphone.

Voice Assistant

- In a powered-on state and not on a call, triple press the MF button (4) to activate voice assistant.
- Once activated, any music playing will pause and you can then communicate with the assistant.

Modes – Gaming/Music

- This headphone is equipped with dual modes – gaming and music.
- To switch between modes double press the MF button (4).
- Gaming mode – has a lower latency than music mode.
- Music mode – has a higher focus on sound quality.

ANC – Active Noise Cancellation Mode

- This headphone is equipped with ANC features to enhance the audio experience. To switch between ANC ON and ANC OFF press and hold button 6 until you hear the ANC voice prompt.

Cautions

- Do not put the product in a damp, dusty, smoke or steam environment, or expose to sunlight for extended periods, do not leave in a vehicle for extended time either as it may cause malfunction.
- Use a soft dry cloth to clean the product, do not rub harshly or it may scratch the paint.
- Do not put the headphones in water, they are not waterproof.
- Continuous use at full output may damage hearing.
- Please charge headphone with supplied adaptive USB cable, charging with a fast charge cable may cause damage to the battery.



WARNING: The included charging cable is for use with this product only. Charging cable maximum load: 5V/1A

WARNING: Do not dispose of unit in fire or water. • Never attempt to disassemble and reassemble. • Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. • Check with your local authority for recycle advice.

• Keep your device and all accessories out of the reach of children and animals. • Small parts may cause choking or serious injury if swallowed. • Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). • Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. • Do not allow your device to get wet—liquids can cause serious damage. • Do not handle your device with wet hands.