

TRUE WIRELESS

EARPHONES + ACTIVE NOISE
CANCELLING


HPK13164/ HPW13165/ HPX13216



LIQUID
EARS



Product Overview & Functions:

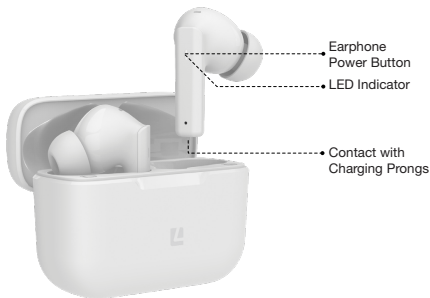

Specifications:

Bluetooth® Version	: 5.4
Driver Size	: 13mm
Charge Case Charging Time	: 1.5hr
Earphone Battery Type	: Li-polymer 3.7V/40mAh
Charge Case Battery Type	: 3.7V/300mAh
Active Noise Cancelling	: -25dB
Sensitivity	: 112dB ± 1.5dB
Frequency Response	: 20Hz – 20KHz
Impedance	: 32 Ohm
Bluetooth Range	: 10m
Standby Time	: 60 Hours
Play Time	: 20 Hours
Operation Temperature	: 0° - 45°C

How to use these Earphones:

Automatic Synchronizing

- When the earphones are removed from the case they will automatically turn ON and sync to each other, You are now ready to pair to your device. If they have previously been paired to a device, they will automatically re-connect.

Pairing with Your Devices

- Look for "LE TWS" on your device in the Bluetooth menu and select it to connect. You will hear a voice prompt "Connected", and the second earphone LED indicator will stop flashing. You are now connected.

Pairing Just One Earphone with Your Devices

- Take either one of the earphones out from the charging case, it will automatically turn on. The LED indicator on the earphone stem will flash. Look for "LE TWS" on your device in your Bluetooth menu and select it to connect. You will hear a voice prompt "Connected", and the earphone LED indicator will stop flashing. You are now connected.

Note: Earphones will automatically turn OFF if there is no operation for 3 minutes after switching on.

Battery Charging (Charging Case)

- Connect the USB-C charging cable into the socket on the charging case.
- Plug the cable into a standard USB 5V power output.
- The red LED indicator will flash while the case is

Charging and will then stay on when fully charged.

(Note: Before using the charging case for the first time, we recommend you fully charge the battery. A full charge takes around 1.5 hours).

- When fully charged, unplug the charging cable from the power socket.

Note: The charging case will stop working when the battery is low.

Earphone Charging

- When the earphones battery power is low, the LED indicator will flash red slowly and you will hear a voice prompt reminding you to recharge the device.
- Put the earphones into the charging case, ensuring that the earphones are pushed down all the way.
- If the earphones are on, they will automatically turn OFF when inserted into the case for charging.

(**Note:** The earphones come with a built-in rechargeable battery. Before using them for the first time, we recommend you fully charge the battery. A full charge takes around 1.5 hour).

- The white LED indicator on the charging case will be on when charging the earphones and the charging case LED indicator will turn off when charging is complete.
- When the earphones are removed from the case they will automatically turn ON and sync to each other. If they have previously been paired to your device, they will also automatically re-connect.

Warning: The earphones can only be used with the provided charge case.

Operation:

Note: Some features may differ pending paired device software versions and platforms. Before using the earphones for the first time, place both earphones into the supplied charging case once and then remove them. This will activate the multifunction button option.

	Left Earphone (L)	Right Earphone (R)
Play / Pause	Single Click	Single Click
Answer/ End Calls	Single Click	Single Click
Reject Incoming Calls	Press and Hold	Press and Hold
Previous Track	Double Click	
Next Track		Double Click
Volume -	Triple Click	
Volume +		Triple Click
Voice Assistant	Press and Hold for 3 Seconds	
Transparency Mode/ ANC Mode ON		Press and Hold for 2 Seconds
Transparency Mode/ ANC Mode Off		Press and Hold for 2 Seconds

Auto Power Off:

Earphones will automatically turn off if there is no operation for 3 minutes after removing from the charging case.

Read this user manual before using the product.

Keep the user manual for future reference and include it when passing product to third parties

Liquid Ears will not in any way be held responsible for injury or damage caused to persons or property arising from misuse of the product.

WARNING The USB power cable has been meticulously designed and optimized for use exclusively with the product it accompanies. Using the USB power cable with devices other than the one intended could cause electrical hazards such as overheating, short-circuiting, or even damage to your device.



Bluetooth®



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by The Crest Company is under licence. Other trademarks and trade names are those of their respective owners.

WARNING Do not dispose of unit in fire or water. • Never attempt to disassemble and reassemble. • Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. • Check with your local authority for recycle advice. • Keep your device and all accessories out of the reach of children and animals. • Small parts may cause choking or serious injury if swallowed. • Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). • Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. • Do not allow your device to get wet—liquids can cause serious damage. • Do not handle your device with wet hands.