



WIRELESS HEADPHONES

LE2WFOHBK
LE2WFOHBL



Specifications:

Bluetooth: 5.3+EDR

Driver Size: 40mm

Impedance: 32 Ohm \pm 15%

Sensitivity: 103dB \pm 3dB

Frequency Response: 20Hz – 20kHz

Battery Capacity: 500mAh

Play Time: 60 Hours

Charging Time: 2 Hours

Fast Charging: 10 Mins = 10 Hours play time

Standby Time: 300 Hours

Wireless Range: 10m (without obstacles)


Included:

1 x Wireless Headphone

1 x USB-C charging cable

1 x 3.5mm Audio cable

1 x Instruction manual

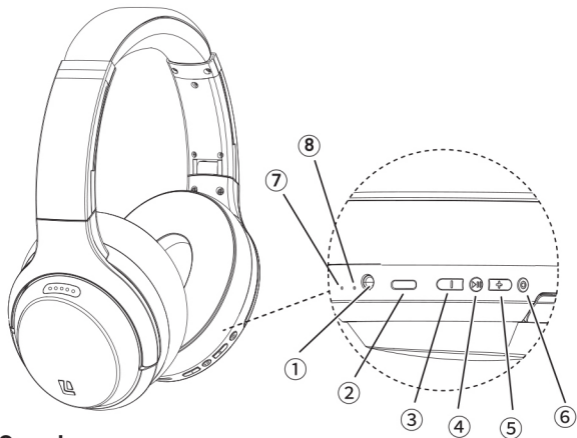

Overview:

1. 3.5mm Audio port
2. USB-C charge port
3. Volume-, rewind track
4. MF Button – play/pause, answer/end/reject call, voice assistant
5. Volume+, next track
6. Power on/off, mode change
7. Microphone
8. LED indicator

Battery Charge

This wireless headphone is powered by a rechargeable Li-ion battery. When the battery is low the headphones will emit a sound to remind you to recharge it.

- Insert supplied USB charging cable into a suitable USB port for charging.
- Connect the USB charging cable with the USB-C port on the headphone.
- The LED indicator turns red to show battery is charging.
- The LED indicator turns off when the battery is fully charged.
- It takes about 2 hours to fully charge the headphone.

Fast Charging

When you don't have time for a full charge, the LE Long Play has a quick charge capability that provides up to 10 Hours of playtime after just 10 minutes of charging.

Only charge your device with a 5V/1A adaptor. Using other adaptors may either damage the battery or not charge.

Playing Music via Bluetooth®

- Press MF button (4) to play music. Press again to pause music.
- Press and hold “Volume+” button (5) to skip to next track.
- Press and hold “Volume-“ button (3) to rewind track.
- Press “Volume+” button (5) to increase volume, voice prompt can be heard when maximum volume is achieved.
- Press “Volume-“ button (3) to decrease volume.

Answer/End Calls

- To answer an incoming call, press MF button (4).
- To end a call, press MF button (4).
- To reject an incoming call, press and hold MF button (4) for 2 seconds .
- To dial last number, double press MF button (4).
- The microphone (7) is located on the headphone.

Voice Assistant

- In a powered on state and not on a call, press and hold the MF button (2) for 2 seconds to activate your connected phone’s voice assistant.
- Once activated, any music playing will pause and you can then communicate with the assistant.

Bluetooth® Pairing

- To enter pairing mode, ensure the headphone is OFF, then press and hold the power button (6) until the LED indicator (8) flashes blue and red, and a voice prompt “Pairing Mode” can be heard.
- On your device, search for the pairing name: “LE LONG PLAY” and once selected the LED indicator will turn off and a voice prompt “Connected” can be heard.
- Once paired, the headphone will automatically connect to the same bluetooth device when switched on again.
- If you want to pair a new device to the headphone, press and hold the power button (6) until the LED indicator (8) flashes blue and red, this will take longer than for the first time pairing. Approximately 5 seconds.

Wired Connection

- If you wish to use the headphone in a wired mode, simply connect the supplied 3.5mm Audio cable into the port (1) on the headphone and insert the other end into a source device.
- To use in a wired mode, you are not required to turn the headphone on, simply control the audio via the source device.

Modes – Gaming/Music

- This headphone is equipped with dual modes – gaming and music.
- To switch between modes double press the power (6) and you will hear a voice prompt signaling which mode you are now in.
- Gaming mode – has a lower latency than music mode.
- Music mode – has a higher focus on sound quality.

Cautions

- Do not put the product in a damp, dusty, smoke or steam environment, or expose to sunlight for extended periods, do not leave in a vehicle for extended time either as it may cause malfunction.
- Use a soft dry cloth to clean the product, do not rub harshly or it may scratch the paint.
- Do not put the headphones in water, they are not waterproof.
- Continuous use at full output may damage hearing.
- Please charge headphone with supplied adaptive USB cable, charging with a fast charge cable may cause damage to the battery.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc., and any use of such marks by The Crest Company is under licence. Other trademarks and trade names are those of their respective owners.

WARNING Do not dispose of unit in fire or water. • Never attempt to disassemble and reassemble. • Waste electrical products should not be disposed of with household waste, please recycle where facilities exist. • Check with your local authority for recycle advice.

• Keep your device and all accessories out of the reach of children and animals. • Small parts may cause choking or serious injury if swallowed. • Avoid exposing your device to very cold or very hot temperatures (below 0°C or above 45°C). • Extreme temperatures can cause deforming of the device and reduce the charging capacity and life of your device. • Do not allow your device to get wet—liquids can cause serious damage. • Do not handle your device with wet hands.